



IceniCAM

Information Service

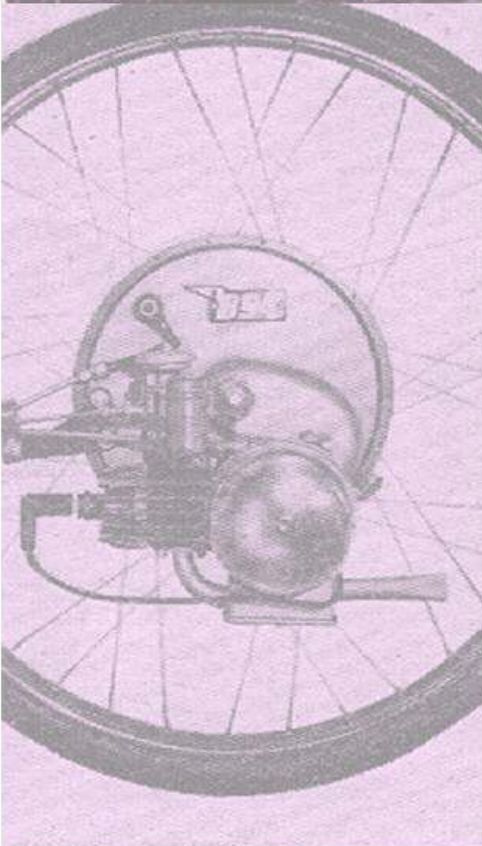

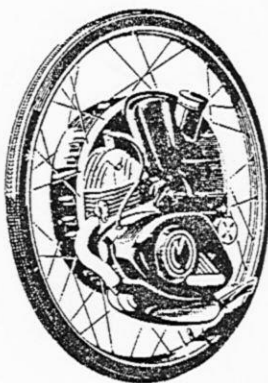

Cycle**master**

WORKSHOP MANUAL

REVISED EDITION EMBODYING ALL INFORMATION UP TO OCTOBER 31st 1952

PRICE FIVE SHILLINGS

PUBLISHED BY

CYCLEMASTER LIMITED

HEAD OFFICE

38a ST. GEORGE'S DRIVE · VICTORIA · LONDON · S.W.1 · Tel VICtoria 6312


SPARES AND SERVICE DEPOT

204-206 QUEENSTOWN ROAD · BATTERSEA · LONDON · S.W.8 · Tel MACaulay 5130

(Please address all correspondence to Head Office)

Cyclemaster

WORKSHOP MANUAL

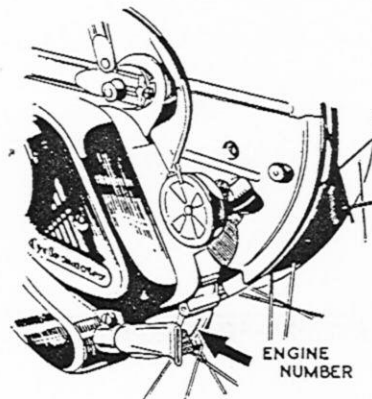


Please quote the engine number in all correspondence.

CONTENTS

	Page
General Information	2
General Arrangement Drawings ...	22 & Facing 24
To Fit Wheel	3
To Remove Wheel	5
"Exploded" Drawings	4 & 11
Free Wheel Hub... ..	6
Engine Removal	7
First Service	7
New Eadie Coaster Hub	8
Engine—Description	9
Carburettor	9
Ignition—Bantamag	12
Ignition—Wipac Series 90	13
Clutch	14
Decarbonizing	15
Engine Dismantling	15
Engine Rebuilding	16
Special tools (illustrations showing operation)	17 & 21
Special tools (full list)	24

ENGINE STAND

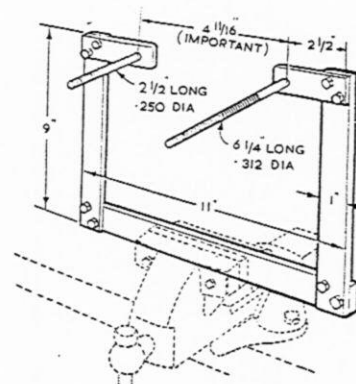

The straightforward framework shown in this illustration is indispensable for dismantling and reassembling the engine.

Without it, makeshift methods will be used: spindles will be clamped in vices, and so on.

The thread of the shorter bolt must be $\frac{1}{4}$ " B.S.F.

GENERAL INFORMATION

This Workshop Manual covers the servicing of all Cyclomaster models from the first. Modifications and improvements have been introduced from time to time and all supplements dealing with these have been embodied in this one book. The engine numbers at which these changes were introduced are given below.

The Cyclomaster engine has been described as being "built like a watch". In some ways this is true, for the object of the designers was to pack into the smallest space possible an engine that would function efficiently and indefinitely with the minimum of attention.

From time to time, however, service will be required, either routine attention such as decarbonising, or repairs as a result of accident or misuse.

Cyclomaster Ltd. recommend that whenever possible

all servicing work should be entrusted to an authorised Dealer, who has much special equipment to enable him to do the work quickly and efficiently at a reasonable charge.

Owners with mechanical knowledge, however—who wish to carry out their own servicing work—will find all necessary information clearly set out in this Manual.

All the operations are described in non-technical language, and wherever a part is referred to, its part number is given in brackets. The special tools and equipment described can be obtained from Cyclomaster Ltd.

It is of the utmost importance that the most scrupulous cleanliness should be observed whenever any work is being done upon this highly-efficient engine.

ENGINE.	WHEEL NUMBERS :—	
	1 to 73500.	73501 onwards.
Type	2-stroke	2-stroke
Bore	32 m.m.	36 m.m.
Stroke	32 m.m.	32 m.m.
Capacity	25.7 c.c.	32 c.c.
Compression Ratio	6.2 : 1	6.2 : 1
Developed b.h.p.	0.6 (approx.)	0.8 (approx.)
Speed	4500 r.p.m.	4500 r.p.m.
	at 20 m.p.h.	at 20 m.p.h.

(Engine number is stamped on underside of casting above exhaust fishtail—see illustration on page 1.)

CLUTCH.

Type :	Single plate in oil bath.
Free travel	$\frac{1}{4}$ " at tip of hand lever.
Lubricant	S.A.E. 140. (Viz. : Castrol D : Energol 140 : Esso 140 : Mobilube C : Shell Spirax C.) 50 c.c. See note 5.

FUEL SYSTEM.

Carburettor	Amal.
Fuel consumption	Approx. 230 m.p.g. with 32 c.c. engine : 250 m.p.g. with 25.7 c.c. engine.
Fuel tank capacity	2½ pints (approx.)
Mixture	Petrol and S.A.E. 30 oil (viz. : Castrol XL : Energol 30 : Essolube 30 : Mobiloil A : Double Shell). Mixture ratio 25 : 1. This ratio should never be varied.

HUB.	WHEEL NUMBERS :—	
	1 to 50000.	50001 onwards.
	Ordinary free-wheel hub.	B.S.A. New Eadie Coaster.

IGNITION SYSTEM.

WHEEL NUMBERS 1 to 7770.

Magneto	Wico-Pacy Bantamag.
Spark plug	K.L.G. 14 m.m. F.50.
Plug gap	.018 to .020 in.
Contact breaker gap	.018 in.

WHEEL NUMBERS 7771 onwards.

Magneto	Wipac (Series 90), with lighting coil.
Spark plug	K.L.G. 14 m.m. F.50.
Plug gap	.018 to .020 in.
Contact breaker gap	.018 in.

PERFORMANCE.

Climbing Capacity	6-7% (approx.) without pedal.
Maximum speed	20-25 m.p.h.

TRANSMISSION.

Chains.

TYRES.

Dunlop "Carrier."
45/50 lbs. sq. in.

RATIOS.

Engine-clutch—3.2 to 1.
Clutch-wheel—5.6 to 1.
Overall—18 to 1.

WHEEL.

Construction—see note 1.
Size—26" × 1½".
Weight—see note 4.

- 1. WHEEL CONSTRUCTION.** The Cyclomaster rim is of heavier gauge steel than is normally used for bicycle wheels, and the angle of the spokes is different. These two reasons make it undesirable to build a Cyclomaster engine into any other rim.
- 2. MULTI-SPEED GEARS.** Internal hub type multi-gears cannot be used with Cyclomaster. The external chain type can be used, but no addition of this kind is recommended.
- 3. TANDEMS.** Cyclomaster can be used with tandems, but naturally performance and economy will be affected by the greater weight.
- 4. WEIGHT OF WHEEL.** The Cyclomaster wheel complete weighs approximately 34 lbs., but the weight added to the bicycle when Cyclomaster replaces the standard wheel is only 24-28 lbs.
- 5. CLUTCH CHAMBER LUBRICANT.** The petrol filler cap holds 50 c.c. and should be used as a measure when filling an empty clutch chamber. It is most important NOT to overfill.
- 6. CORRESPONDENCE.** Dealers and Owners, in their own interests, should give the engine number in all correspondence, as it is impossible for us to take action without this information. (See illustration on page 1).

TO FIT WHEEL

The $\frac{3}{8}$ " diameter of the Cyclomaster spindle may be too great for the existing lugs in the fork. If it is, the lugs should be filed so that the spindle slips into them freely—but with the minimum of play.

When filing the lugs take an equal amount of metal off both lower edges.

Whenever possible, file the lower edges *only*, but if the top edges must be filed as well take an equal amount off each.

* * *

Generally it is necessary to open out the rear forks slightly when fitting a Cyclomaster.


In order to maintain satisfactory alignment of (a) front and rear wheels, and (b) the chain from pedals to rear wheel, the increased width of the Cyclomaster wheel has to be allowed for on the left-hand side of the machine looking towards the front.

The total width required is $4\frac{15}{16}$ ", but for the reason given above it is necessary to open out the left leg of the seat and chain stays slightly more than the other.


When the wheel is in position, check the distances between the rim (at the top) and each seat stay. They should be the same. If they are not, adjust as necessary; movement of the forks to the left will bring the rim nearer to the left-hand seat stay, and *vice-versa*.

After the forks have been opened out, the lugs must be returned to parallel with each other and with the rim of the wheel, both in the horizontal and in the vertical plane. When this has been done, proceed as below:—

1. Return the wheel into the frame. Check once again to see that the rim is still central between the seat stays.
2. Fit chain, making sure spring link is correctly assembled. See diagram at foot of next column. If of open limb type, head should face in direction of drive.
3. Position adjusters (if fitted).
4. Make sure washer each side is *outside* slotted fork.
5. Fit engine locating bracket, and connect to lug on lug on

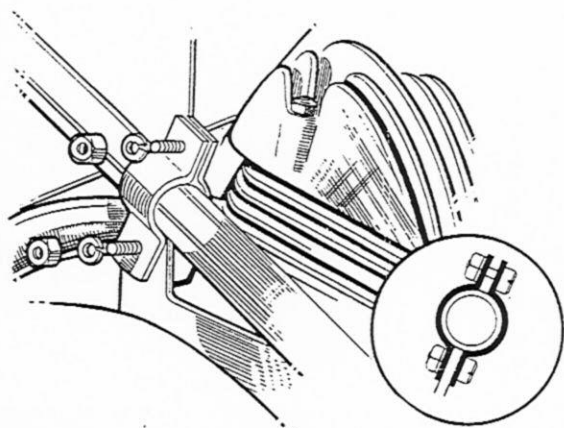


The correct fitting of the engine locating bracket is most important. Brackets for both "D" section and "O" section forks (as illustrated) are available.

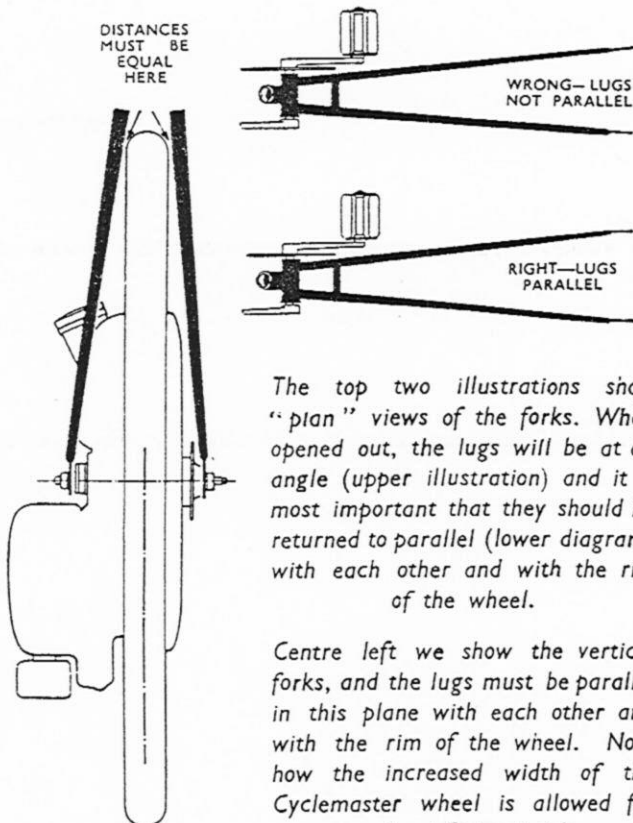

The top two illustrations show "plan" views of the forks. When opened out, the lugs will be at an angle (upper illustration) and it is most important that they should be returned to parallel (lower diagram) with each other and with the rim of the wheel.


Centre left we show the vertical forks, and the lugs must be parallel in this plane with each other and with the rim of the wheel. Note how the increased width of the Cyclomaster wheel is allowed for on the left hand side.

- Cyclomaster engine. The locating bracket will be found bolted to the lug on the engine. Feed bolt in from back, fit spring washer and nut on thread, but do not tighten. It is a good idea to put one turn of insulating tape around fork under the clip to protect the enamel.
6. Adjust tension of chain from pedal sprocket to wheel sprocket. The chain should be tighter than on an ordinary cycle. Total movement, up and down, of lower length of chain, should be no more than $\frac{1}{4}$ in.
 7. Check wheel for alignment between chain stays.
 8. Tighten hub nuts.
 9. Re-check tension of chain.
 10. Finally tighten nut of bolt securing lug to bracket.
 11. Connect mudguard stays.
 12. Connect clutch and throttle control cables.
 13. Connect spark plug lead.
 14. Connect head and tail lamp leads on models fitted with magneto embodying lighting coil.
 15. Check hub adjustment (wheels No. 50001 onwards).
 16. Check tension of chain from clutch to drum.

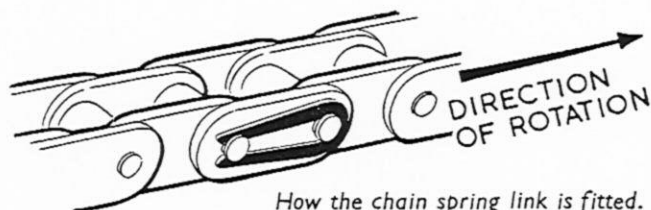


How the chain spring link is fitted.


THE AMAL CARBURETTOR

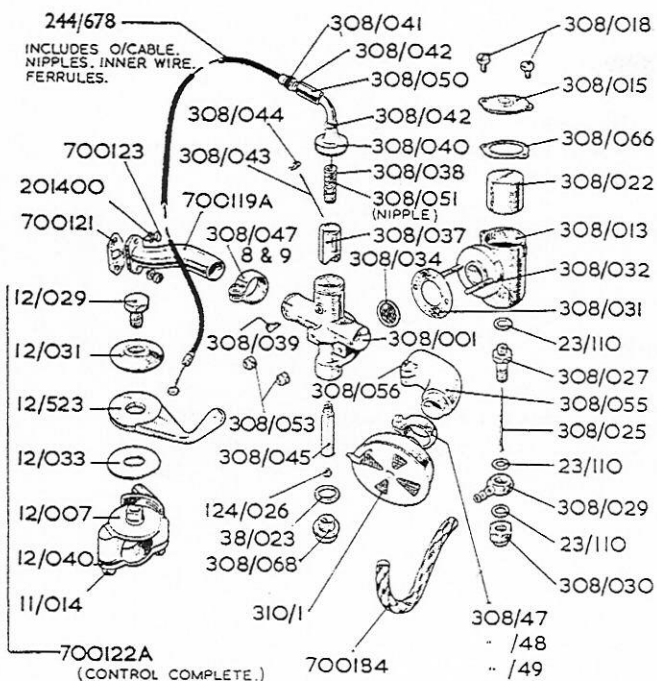


CLUTCH AND CONTROLS

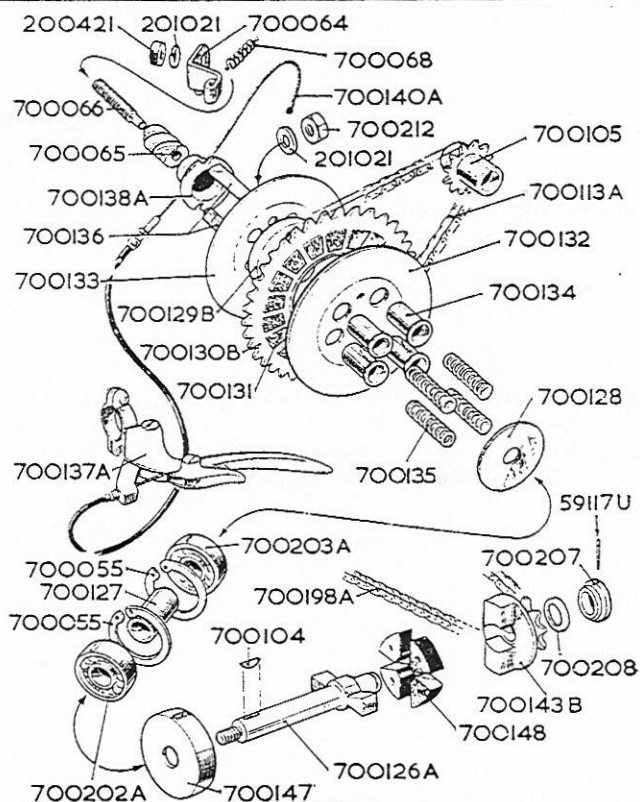

WHEELS 1 to 50000 (Free Wheel Hub)

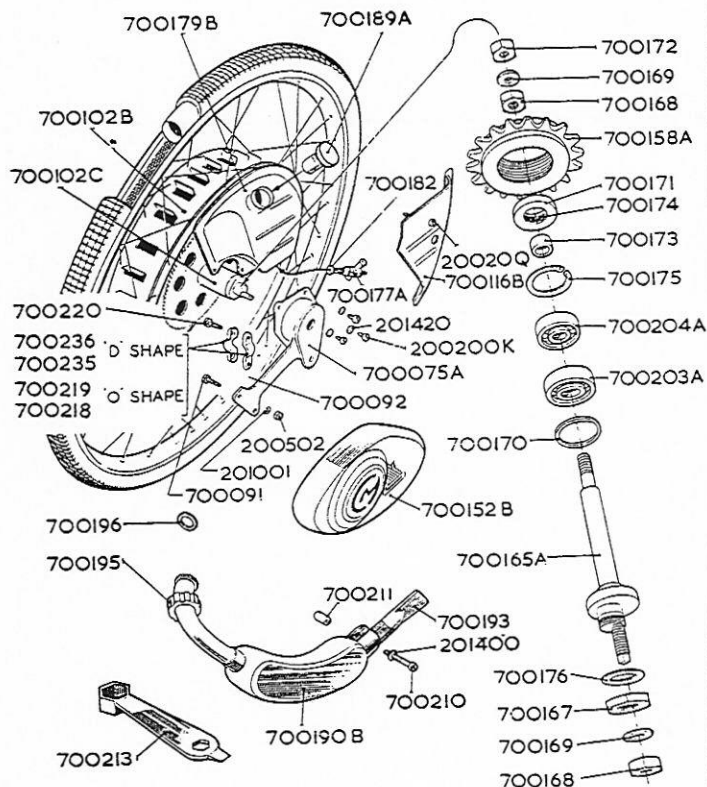


WHEELS 50001 ONWARDS (Caster Hub)

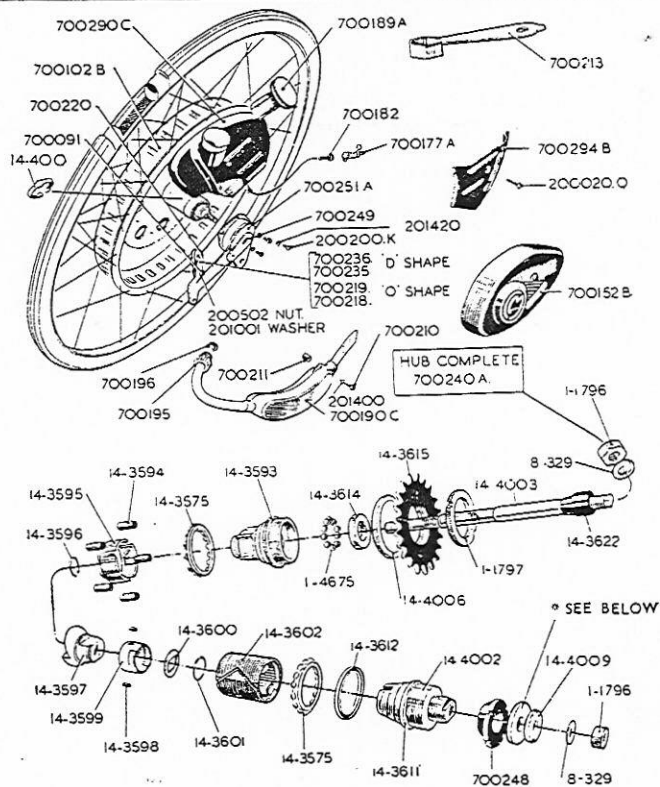

* Washer 3/32" thick, 1 1/2" outer diameter. Inner diameter .390"-.395".

TO REMOVE WHEEL

1. Move brake blocks out of the way if rim brakes are fitted.
2. See that flex to rear light (if fitted) will not be fouled as wheel is removed.
3. Release mudguard stays.
4. Free throttle control cable. Pull on free end of wire where it emerges from cable and release the end with the eye from the slot in which it rests.
5. Remove clutch control lever from handlebar.
6. Remove rubber straps that hold both cables to frame.
7. Disconnect lead from spark plug.
8. Remove chain from pedal sprocket by taking out spring link: replace link as soon as chain is off.
9. Disconnect lighting lead from push-in connector (models with lighting coil in magneto only).
10. Slacken off "D" or "O" clip which locates engine to frame. Slide clip along fork out of the way, and replace bolt, nut and washer in position.
11. Slacken hub spindle nut on each side until wheel is comfortably slack, with ample free play, but do not remove nuts. Rock wheel free of frame, and remove.

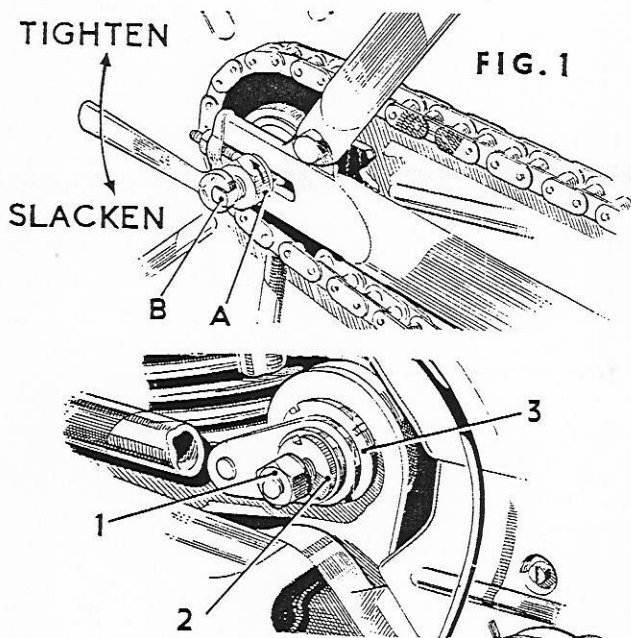

The two illustrations above show the method of adjusting the New Eadie Coaster Hub. Nut 2 is not fitted on current production wheels. Nut 3 is used only for adjusting tension of chain from clutch to drum. (See page 6).

HUB ADJUSTMENT

Wheels No. 50001 onwards (New Eadie Coaster Hub).

When the wheel leaves the factory the hub is adjusted correctly, but final adjustment may be required when the wheel is fitted to the bicycle. This check is most important.

1. Slacken off nuts 1 and 2 and nut A.

2. Using a spanner on the flats, turn spindle B (anti-clockwise to slacken, clockwise to tighten) until the wheel revolves freely but with the minimum amount of play. *If difficulty is experienced in obtaining the necessary adjustment when rotating the spindle, check that the cone at the driving end of the spindle is fully tightened against the shoulder.*

3. Tighten all nuts and check again.

Development in servicing techniques has shown that nut 2 may be omitted from the assembly and, on later models, this nut is no longer supplied. Adjustments are carried out by means of nuts 1 and A thus saving one operation. The deletion of nut 2 does, however, mean that the engine assembly has a certain amount of play until nut 1 is tightened fully, so extra care must be taken when offering the wheel to (or removing it from) the bicycle.

If nut 2 is left in position it must be tightened properly. If it is removed, or was not fitted originally all references to it may be ignored.

IMPORTANT


So that there is no possibility of riding the machine with excessive pressure on the bearings it is most important that some play can be felt. There must, however, be not more than 1/64 in. measured at the wheel rim. When testing for this play, make certain that the wheel is clear of the ground. It is impossible to assess accurately the amount of play if the weight of the bicycle is on the wheel bearings. Hub bearing adjustment must be checked as part of the first service, and whenever the wheel is re-fitted after removal.

SECONDARY CHAIN

Finally, check and if necessary adjust tension of chain from clutch to drum (see illustration and instructions on page 6).

HUB LUBRICATION

It is most important that the coaster hub should be lubricated weekly, by means of a few drops of light machine oil through the oil hole in the hub, which is covered by a spring clip. The few cases of hub brake trouble that have been brought to our notice have all been due to lack of lubrication at this point.

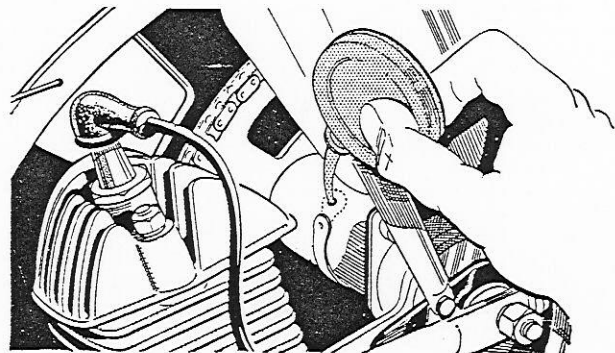

The lubrication hole in the New Eadie Coaster Hub.

WHEEL BEARINGS

Wheels No. 1 to 50000 (Free Wheel Hub) :—

These are ball journal bearings, similar to those often used in motor cars but of course smaller. They are not adjustable.

These bearings are packed with grease during assembly, and sealed against the entry of dirt and wet. They should not require attention for at least 6,000 to 8,000 miles, when they should be dismantled, cleaned and repacked. As a precaution, however, they should always be inspected when an engine is removed from the wheel for any reason. Should undue wear be suspected, proceed as follows :—

1. Remove engine from wheel (if not already out).
2. Ascertain which bearing is faulty by checking freedom of movement of spindle at each end.
3. If 700203A, first remove lock nut (700172) and distance piece (700173) from spindle.
4. Press out spindle (700165A). The ballrace should come with it.
5. Remove faulty race by tapping it off.
6. Examine felt ring (700170) ; fit new one if necessary.
7. Press on new bearing.
8. Press spindle into hub housing.
9. Replace distance piece.
10. Replace lock nut.

* * * *

11. If bearing 700204A is faulty :—
12. Remove lock nut (700172) and distance piece (700173).
13. Press out spindle (700165A).
14. Pull out felt ring (700174).
15. Remove oil retainer ring (700171) using Extractor CA 7 illustrated opposite.

16. Remove circlip (700175) with round-nosed pliers.
17. Tap out bearing (700204A) from other end.
18. Fit new bearing. Replace circlip (700175).
19. Fit new oil retainer ring (700171) if necessary. Fit new felt ring (700174) if necessary.
20. Replace spindle (700165A).
21. Re-fit distance piece (700173).
22. Refit and tighten lock nut (700172).
23. Replace engine.

FREE WHEEL LUBRICATION

Cyclomaster wheels up to and including No. 50000 had no back pedalling brake and weekly lubrication of the free-wheel through the oil hole provided is most important. With a pedal cycle the free wheel is in use for only a low percentage of the time—only, in fact, when the owner is not pedalling. With Cyclomaster, however, it is in use most of the time, since the owner pedals very seldom. The free wheel should be inspected whenever the wheel is in for service. It may be removed—when necessary—by using a small drift in the two slots alternately. The thread is *right hand*.

SPOKE ADJUSTMENT


The simplest and most effective way of checking spokes for tightness is to tap them lightly with a screwdriver. There should be a light metallic ring: a dull sound indicates slackness.

In no circumstances should spokes ever be tightened without first removing outer cover, tube and tape or the tube may be punctured in several places.


A tool for tightening the spokes may be bought at any cycle shop.

Whenever spokes are adjusted the wheel should be checked for alignment immediately after, and a careful examination of the inside of the rim should be made. Any spoke which is "proud" of its nut should be filed down before tape, tube and cover are replaced.

ADJUSTMENT OF CHAIN FROM CLUTCH TO DRUM

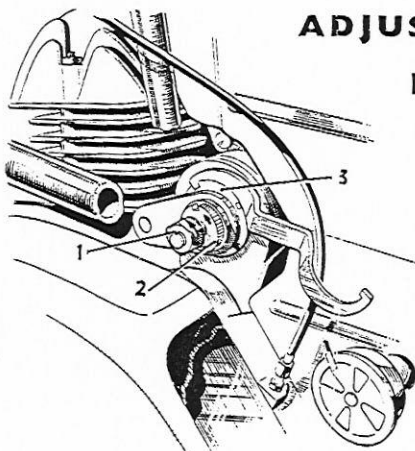

(To be checked every three months).

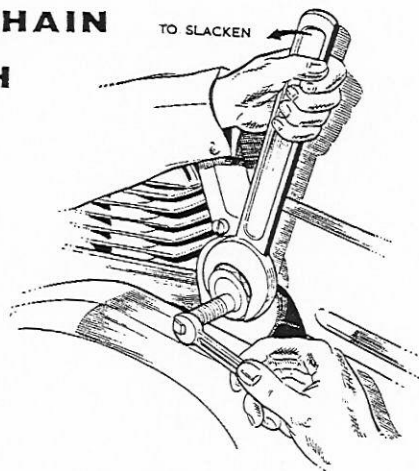

WHEELS WITH NEW EADIE COASTER HUB :

Slacken nut 1 and thin lock-nut 2 (if fitted). Using a thin C spanner (or tapping lightly with suitable drift) adjust eccentric 3 to allow not more than $\frac{1}{2}$ in. total slack in chain. Tighten nuts 2 and 1. Re-check tension.

WHEELS WITH ORDINARY HUB :

Remove wheel and undo large hexagon nut. Place spanner on square end of hub spindle and adjust to allow not more than $\frac{1}{2}$ in. total slack in chain. Hold hub spindle firm, tighten large hexagon nut, recheck.

FIRST SERVICE


After a Cyclemaster has covered approximately 150 miles, it should have an initial servicing as set out below.

1. Inspect level of oil in clutch chamber. Top up if necessary. Do not overfill. (Page 14).
2. Inspect and adjust clutch. (Page 14).
3. Check cylinder head, engine mounting and exhaust bolts. Tighten if necessary.
4. Check contact breaker points. Adjust if necessary. (Page 12 Bantamag) (Page 13 Wipac Series 90).
5. Check chain from clutch to drum. (Page 6).
6. Check wheel for alignment.
7. On wheels with New Eadie Coaster hub check and adjust hub bearings. (Page 5).
8. Inspect sparking plug. Adjust points if necessary. Examine all surfaces of plug which are exposed in combustion chamber; they should be light brown colour.

If dark: mixture is too rich or too oily. If mixture too rich, see page 12.

If surfaces are covered with pearl-like formations, engine is running too hot, and spark is probably too far retarded. Correct timing as described on page 12. (Bantamag) or page 14 (Wipac Series 90).

9. Tighten exhaust cylinder nut (700195) with engine hot.

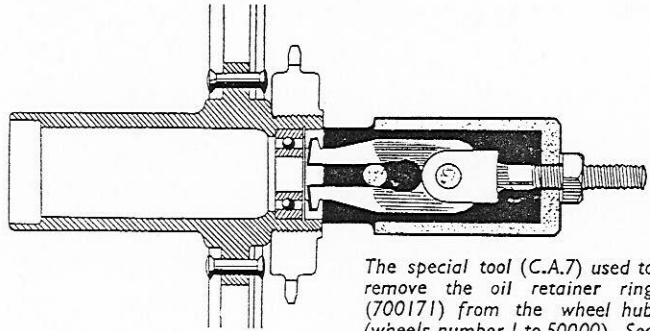

The special tool (C.A.7) used to remove the oil retainer ring (700171) from the wheel hub (wheels number 1 to 50000). See para 15 on page 6.

TO REMOVE THE ENGINE

Whenever the engine is removed, opportunity should be taken of examining chain and sprockets for wear, and also of cleaning the drum.

Wheels No. 1 to 50000 (Free Wheel Hub)

1. Remove wheel from cycle.
2. Remove air filter.
3. Remove carburettor cover plate (700116B) and "CM" cover plate.
4. With petrol tap in "off" position, disconnect flexible pipe (700184) from carburettor.
5. Remove petrol tank by removing three screws (200200K) and three spring washers (201420) and replace screws and washers in tapped holes in suspension bracket.
6. Drain tank.
7. Unscrew large hexagon nut (700167) and plain washer from hub spindle.
8. Turn square end of hub spindle until spindle is at lowest point of eccentric (this slackens chain from clutch shaft to drum).
9. Withdraw engine, lifting it clear of chain.
10. Remove engine suspension bolts (see illustration on on page 17) and place engine in special fitment illustrated on page 1, and place in vice.
11. Thoroughly clean inside of drum.
12. Examine chain and large sprocket for wear. This is unlikely to be apparent, but should signs be revealed the parts should be renewed.
13. Inspect wheel bearings.

Wheels No. 50001 onwards (Coaster Hub)

1. Remove wheel from cycle.
2. Remove air filter.
3. Remove carburettor cover plate (700294B) and "CM" cover plate.
4. With petrol tap in "off" position, disconnect flexible pipe (700184) from carburettor.
5. Remove petrol tank by removing three screws (200200K) and three spring washers (201420) and replace screws and washers in tapped holes in suspension bracket.
6. Drain tank.
7. Remove lock ring (14.4009) (if fitted) and washer, and gently lever off brake arm (700249) which is a push fit on the cone.
8. Rotate eccentric (700248) until chain from clutch-shaft to drum is at its slackest. If the engine is then rocked gently the eccentric may be withdrawn with the fingers.
9. Tilt engine slightly so that chain can be removed from clutchshaft sprocket, and remove engine.
10. Remove engine suspension bolts (see illustration on page 17) and place engine in special fitment illustrated on page 1 and place in vice.
11. Thoroughly clean inside of drum.
12. Examine chain and large sprocket for wear. This is unlikely to be apparent, but should signs be revealed the parts should be renewed.
13. Inspect wheel bearings.

NEW EADIE COASTER HUB

Wheels No. 50001 onwards

This hub requires a bedding-down period for the working parts to attain their greatest efficiency. How long depends entirely upon the way the machine is used.

FIRST STEPS

Should inadequate braking be reported, first check the hub bearings (see page 5). If these are slack, greater effort will be required to produce any given braking effect.

Check the tightness of driving sprocket (14.3615) on the driving piece (14.3593) and also the tightness of the left-hand thread-locking ring (1.1797).

If the above are all in order, there is nothing else that can be done externally, and the hub must be dismantled as detailed below.

TO DISMANTLE HUB

1. Remove engine from wheel (see page 7).
2. Holding spindle (14.4003) by flats, remove brake cone (14.4002).
3. Withdraw spindle from opposite side of wheel, taking with it the driving piece (14.3593) and retainer (14.3595).
4. Withdraw actuator (14.3597) and brake band (14.3602).
5. Gently lever off dust cover (14.3612) from end of hub shell (14.4001).
6. Lift out bearing assembly (14.3575).
7. Inspect bore of shell (14.4001). The original internal dimensions are 1.342 in. to 1.345 in. If there is wear in excess of .015 in., or if the internal surface of the shell is pitted or scored, or if bearing grooves are pitted, a new shell must be fitted.
8. It is most important that the rivets holding the hub shell to the wheel drum and driving sprocket are correctly fitted. They should never be tampered with, and if any are loose the wheel must be returned to Cycle-master Ltd., for servicing with their special equipment.
9. If examination shows the hub shell to be in good condition, the next step is to remove the spindle (14.4003) from the driving piece (14.3593).
10. Remove circlip (14.3596).
11. Withdraw roller retainer (14.3595) together with five rollers (14.3594). Examine for wear and renew if necessary.
12. Withdraw bearing assembly (14.3575). Examine for wear and renew if necessary.
13. Examine cones (14.3622 and 14.4002) for pitting in track. Look also for signs of wear on expander taper of (14.4002). Renew if necessary.
14. Using a suitable drift, drive out oil seal (14.3614).
15. Remove ten ball bearings (1.4675), examine and renew if necessary.
16. Examine all working surfaces of actuator (14.3597). Should bad wear, scoring or other deterioration be evident, fit new part.

17. Make certain that wings of retainer (14.3599) bear lightly on the inside of the brake band assembly (14.3602). Very light friction should be felt. This retainer also holds in place two rollers (14.3598) and is in turn held in position by a small washer (14.3600) and circlip (14.3601).

18. The brake band assembly (14.3602) consists of a phosphor-bronze ring slotted on one side in the form of a V. It holds together two halves of a steel bush and the rivet fitted to one half of the bush prevents rotational movement of the phosphor-bronze ring.

19. A series of grooves are cut round the outside of the phosphor-bronze ring, and when wear is such that these grooves cannot be seen, a new part must be fitted. It is necessary to replace the entire brake band assembly (14.3602).

20. The tapered surfaces at each end of the inner bore of the steel bush must be free from scoring, pitting or other visible signs of wear. It is important that the tongues which project inwards are a good fit in the brake cone (14.4002).

TO REASSEMBLE HUB

Before beginning to reassemble, bearings and working surfaces must be thoroughly cleaned and coated with a good quality light grade bearing grease.

1. Place the five rollers (14.3594) in the retainer (14.3595).
2. The bearing assembly (14.3575) should be in position on the driving piece (14.3593) with the plain end facing the sprocket. If not in position, fit it at this stage.
3. Holding the driving piece (14.3593) with the small end downwards, feed it into the roller retainer (14.3595).
4. Fit circlip (14.3596) on end of driving piece.
5. Fit a new oil seal (14.3614). Never in any circumstances use the old one again.
6. Position the ten ball bearings (1.4675) in the outer end of the driving piece.
7. Place bearing assembly (14.3575) in end of hub away from driving sprocket, *with plain side of retainer facing outwards*.
8. Fit dust cover (14.3612) so that edges are level with outer surfaces of hub.
9. Place the actuator (14.3597) into the bore of the brake band assembly (14.3602) away from the keys which lock the band on to the brake cone (14.4002).
10. Feed the above assembly into the bore of the hub, from the driving side. The end with the locking keys must go in first.
11. Place the brake cone (14.4002) into the end of the hub away from the driving sprocket. See that oil retainer (14.3611) is in position, and take care to mate the tongues in the brake band assembly with the slots in the inner end of the cone.
12. Fit the driving piece assembly (14.3593) into the driving end of the hub, rotating it slightly anti-clockwise.
13. If the bearing cone (14.3622) has been removed from the spindle (14.4003) screw it back so that it is hard

up against the shoulder at the end of the thread. This end of the spindle is threaded only on the small diameter.

14. Feed in the wheel spindle (14.4003) from the driving side, and screw it into the brake cone at the same time. The brake cone must be held against its bearing while this operation is being carried out.

15. Continue to screw spindle into cone until all bearing play has disappeared. Then slacken back half a turn pending final adjustment.

16. Place chain from clutchshaft to drum over drum sprocket.

17. Refit engine and mate chain with sprocket on clutchshaft.

18. Refit eccentric sleeve (700248) with thick side of bush on top.

19. Position brake arm (700249) with slotted hole over the flats of the brake cone and the smaller hole bearing on the pin of the engine suspension bracket.

20. Refit washer and lock ring (14.4009) on the end of the spindle. Rotate the eccentric until the tension of chain to drum is approximately correct (see page 6) and also adjust the hub bearings (page 5) before refitting the wheel. Finally, tighten lock ring hard up against brake arm (700249).

Driving sprocket (14.3615) must be fully tightened up to the dust cover (14.4006) and the driving piece (14.3593).

Locking Ring (1.1797) must be hard up against sprocket (ring has left-hand thread).

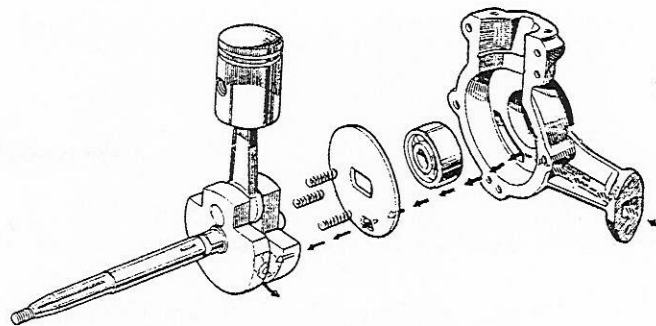


Diagram showing the path of the gas through the disc valve.

The disc valve is then in the open position, so that the depression causes a fresh charge of gas to enter the crankcase.

When the mixture in the combustion chamber is fired, the piston is driven down on the power stroke, and as it descends it uncovers the exhaust port in the cylinder wall.

The disc valve in the crankcase is now closed, and as the downward movement of the piston continues, so the fresh charge below it is compressed, and the pressure forces it, through passages in the casting, from below the piston to the combustion chamber above it, when the cycle of operation is repeated.

It will be noted that the piston does not follow the conventional two-stroke design, but has a slightly convex top. The roof of the combustion chamber and the piston top form a symmetrical shape, making for much more efficient combustion and therefore improved performance and economy.

ENGINE

GENERAL DESCRIPTION

The Cyclemaster has a two-stroke engine of special design. Crankcase, cylinder and head are separate castings, so closely finished that only one gasket is used—between crankcase and cylinder.

Connecting rod and crankshaft are supplied as a unit and must always be removed and replaced as a unit. In no circumstances should any attempt be made to separate these parts.

The crankshaft is carried in three main bearings, and is straddle-mounted.

Lubrication is provided by the oil in the fuel (25 parts petrol to 1 part oil).

METHOD OF OPERATION

The mixture produced by the carburettor (which also contains the engine lubricant) is fed to a port in the gas-tight crankcase, the entry being controlled by the disc valve illustrated. This valve requires no adjustment, and is not likely to wear or go wrong.

All other valves are merely ports in the castings opened and closed at the right moments by the reciprocal movements of the piston.

As the piston rises, it compresses the mixture in the combustion chamber above it, and at the same time creates a depression in the gas-tight crankcase below it.

CARBURETTOR

GENERAL DESCRIPTION

The engine speed is controlled by the carburettor throttle which is operated by a single lever on the handlebar. On the inlet of the carburettor there is an air filter with a strangler shutter which should be open except for starting from cold.

The Amal carburettor is of robust and efficient design, and requires no routine maintenance. It is set, at the factory, to give the maximum performance with economy, but simple adjustments are provided should there be evidence of a mixture that is either too weak or too rich.

The carburettor consists mainly of three parts:—

1. The float chamber containing a float and needle.
2. The mixing chamber containing a throttle piston, throttle needle, a needle-jet and a main jet which screws into the lower end of the needle-jet and so controls the maximum supply.
3. An air filter with strangler shutter.

The float chamber is bolted to the mixing chamber and a petrol tight joint is made by a gasket; a filter gauze is also inserted between the two.

Continued on page 10.

CARBURETTOR (cont.)

METHOD OF OPERATION

The petrol tank contains a filter, and fuel flows through this by gravity to the carburettor float chamber, where a needle valve maintains the correct level in the conventional way.

The fuel is again filtered as it passes from float chamber to jet chamber.

The depression set up in the crankcase when the piston rises causes air to rush in through the air cleaner, and over the top of the jet, where its passage induces a fine spray of liquid fuel which, mixing with the air, forms the explosive mixture.

When the throttle control lever on the cycle handle-bar is progressively opened, the control wire lifts a spring loaded throttle piston to increase the air passage through the carburettor.

Whilst the main jet controls the maximum supply of fuel, this amount is modified until the throttle is wide open, by a taper needle passing through the throttle and being held in the throttle by a spring; this taper needle works in the needle jet and its function is to limit the supply of petrol until the throttle is wide open.

The position of the needle in the throttle affects the mixture.

Five grooves are cut into the top, or thick, end of this tapered needle. A copper clip is sprung into one of these grooves, and controls the depth to which the needle is allowed to go down into the needle jet, and thus regulates the intake of fuel.

On initial setting, the copper clip is located in the middle groove, and it should not be changed unless there is definite evidence that the mixture is wrong. If the clip is put into the groove nearest the end of the needle, the mixture will be weaker but if put into the groove farthest from the end the mixture will be richer.

POSSIBLE FAULTS

Flooding. Most often caused by dirt or impurities in the fuel lodging in the needle seating, so preventing the valve closing. A bent needle will cause flooding. A most rare occurrence would be a punctured float that had become petrol-logged.

Has the float needle slipped out of the float clip?

Too rich a mixture (smoky exhaust) can be caused by the choke being closed, or dirty; by flooding or by a loose needle jet or main jet.

Too weak a mixture can be caused by an obstruction to the flow of fuel by choked filters or a choked main jet. Water getting into the fuel supply can produce this also.


TO REMOVE CARBURETTOR

1. Push fuel tap to "off" position.
2. Unscrew and remove air cleaner.
3. Remove single screw and take off carburettor cover.
4. Remove flexible fuel pipe from tank to carburettor.
5. Loosen screw clip where fuel pipe to crankcase joins carburettor and lift carburettor free, with cable still connected.

TO INSPECT FLOAT

1. Take off top of float chamber by removing two screws.
2. Remove hexagon nut at lowest point of chamber.
3. Remove gasket.
4. Remove banjo.
5. Remove gasket.
6. Now simply press down the needle gently but firmly till it springs out of the wires on the float: then pull out from the underside.
7. Thoroughly clean. Fit new float if necessary.

To re-assemble, reverse this procedure, being particularly careful to see that retaining wires on top of float are correctly located in groove in needle. The "arm" of the banjo union must be in line with the wheel spindle, as shown in illustration and care must be taken not to over-tighten.

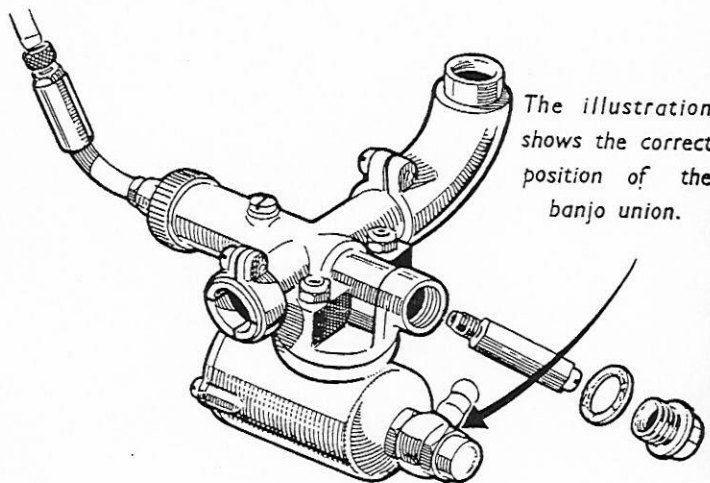

TO CLEAN JET

1. With special "CM" spanner (supplied with wheel) remove hexagon nut at lowest point of mixing chamber.
2. Unscrew jet.
3. Apply air line and blow through.

To re-assemble, reverse the procedure.

The jet should never be cleaned with wire.

Continued on page 12.

CARBURETTOR (cont.)

TO CLEAN FILTER

There are two filters which must be kept clean; one is in the fuel tank, the other between mixing chamber and float chamber. To clean the latter:—

1. Remove the two nuts on the flange of the mixing chamber.
2. Break joint between mixing chamber and float chamber.
3. Remove gasket and gauze filter.
4. Wash filter in petrol.

To replace, reverse these operations. Be sure the gasket is not damaged.

TO ADJUST MIXTURE

1. Unscrew knurled cap where the control cable enters mixing chamber.
2. Lift out spring-loaded piston and tapered needle.
3. Free end of control wire first from handlebar lever, and then from slot in piston (wire simply fits into slot, and is held by a nipple on the end, which pushes into a recess in the throttle).
4. Remove needle complete with spring.
5. On the upper (thick), end of the tapered needle will be seen five circular grooves. A copper clip fits into the centre one, and locates the needle in the carburettor piston. If the copper clip is not in the centre groove, the setting has been altered since the carburettor left the makers.

MIXTURE TOO RICH

One of the first signs of a too-rich mixture is a thin film of oil deposited on the rim of the wheel by the exhaust system, and the first thing to do is look at the choke, which may be closed, or dirty. If the choke is in order, the copper clip described in para. 5 above must be moved to a higher groove. This will allow the tapered needle to sink further into the needle jet, and so restrict the flow of fuel.

MIXTURE TOO WEAK

Move copper clip to lower groove. This will prevent the tapered needle going down so far into the jet tube, and so permit a greater flow of fuel.

TO REASSEMBLE

1. Place the long taper end of the needle into the deep recess in the throttle; it will hang there on the clip.
2. Place coil spring round the control wire.
3. Locate the wire in slot in throttle piston and pull the nipple into the recess provided. See that the coil spring fits into the throttle and holds the needle clip down.
4. Offer up piston to mixing chamber. On the outside of the mixing chamber will be seen a small grub screw, the other end of which stands slightly proud inside the mixing chamber. This proud end mates with the other vertical groove in the throttle piston—i.e. the one exactly opposite that in which the control wire is fitted.
5. Replace knurled cap and refit the wire into the control lever.

IGNITION—BANTAMAG

Wheels No. 1 to 77770

GENERAL DESCRIPTION

The Bantamag flywheel magneto, may be examined and serviced simply by removing the "CM" engine cover. The complete assembly consists of two main parts:—

- (a) The Rotor-flywheel, which is balanced statically,
- (b) The Stator.

Upon the Stator is mounted the condenser, coil and contact breaker.

All normal service work can be carried out through holes in the rotor, without removing the wheel.

If condenser or coil have to be replaced, the rotor must be removed as described later.

LUBRICATION


Lubrication is provided by means of a greased pad. This should seldom require attention, but if on inspection it appears dry, the pad should be removed and grease kneaded into it.

CONTACT BREAKER

1. Turn the rotor until the hole on top is the one with the gap setting instructions for C.C.W. rotation beside it. The points will then be fully open, and adjustment can be carried out through that hole.
2. Slacken locking screw.
3. With a screwdriver, move arm which is normally fixed, until gap is right. The maximum gap should be .018", and we recommend that the points should be set so that a .015" feeler will just pass through. After setting, tighten locking screw and re-check.

IGNITION TIMING

1. The contact points should just start to open at 24° before Top Dead Centre (T.D.C.) i.e. between $\frac{7}{8}$ " and 1" measured on the rim of the flywheel.
2. Turn rotor until elongated slots at top and bottom of stator can be seen.
3. Slacken both screws.
4. To advance spark, turn stator in a clockwise direction.
5. To retard spark, turn stator anti-clockwise.
6. Tighten screws.

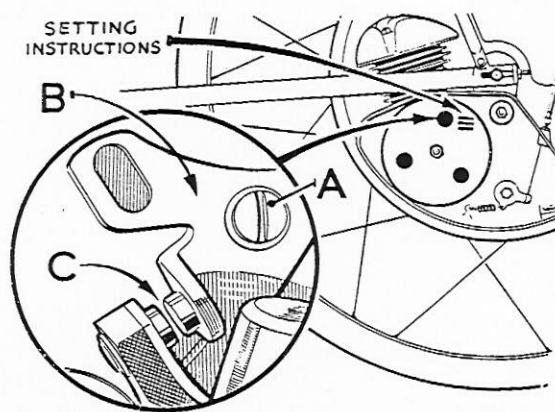

How to inspect and adjust the contact breaker points on Wheels No. 1 to 77770. To adjust the points; slacken screw A and move the plate B as necessary to open or close the points C. When correct tighten A and recheck.

PLUG LEAD CONNECTION

The hard wire from the high tension coil should fit into the centre of the plug lead in contact with the wire, but not piercing the insulation. It is most important that this connection is correctly made before fitting the insulation bush over the joint. The diameter of this bush is larger at one end and this fits into the magneto back plate. If assembled the wrong way round, excessive pressure is exerted on the connector assembly, but insufficient on the rubber grommet which grips the plastic cover of the lead. The insulation bush should be replaced if examination shows any signs of breakdown or tracking.

OTHER CONNECTIONS

All coil, condenser and point screws should be tight and make a good electrical contact. Make certain that there is sufficient clearance between the condenser connection tag and any other part of the magneto. If fitting a new coil, make certain that the laminations of the core fit squarely on the backplate. Insulation material in this joint may affect the position of the coil in relation to the magnets of the flywheel.

OPERATING CAM

The operating cam should be a good fit on the crankshaft, but as long as there is no rotational movement it will operate satisfactorily; a loose cam will, however, eventually develop this fault. Replace any loose cam with a new one.

CRANKSHAFT KEY

Careless refitting of the flywheel can displace the crankshaft key and rotation of the engine in this condition will cause irreparable damage to the coil. It is possible to detect any movement of the key by observation through one of the holes in the flywheel.

DRAINAGE HOLE

A drain hole is now drilled at the lowest point in the Cyclomaster cover, so that any excessive moisture caused by condensation or otherwise can drain off. It has also been found that this reduces any tendency for oxidization of the points. If your engine has no such drainage hole, we recommend that you should drill one; it should be $\frac{1}{8}$ " in diameter and approximately $\frac{3}{8}$ " from the inside edge of the cover, in line with the centre of the Cyclomaster nameplate.

POSSIBLE FAULTS

If there is no spark, we recommend the following sequence of operations:—

1. Examine sparking plug, without removing wheel or plug, for:—
 - (a) fitting of terminal;
 - (b) moisture on insulator, or lead.
 - (c) tightness in head: if it is slack, earthing will be poor.
 - (d) soundness of lead.

Correct any faults, and test for spark.

2. Examine contact breaker points for cleanliness, pitting, wear, gap (should be .018-in. when fully open).
3. Examine contact breaker arm for sticking on fulcrum pin

4. If still no spark, examine junction of plug lead with coil. To do this remove the engine cover bearing "CM" symbol, rotor and flywheel back plate assembly. Take out two screws holding the clamp through which the lead enters the housing, and then proceed as described under the heading "Plug Lead Connection" in the adjoining column. Replace clamp securely.

5. If still no spark, check condenser and fit new one if necessary.

IGNITION—WIPAC SERIES 90

Wheels No. 7771 onwards

From Wheel No. 7771 onwards the Bantamag magneto has been replaced by a new unit embodying a lighting coil. This is the Wipac Series 90 magneto. It is interchangeable with the Bantamag, but the complete unit (stator-assembly, rotor and crankshaft cam) must always be used together. In no circumstances should any attempt be made to use the rotor of one type with the stator of the other.

The new unit consists of two main parts.

(a) the rotor-flywheel which is balanced statically and which houses the magneto;


(b) the stator which carries the condenser, coil and contact breaker for the ignition, and the lighting coil.

The lighting lead is connected to a terminal at the back of the stator, and it protrudes from the crankcase in the form of a "push in" connector. The leads from head and tail lamps fit in this connector.

The total output is 6 volts, 8.7 watts, and bulbs which together give this capacity should be fitted to the lamps. For the headlamp we recommend a 6 volt 1 amp bulb (6 watts) and for a rear light a 6 volt .45 or .5 amp bulb (3 watts).

CONTACT BREAKER

Turn the rotor until the slots are in the "setting" position shown in the drawing—that is so that the contact breaker points are *just* visible immediately beneath the words "Set Contacts .018"". In this position the contact breaker points will be fully open, and a .015" feeler gauge should *just* pass between them. (.018" is the maximum gap.)

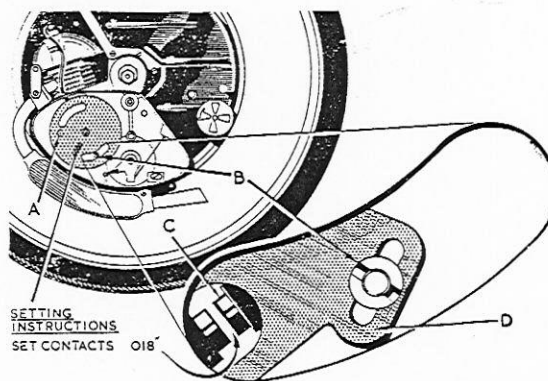

To examine and inspect the contact breaker points on Wheels No. 7771 onwards, you first remove the "CM" cover and then follow the instructions given above. A & B are the two locking nuts; C the contact breaker points and D the movable plate.

If the points need adjustment, slacken nut B (which is already visible) half a turn. Then move the rotor until nut A becomes visible. Slacken this half a turn also. Next, turn the rotor until the points are, once again, just visible beneath the words "Set Contacts .018"". Move the plate (D) until the gap between the points (C) is correct.

Tighten the two nuts B and A again in that order. It is necessary to turn the rotor when tightening the contact breaker assembly plate, but it should always be turned back to the "setting" position for the purpose of re-checking the gap after tightening the nuts.

The contact points are mounted on a plate as an assembly, and complete assemblies only are supplied. When fitting a contact plate assembly, make sure that the lower end of the pivot fits into the location hole of the breaker arm support plate before fitting the nuts.

Connections from this assembly to the condenser and coil are soldered.

The condenser can be removed without dismantling the core, by disconnecting the lead and then undoing the clamp screw. The condenser can then be withdrawn between the core and the edge of the stator.

Both lighting and ignition coils can be taken off the core. When replacing them, or fitting new ones, it is most important that they should be pushed right home and that the brass location plate should be turned over securely. The earth connection of the lighting coil is soldered to the brass plate.

The cam is held away from the crankshaft shoulder by a spring and the cam should be in contact with the inner face of the rotor hub. Care must be taken not to assemble this cam the wrong way round, or incorrect point timing will result. An arrow shows the direction of rotation. Always check this on assembly. The timing as before should be adjusted so that the points just start to open at 24° before T.D.C.

If the cam has been removed from the crankshaft, make certain when refitting it that the heel of the moving contact is clear of the side face of the cam. The rotor should not be refitted until the cam is almost in its working position, and there is no danger of breaking the moving contact by side pressure. The contact assembly plate should be moved as far as possible in an anti-clockwise direction during this operation, since this movement will lift the heel of the moving contact away from the cam.

When refitting the stator screws, care must be taken to avoid damaging the leads connecting coil and condenser to the moving contact. On a few early models of this latest magneto, it is necessary to insert the lower screw before the stator is offered up to the crankcase. On current production there is more clearance but great care is still necessary.

IGNITION TIMING

To check the timing, remove the spark plug and turn the engine until the piston is in the T.D.C. position. Mark the flywheel and crankcase in line, and then rotate the flywheel in an anti-clockwise direction for almost one complete turn. When the mark on the flywheel is about $\frac{7}{8}$ " to the right of the mark on the crankcase, the contact breaker points should just be starting to open. If adjustment is necessary proceed exactly as for Bantamag (see "Ignition Timing" on page 12).


CLUTCH

A single plate wet clutch embodying cork segments is fitted. It operates constantly in an oil bath, the level of which must be inspected once every three months.

1. Remove the "CM" cover plate.
2. In the right-hand lower corner of the casting now revealed will be seen a taper plug with a screwdriver slot in it. Remove this plug.
3. Oil should just cover the lower part of the chain which you can see through the hole; if it does not, then the clutch chamber requires topping up with best quality gear oil. Never overfill. (As a guide, oil should just show on the tip of a screwdriver blade inserted $\frac{3}{4}$ " below the face of the filler plug hole). For approved oils, see page 2.
4. Replace taper plug.
5. Replace engine cover.

ADJUSTMENT

1. When the clutch is correctly adjusted there should be \pm in. free travel at the tip of the control lever on the handlebar. An external adjuster is provided where the control cable enters the casting. Slacken lock nut, and screw adjuster upwards to reduce the free travel: downwards to increase it. When sufficient adjustment can no longer be obtained in this way turn the external adjuster to the mid-way position, and then proceed as follows:—
2. Remove the "CM" cover plate.
3. The clutch operating rocker, to which the Bowden wire is attached, will now be revealed.
4. Hold adjuster (B) with screwdriver while slackening locknut (A) with spanner.
5. To obtain less free travel, turn adjuster to RIGHT ("screw up").
6. To obtain more free travel, turn adjuster to LEFT ("unscrew").
7. Hold adjuster with screwdriver and tighten locknut.
8. Check free travel at handlebar control.
9. Replace engine cover.

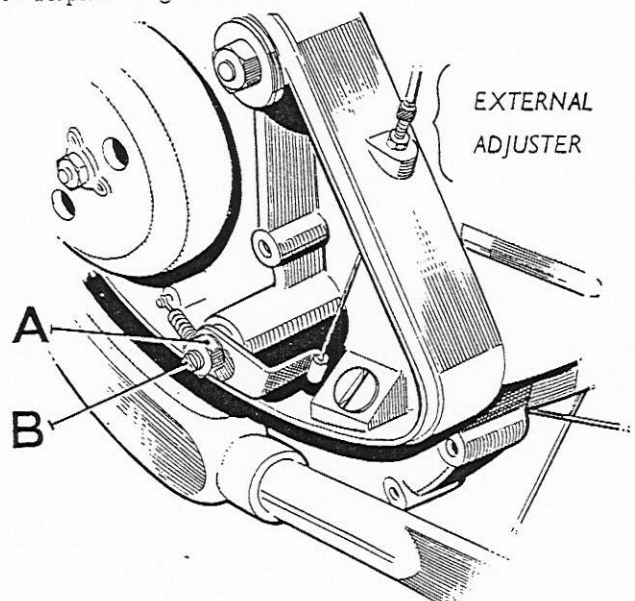

How to adjust the clutch.

DECARBONIZING

Before deciding to decarbonize, see that the exhaust fish-tail is clean. If it is blocked, free it with a piece of stiff wire and then road test the machine.

If there is still a falling off in power, decarbonizing is probably indicated. The best way to check this is to inspect the exhaust port. Unscrew the ring holding the exhaust pipe to the cylinder and remove the exhaust system. Looking into the cylinder you should see a well defined rectangle approximately $\frac{5}{8}$ " wide by $\frac{5}{16}$ " deep. Any substantial change in size or shape indicates that decarbonising is necessary.

If the port is free from carbon and yet the engine still loses power, check the ignition timing as described under "Ignition".

The decarbonizing of the Cyclemaster engine is a straightforward operation, but it cannot be done without removing the engine from the wheel, as both head and cylinder foul the wheel drum.

To remove engine, see page 7.

1. Lift cylinder head by removing three nuts and washers. There is no cylinder head gasket.
2. Scrape carbon away from head.
3. Scrape carbon from top of the piston and from inside top of cylinder beyond limit of piston travel.
4. Examine inlet and exhaust ports. If the two inlet ports are clean, the exhaust port can be scraped at this stage. If, however, the inlet ports also require scraping, the cylinder must be removed, and the logical thing to do is leave the exhaust port until the cylinder is off and then clean all three together.
5. Always blow away fragments of carbon with air line or tyre pump, being most careful to see that no carbon is blown into the inlet ports.
6. Whenever the cylinder is removed, the piston ring grooves should be cleaned.
7. To remove the cylinder, use two nuts on each stud as illustrated on page 17. Remove studs with spanner and lift cylinder straight up: do not attempt to twist it, or there will be a serious risk of breaking the piston rings. There is a paper gasket between cylinder and crankcase. A new one will be required.
8. It is important to remove carbon from the piston ring grooves. The rings are delicate, and must be eased off by using shims, evenly spaced around the piston. The crankcase should be packed with rag while cleaning the grooves, to keep out carbon.
9. It is a good idea to put supports across on top of the rags, and lower the piston down until it rests on them. This will steady it.
10. When refitting rings, make sure that they are correctly located, with the gap of each fitting over the small projection in each groove. (See special instructions on page 16).
11. When refitting exhaust system, tighten all bolts with the engine *hot*.

TO DISMANTLE THE ENGINE

1. Remove engine from wheel (page 7).
2. Remove carburettor, induction pipe (700119A) and gasket by undoing two set screws, with spring washers, securing induction pipe flange to engine casting.
3. Free clutch cable (700140A) by releasing cable from operating bracket (700064).
4. Remove clutch adjuster locknut (200421) spring washer (201021) bracket (700064); withdraw 2-start screw (700065) together with setting screw (700066) from casting.
5. Take out screw and distance piece holding exhaust tail pipe.
6. Slacken ring nut (700195) securing exhaust to cylinder. Remove, with copper asbestos washer.
7. Undo nut (200421) from end of crankshaft spindle. Remove with spring washer (201021). Use Rotor Retaining Arm C.A.11 (see page 17) for holding the magneto rotor while slackening the nut. (Bantamag only).
8. Withdraw rotor with extractor C.A.1 or C.B.1 (see page 17). Screw in the screws until the bite is felt, then turn key. Should an extractor having screws without shoulders be adapted for use, great care must be taken not to screw down too far.
9. Remove Woodruffe key (700151) from crankshaft.
10. On wheel numbers 77771 onwards, remove cam, driving key and spring.
11. Remove two setscrews (200200P) washers (700072) and spring washers (201420) securing stator, and withdraw stator, pulling spark plug lead and grommet (700058) through hole in casting. (Grommet must be removed, as lead terminal will not pass through it). Disconnect lighting lead if fitted.
12. If no work is to be done on magneto, *replace rotor over stator*.
13. On wheels number 1 to 77770, remove circlip and cam.
14. Undo and take out tapered filler plug from clutch chamber. Drain off lubricant: replace plug.
15. To remove the clutch housing casting (700059A) Clutch Housing Casting Extractor CA.2 is required. See page 17.
First, remove 6 setscrews (700056) (there are no washers) —4 inside the chamber, 2 out. There are also two locating dowels, one free; one blind: the free one (just below the tapered filler plug) must be tapped out. Then screw the threads of the extractor into the tapped holes from which you withdrew the set-screws holding the stator.
Next apply a spanner to the extractor; withdraw the casting. While doing this, watch that the clutch end thrust assembly (700138A) does not fall.
16. Lift away clutch end thrust assembly.
17. Using Ball Race Extractor C.A.3 illustrated on page 17, withdraw outer ball race (700203A) from driving end of crankshaft.
18. Undo clutch retaining locknut (200421) and spring washer (201021) using box spanner.

19. Ease off clutch assembly, crankshaft sprocket and chain (which is endless and therefore cannot be removed by undoing a link). Extreme care must be exercised not to lose the two Woodruff keys (one on crankshaft ; one on clutch spindle) or the four small springs or spring caps inserted in the face (inner) of the clutch plate.

20. Remove clutch thrust plate (700128).

21. Take out spark plug.

22. Lift cylinder head—3 nuts and washers. For de-carbonizing instructions, see page 15.

23. To remove cylinder, use two nuts on each stud (as shown on page 17) and remove studs with spanner. In lifting off cylinder, do not twist or you may break the piston rings. There is a paper gasket between cylinder and crankcase. This should always be discarded and a new one fitted.

24. With round-nosed pliers, take out two circlips (each end of gudgeon pin) and press out gudgeon pin with Piston and Gudgeon Pin Tool CB 10 or CA 10 as illustrated on page 21.

25. Lift piston free.

26. To remove rings, ease off with shims of metal under rings, evenly spaced around piston, as shown on page 17.

27. Take out five set bolts securing inner housing (700051A). With blow lamp or Bunsen burner apply heat evenly round main bearing (to just under 212°F.) Lever the casting free with screw driver—no special tool is used for this operation. Great care must be exercised to avoid damaging any part of the crankcase assembly.

28. Place Crankshaft Distance Piece CA 9 (see page 17) between cheeks of crankshaft. Put two other pieces of metal across casting faces either side of crankshaft : place in press and press out.

29. Draw remaining ball races from crankshaft, using Ball Race Extractor CA 3 and CA 4 in conjunction with Ball Race Clamp CA 5. See illustration on page 17.

30. Remove disc valve, being careful not to lose the three springs behind it. If disc is scored or worn, scrap it and fit a new one.

31. Press clutch spindle through housing. One ball race, with a distance piece, will come away with the spindle, and may be withdrawn by using Ball Race Extractor CA 3 in conjunction with Ball Race Clamp CA 5. See illustration on page 17.

32. Remove two circlips and press the other bearing from the casting.

33. Remove drive housing and examine rubber segments which give the cushioned drive : renew if there are signs of deterioration (tip segments slightly to lead in).

BEFORE RE-BUILDING THE ENGINE

PISTON CLEARANCE

The piston of the Cyclemaster is tapered towards the top, to allow for the greater expansion at the top caused by the burning gases. Clearances should be:—

Wheels No. 1 to 73500

.004" at crown ; .002" at bottom of skirt.

Wheels No. 73501 onwards

.0046" at crown ; .003" at bottom of skirt.

If wear has taken place, we do not recommend re-boring or honing, as special equipment is required for this delicate operation. A new cylinder and piston should be fitted.

PISTON RINGS

New pistons are complete with rings. Should you have to replace broken rings in service, it is most important to see that the grooves are thoroughly clean.

The new type rings are not machined with special end faces for clearing the locating peg. The ring with the plain gap is thicker, has therefore greater radial pressure. This ring replaces all previous types without alteration to the piston, but the new type piston is fitted with a longer locating pin and the original pattern ring must not be fitted to it. With the new rings the minimum clearance between locating pin and piston ring ends should be .006", and this can best be tested by fitting one ring to its mating groove, inserting the piston and ring into the bottom of the cylinder bore, rotating the piston lightly to and fro to make certain that there is a minimum of .006" clearance. The gap in this ring is cut to .067" during manufacture and this clearance gives satisfactory results. When testing the ring do not push the piston too far in the cylinder, otherwise there is a danger of fouling one of the ports.

CRANKSHAFT AND CON ROD

Crankshaft and connecting rod are supplied as an assembly, which must never be dismantled. In the unlikely event of trouble, fit a new assembly complete. To disconnect piston, remove circlips and press out gudgeon pin in the usual way or by using special Piston and Gudgeon Pin Tool CB 10 or CA 10 as shown on page 21.

There should be slight play only in the little end.

If re-bushing is indicated, press out old bush and fit new one. Drill three oil holes to correspond with those in the little end. Clean off all rough edges and burrs, and ream out to give a clearance of approximately .0005".

ASSEMBLING PISTON

Piston and con-rod may be assembled by using the same special tool as was used for removing the gudgeon pin (see page 19).

CASTINGS



(a) In no circumstances should any attempt be made to switch separate castings between different engines. Each set must always be kept *as a set*.

(b) It is of the utmost importance that every part should be scrupulously clean.


(c) It will be necessary to warm the various castings.

For this purpose there is nothing better than a supply of boiling water, in which each casting may be immersed at the appropriate moment. This will raise it to exactly the right temperature, and the heat will evaporate the water as soon as the casting is withdrawn.


The old and new piston rings compared. The new ring will fit all pistons, but the old ring cannot be fitted to current production pistons because of the increased thickness of the locating peg.

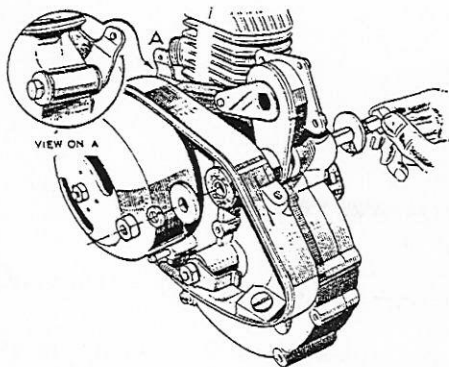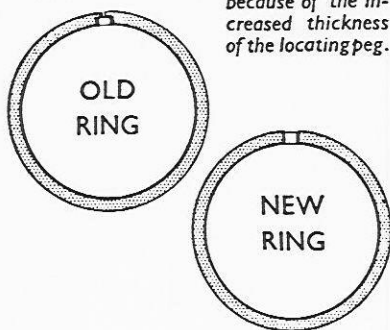


Removing the engine suspension bolts. See page 7, para 10.

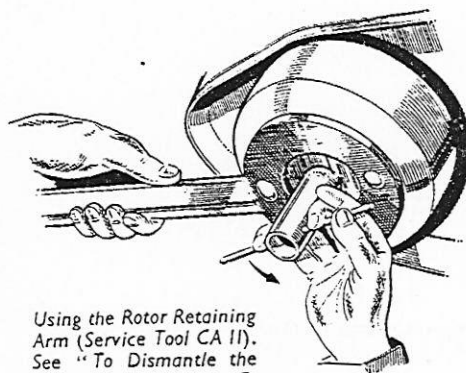


Using the Rotor Retaining Arm (Service Tool CA 11). See "To Dismantle the Engine", page 15, para 7.

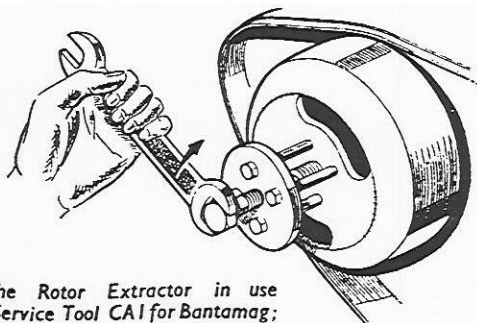


The Rotor Extractor in use (Service Tool CA 1 for Bantamag; CB 1 for Series 90 Magneto). See "To Dismantle the Engine", page 15, para 8.

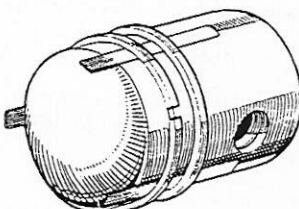


Easing off the piston rings. See page 16, para 26.

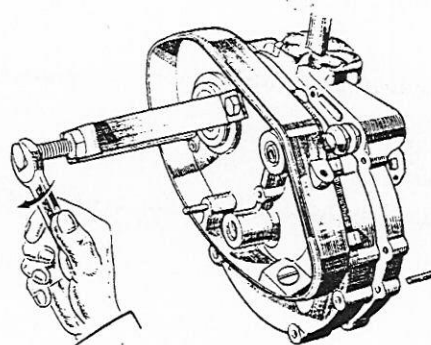

How to use the Clutch Housing Casting Extractor (Service Tool CA 2). See "To Dismantle the Engine", page 15, para 15.

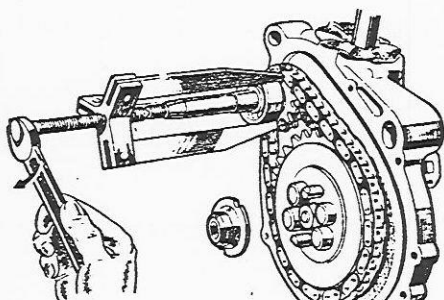


The Extractor for the outer ball race on the driving side of the crankshaft (Service Tool CA 3). See "To Dismantle the Engine", page 15, para 17.

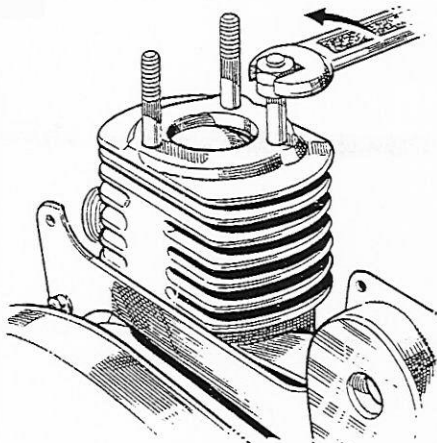


Using two nuts on the studs to withdraw them and so remove the cylinder. See page 16, para 23.


The Crankshaft Distance Piece (Service Tool CA 9) shown in use (the end of it can be seen beside the piston). This operation is described on page 16, para 28, but the tool is frequently required during dismantling and re-building.

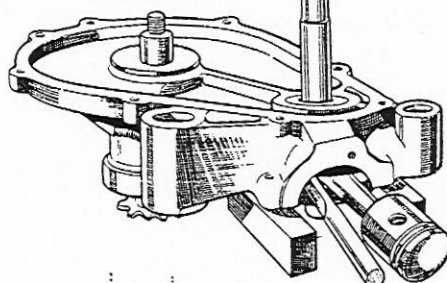


Using Extractor CA 3 in conjunction with Ball race Clamp CA 5 to remove the inner bearing from the driving side of the crankshaft. See page 16, para 29.

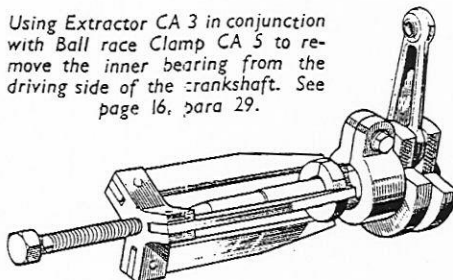

Extractor for ball race on the ve side of the crankshaft (Service Tool CA 4) shown in use with the Ball race Clamp (Service Tool CA 5). See page 16, para 29.

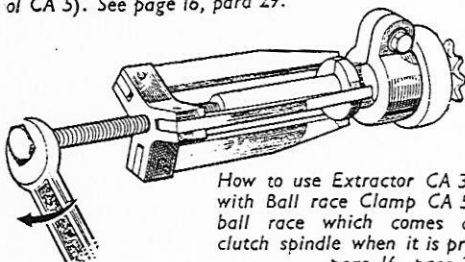

How to use Extractor CA 3 in conjunction with Ball race Clamp CA 5 to remove the ball race which comes away with the clutch spindle when it is pressed out. See page 16, para 31.

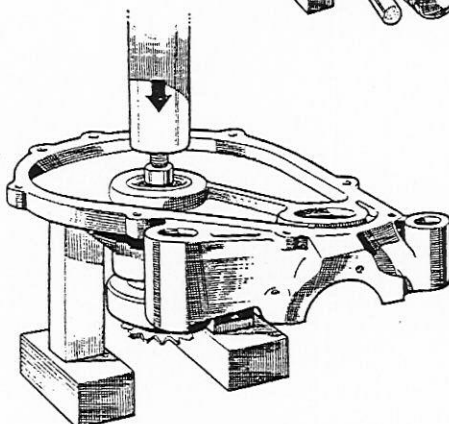

Pressing the clutch spindle from the housing. See page 16, para 31.

CLUTCH

Always examine clutch faces and corks for wear. Fit new parts as necessary. Should new corks be fitted, these must be accurately surfaced, be true with each side of the clutch wheel, and equidistant.

Stand clutch springs (700135) on surface plate and check for relative height, as unevenness will cause clutch slip. In the event of unevenness, fit four new springs—do not replace one or two only.

Place clutch assembly *without chain* back on to clutch shaft, and check for truth. Faulty alignment will cause clutch slip. If out of truth, fit new chain wheel or cork inserts.

Check fit of clutch hob inside brass bearing ring. There should be no play at all. If any is felt, renew both hob and centre plate assembly.

DISC VALVE

The disc valve should be carefully inspected: if it is scored or worn, scrap and fit a new one.

ENGINE MOUNTING BUSHES

From Engine No. A53283 (Export from 50017) the steel sleeve (700081) has been shortened slightly to allow for an alteration to the crankcase boss. The new sleeve is supplied under part No. 700268.

The new sleeve (700268) is for use in those machines where the crankcase mounting boss is machined in line with the outer end of the clutchshaft bore. The old sleeve (700081) can be used with any model.

The respective lengths of the sleeves are :—

700081 (OLD)	2.124"
700268 (NEW)	2.104"

The flexible engine mounting bushes should be examined, and if there are signs of deterioration replaced by new ones. The steel sleeve of the front one (700085) should be fitted with the flange on the drive side.

GAS AND OIL SEAL

There is an oil and gas seal in the crankcase outer case behind the short end of the crankshaft. There should be no need to remove this ever, but should it be damaged or removed accidentally, a new one must be fitted with extreme care.

Before fitting, support the *smaller* circular recess in the inner face of the casting: this is important. *Without* this support (or with support for the larger recess only) the casting may be distorted.

The seal is convex, and drops into the casting easily. It is advisable to apply a good sealing compound before inserting, taking care not to use any excess which would find its way into the main bearing.

Using a dolly with a face less concave than the seal is convex, tap lightly so that the metal of the seal bites into the softer metal of the casting.

As an additional precaution, stake with a $\frac{1}{16}$ -in. stake at four equally spaced points.

RE-BUILDING THE ENGINE

1. If piston has been removed, reassemble to con-rod as described on page 16.

2. Put three springs (700099) into recesses in crankshaft cheek.

3. Lightly oil disc valve (700101) and fit on to rectangular shoulder on short end of crankshaft. Make sure that disc moves freely.

The hole in the disc must correspond with the hole in the cheek. If disc is new, either face may go towards crankshaft. If the old one is being replaced, it must go back as it came off, as indicated by markings of wear.

4. Using Crankshaft Distance Piece CA 9 (see page 21) between cheeks of crankshaft, press lightly-oiled bearing (700203A) on to short end of shaft, against disc valve making certain that valve is correctly aligned with flats on crankshaft. Bearing must go right home to shoulder.

5. Still using distance piece, press similar bearing (lightly oiled) on to long end of crankshaft. Bearing must go right home to shoulder.

6. Fit three circlips (700055) in casting (one in bore for crankshaft; two in bore for clutch spindle).

7. If drive housing (700147) and ball race (700202A) have been removed from clutch spindle (700126A), replace the four rubbers (700148) and re-assemble. Lightly oil bearing. The oil seal side of the bearing must face the drive housing.

8. Warm inner crankcase casting (700050A) in boiling water. It is advisable to warm it thoroughly, and to

carry out operations 9 to 12 inclusive as quickly as possible, as once any part has been fitted, *the casting must not be again immersed in water*. If resilient engine mounting bushes are in position, they will not be damaged, as they are heat-proof, oil proof and petrol proof.

9. Press clutch spindle assembly into casting.

10. Turn over casting and fit distance piece (700127) to clutch spindle.

11. Lightly oil second bearing (700203A) and press into casting on to other end of clutch spindle.

12. The crankshaft assembly must now be fitted, and Distance Piece CA 9 must again be used (see page 21). The inner face of the casting should be located on stout metal supports, one each side of crankshaft, and pressure applied to the short end of the crankshaft. Make sure that the piston is in the recess formed by the half chamber, to avoid damage to con-rod. When crankshaft assembly is home, remove from press, but leave distance piece between cheeks.

13. If oil seal (700103A) was removed, press into crankcase over long end of crankshaft while casting is still warm the open end faces inwards, and the oil seal should be pressed down to circlip.

14. Fit paper gasket (700270) to face of casting. On early models no gaskets were used, but their use in service is now recommended for all engines.

15. Warm small casting (700051A) in boiling water, and with distance piece still in position between cheeks of crankshaft, fit over dowels; insert 5 screws (700056) and tighten. There are no washers. From this stage, until cylinder is fitted, great care must be taken not to damage piston or rings. In particular, the engine should not be rotated unnecessarily.

16. If resilient engine mounting bushes were removed they should now be re-fitted, complete with metal sleeves. The flanges of the metal sleeves face one another between the two larger castings—with space to take the mounting bracket later. The assembly should now be placed in the special fitment shown on page 1, and the fitment placed in a vice.

17. Lightly oil crankshaft and Woodruffe key (700104) and insert key.

18. Fit sprocket (700105) to crankshaft. (See para 27).

19. Lightly oil clutch spindle (700126A) and fit thrust plate (700128) with central shoulder towards ball race.

20. Fit Woodruffe key (700104) to clutch spindle.

21. Take clutch plate (700132) with large hole in centre and hold with convex side downwards.

22. Take clutch hob (700129B) and insert short ends of pins into holes in plate.

23. Fit clutch chain wheel with cork segments (700130B) over long ends of pins. Plate may go either way.

24. Take clutch plate (700133) with small hole in centre, and fit with convex side uppermost.

25. Turn this assembly over and insert four spring cups (700134) and four springs (700135) as illustrated on page 21.

26. Fit primary chain (700113A) to clutch sprocket.

27. Pull crankshaft sprocket out slightly (but not far enough to disengage with Woodruffe key) and fit chain to this sprocket and clutch assembly on to clutch spindle simultaneously.

28. Fit washer (201021) and thin lock nut (700212) to clutch spindle and tighten lock nut. The crankshaft sprocket *must* be pressed home simultaneously so that side pressure is not exerted on the chain.

29. Apply a light touch of grease to clutch end thrust assembly (700138A). The purpose of the grease is merely to hold the assembly while the next casting is being fitted.

30. Warm clutch housing casting (700059A).

31. Press in, from outer side of casing, grooved oil seal (700106).

32. Fit circlip (700057), same side of casting.

33. Press in ball race (700203A) from other side.

34. Fit resilient bush (700061) and metal sleeve (700082) into clutch housing outer casting. Metal sleeve goes inwards.

35. Ensure that oil seal which is staked in behind clutch control nut (700065), is still in position.

36. Fit paper gasket (700269).

37. Remove assembly from special fitment.

38. Check that clutch thrust assembly (held by grease—see 29) is still in position.

39. Insert free dowel, and using a circular metal support on the only machined surface left exposed, place

assembly in press with long end of crankshaft uppermost. (See illustration on page 21). Using blind dowel as a guide, position casting 700059A, but before pressing home insert engine suspension bracket (700251A). Press home casting and replace assembly in special fitment.

40. Secure casting with six screws (700056). Tighten in staggered fashion: there are no washers. Tap home dowel using small punch.

41. Insert clutch-operating 2-start screw (700065) and fit adjusting screw (700066).

42. Drop clutch operating bracket (700064) on to flats on 2-start screw. Secure with spring washer (201021) and lock nut (200421). The cheek support should now be removed from between cheeks of crankshaft.

43. Oil disc valve and con-rod big end very lightly: excessive oil applied at this stage will cause smoke for a considerable period after the machine is in use again.

44. Take new gasket (700070), lightly smear with grease to hold it in position, and place on crankcase.

45. Place metal support each side of con-rod and lower piston until it rests on supports.

46. Lightly oil piston rings and bottom of cylinder (700256A).

47. Make sure gaps in piston rings mate with pegs in grooves.

48. With Piston Ring Sleeve CA 8 or CB 8 (see page 21), compress rings and lower cylinder over piston, with exhaust port to left. Owing to the shape of the skirt, when the cylinder is down a certain distance the ring compressor will no longer be effective, but a small screw-driver will provide the slight pressure necessary to compress the rings the very slight amount now required. The cylinder must be pushed straight on and not "wriggled."

49. Remove metal supports, and press barrel home.

50. Insert three studs (700052). Screw down by hand, and then, using nut and lock nut, tighten with box spanner.

51. Drop on cylinder head (700071). NOTE: There is no gasket at this joint, and sealing compound should be used. Fit three washers (700072) and three nuts (700074). Tighten evenly.

52. Fit spark plug temporarily, to keep out dirt. Turn crankshaft, until keyway is uppermost.

53. On models up to and including 77770, fit cam. This has a peg to locate in keyway: the pegged end goes on last. Then press "D" circlip into retaining channel in crankshaft: the D section can register in groove either side.

54. Take magneto stator, and feed the plug lead through hole in casting—pushing grommet (700058) into casting at the same time. On models with dynamo lighting, connect lead to terminal on back of magneto.

55. Position stator on locating spigot of casting. Knead grease into lubricating wick. On wheel numbers 1 to 77770 the wick must be fitted to *trail* on the cam.

56. Insert two screws (200200P) with two spring washers (201420) and two plain washers (700072) through elongated holes in stator into tapped holes in casting. Screws should be central in elongated holes. Tighten screws most carefully (see special instructions on page 14).

57. On wheels number 77771 onwards, fit spring on to crankshaft followed by driving key and cam. Cam is marked with arrow showing direction of rotation and must be fitted accordingly.

58. Check contact breaker points (remove spark plug and put nut on end of crankshaft to turn). Replace plug.

59. Take Woodruffe key (700151) and make sure it is a fairly tight fit in the slot, as it is most important that this key does not move during operation 60.

60. Clean inside of rotor—using air line or tyre pump, and fit to crankshaft. On wheels numbered 77771 onwards take care to see that the cam is almost in its working position. If it is not, the moving contact may be damaged by side pressure. Great care must be exercised to ensure that the Woodruffe key does not move. It is advisable to use an inspection lamp and watch this key through the hole in the rotor.

61. Assemble rotor with spring washer (201021) and nut (200421). (See more detailed instruction under "Ignition.")

62. Fit spark plug. Test for compression. If there is leakage at the cylinder head face this must be trued up by scraping and lapping.

63. Insert clutch cable (700140A) through hole in casting, and screw in adjuster as far as possible. (This makes maximum adjustment at this point available.)

64. With screwdriver, turn adjuster so that clutch operating bracket (700064) is in a convenient position, and connect up cable and pull-off spring (700068). Leave final adjustment until engine is on cycle.

65. Thoroughly clean exhaust system and fishtail, and blow through with air line.

66. Fit exhaust system (700190C) to cylinder with copper asbestos washer (700196) and nut (700195). Leave slack.

67. Assemble exhaust system to casting by means of screw (700210), spring washer (201400) and distance piece (700211).

68. Tighten exhaust system all round. Re-check with engine hot.

69. Remove engine from special fitment.

70. Insert bolt (700079) with washer (700080) each end through bushes of engine suspension bracket (put into position in operation 39). Put spring washer (201021) on threaded end and start nut (200421). Leave slack.

71. Insert bolt (700084) with spring washer (201420) under head at small end of suspension bracket. Plain washer (700086) goes between mounting and suspension bracket. The steel sleeve (700085) should be fitted so that its flange is under the bolt head. These bolts (700079 and 700084) must be *fully* tightened on to the steel distance sleeves inside the rubber mounting bushes: it is not sufficient to tighten the bolts until resistance is felt. On models with New Eadie Coaster Hub bolt (700084) is longer, and is fitted with a lock nut. Bolt must be tightened hard down on to the steel sleeve before lock nut (200520) is tightened.

72. Tighten other end of suspension bracket.

73. Fit flanged induction pipe (700119A) to crankcase with gasket (700121), two spring washers (201400) and two screws (700123).

74. (Models without New Eadie Coaster Hub only). Move the spindle in the Cyclemaster wheel so that the cam is at its highest point (i.e. slackest chain position, as for removal of engine).

75. Place endless chain (700198A) on sprocket of drum.

76. Offer engine to wheel spindle and feed on slowly, picking up chain on clutch sprocket at same time.

Paras 77 to 81 inclusive apply only to models with New Eadie Coaster Hub.

77. Refit eccentric sleeve (700248) with thick side of bush to top.

78. Position brake arm (700249) with slotted hole over the flats of the brake cone and the smaller hole bearing on the pin of the engine suspension bracket.

79. Refit washer and lock ring (14.4009) (if fitted) on the end of the spindle.

80. Adjust chain from clutchshaft to drum by means of eccentric. Total up-and-down movement should be $\frac{1}{2}$ in.

81. Tighten lock ring (14.4009) (if fitted) hard up against brake arm (700249).

Paras 82 and 83 apply only to models without New Eadie Coaster Hub.

82. Fit plain washer and large hexagon nut (700167).

83. Hold square end of spindle with spanner, and tighten hexagon nut as far as possible. Then slacken off sufficiently to adjust chain by turning spindle to move eccentric. There should be a total movement of $\frac{1}{2}$ in. When correct, tighten hexagon nut (still holding spindle) and then re-check tension.

84. Fit petrol tank with three screws (200200K) and three spring washers (201420). Screws go into tapped holes in suspension bracket. Check that tank does not foul drum.

85. Fit carburettor to induction pipe. A perfect fit here is essential. Should it foul the petrol tank, slacken tank mounting screws and adjust: if necessary the holes in the tank flange may be elongated.

86. Fit flexible pipe (700184) from tank to carburettor. Make sure banjo nipple is in line with the wheel spindle.

87. Fit carburettor cover plate (700294B) with screw (200020Q).

88. Fit air cleaner.

89. Fit wheel to cycle. Connect clutch and throttle controls.

90. Adjust chain from clutch to drum (see page 6).

91. Adjust clutch (see page 14).

92. Remove tapered filler plug and add clutch chamber lubricant, using the petrol filler cap as a measure. This chamber *must not* be overfilled.


93. Put small supply of petrol in tank and start engine.

94. Check action of clutch.


95. Stop engine and fit "CM" plate.

96. Check hub bearing adjustment on models with Eadie Coaster Hub. See page 5.



97. Road test.

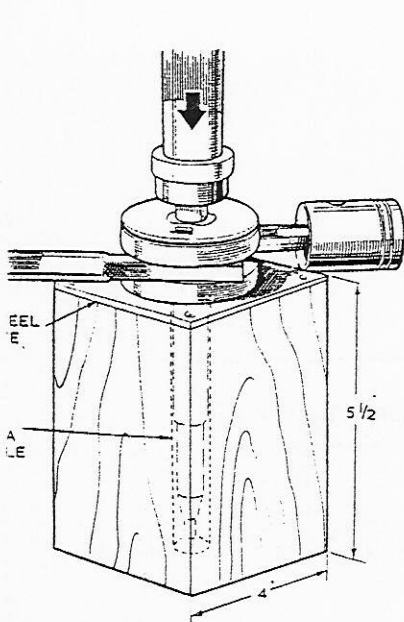


Pressing the bearings on to the short and long ends of the crankshaft. See page 18, paras. 4 and 5. Note use of Distance Piece (Service Tool CA 9) in each instance.

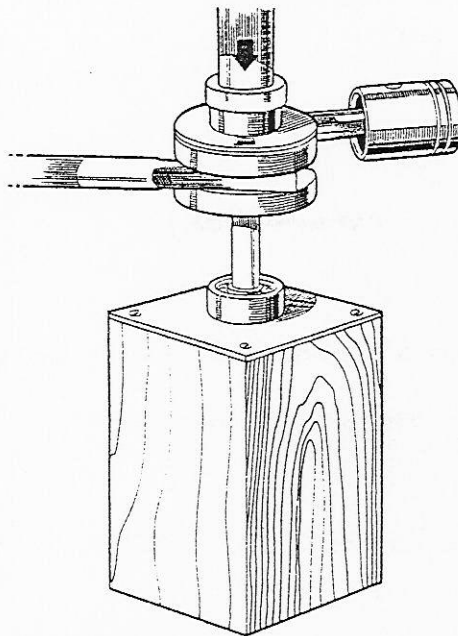


Fitting the crankshaft assembly—again with the use of Distance Piece CA 9. See page 18, para. 12.

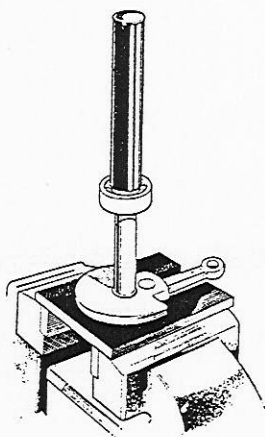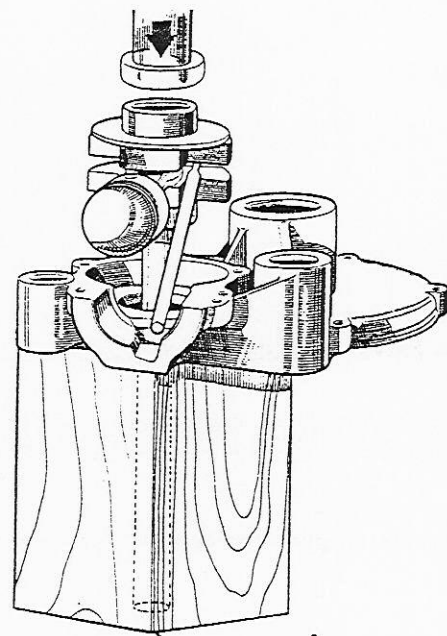



Alternative method of fitting inner ballraces to the shaft if no suitable press is available. The tools shown are CA 13 and CA 14.

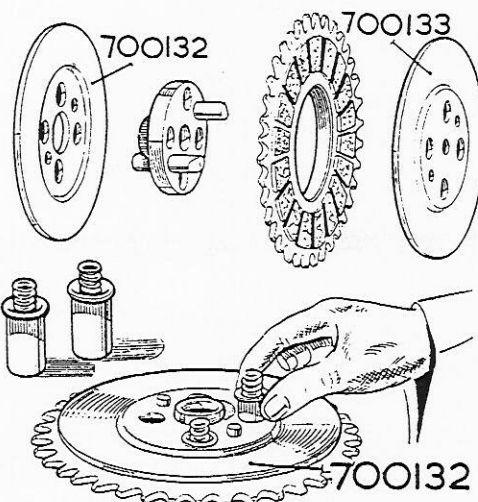


The correct way to assemble the clutch. See page 19, paras. 21 to 25.

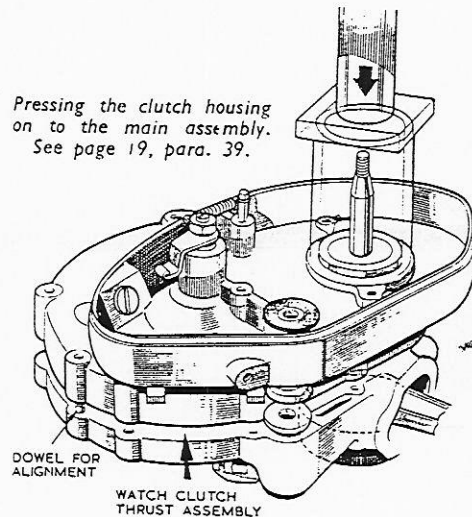

Pressing the clutch housing on to the main assembly. See page 19, para. 39.

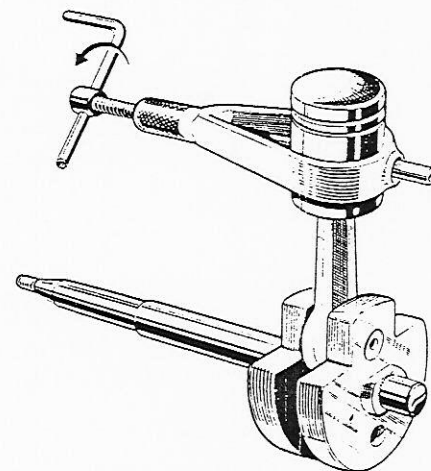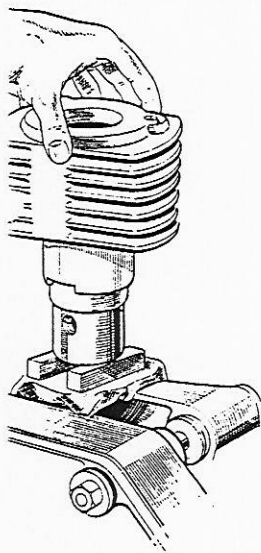


How the Piston and Gudgeon Pin Tool CA 10 is used for extracting the Gudgeon Pin from 25.7 cc. engine piston. See page 16, para. 24. CB 10 is an alternative tool which fits both pistons.

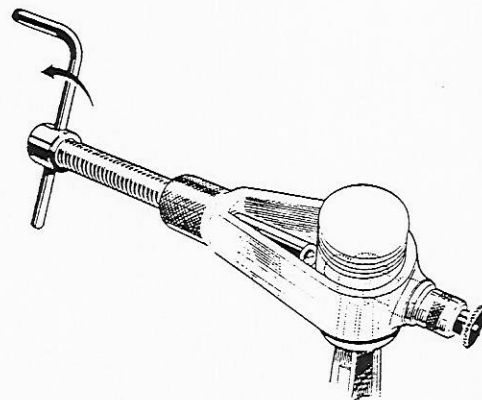

The locating fitment shown is supplied with the Piston and Gudgeon Pin Tool (CA 10 is illustrated) for use when refitting piston to con rod. The pin of the fitment serves as a mandrel to locate the little end in position, and its length is such that it serves as a stop to prevent further movement when the gudgeon pin is properly home. CB 10 is an alternative tool which fits both pistons. See "Before Re-building the Engine", page 16.

of the Piston Ring Sleeve
Tool CA 8 for 25.7 cc.
CB 8 for 32 cc engines).
See page 19, para. 48.


WHEEL AND SPINDLE (General Arrangement)

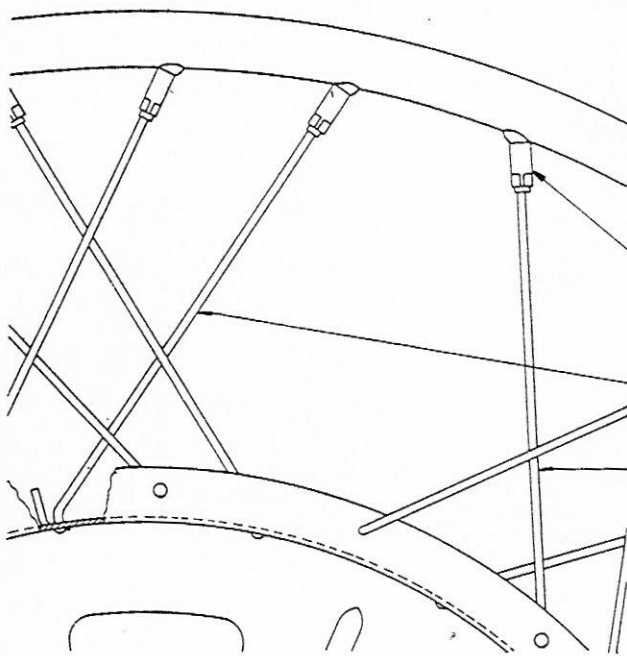

- 700090 RIM
- 700201 NIPPLE
- 700163 SPOKE
- 700162 SPOKE

The drawing on the right shows a wheel drum with free-wheel hub, as fitted to wheels No. 1 to 50000. Details of the New Eadie Coaster Hub (back-peddalling brake) as fitted to wheels No. 50001 onwards are given below.

- 1-1796. NUT.
- 8-329. WASHER.
- WASHER.
- 700249. BRAKE ARM.
- SUSPENSION BRKT.
- 14-4002. BRAKE CONE.
- 14-3599. RETAINER.
- 14-3602. BRAKE BAND.
- 14-3595. RETAINER.
- 14-3594. ROLLER.
- 14-4006. DUST COVER.
- 1-1797. LOCK RING.
- 14-3593. DRIVING PIECE.
- 14-3622. CONE.
- 14-4003. SPINDLE.
- NUT. 14-4009
- 700248. ECCENTRIC.
- 14-3611. DUST COVER.
- 14-3612.
- 14-3575. BEARING ASS'Y.
- 14-3598. ROLLER.
- 14-3597. ACTUATOR.
- 14-3596. CIRCLIP.
- 14-4001 HUB SHELL.
- 14-3615. SPROCKET.
- 1-4675. BALLS. 10.
- 14-3614. OIL SEAL.

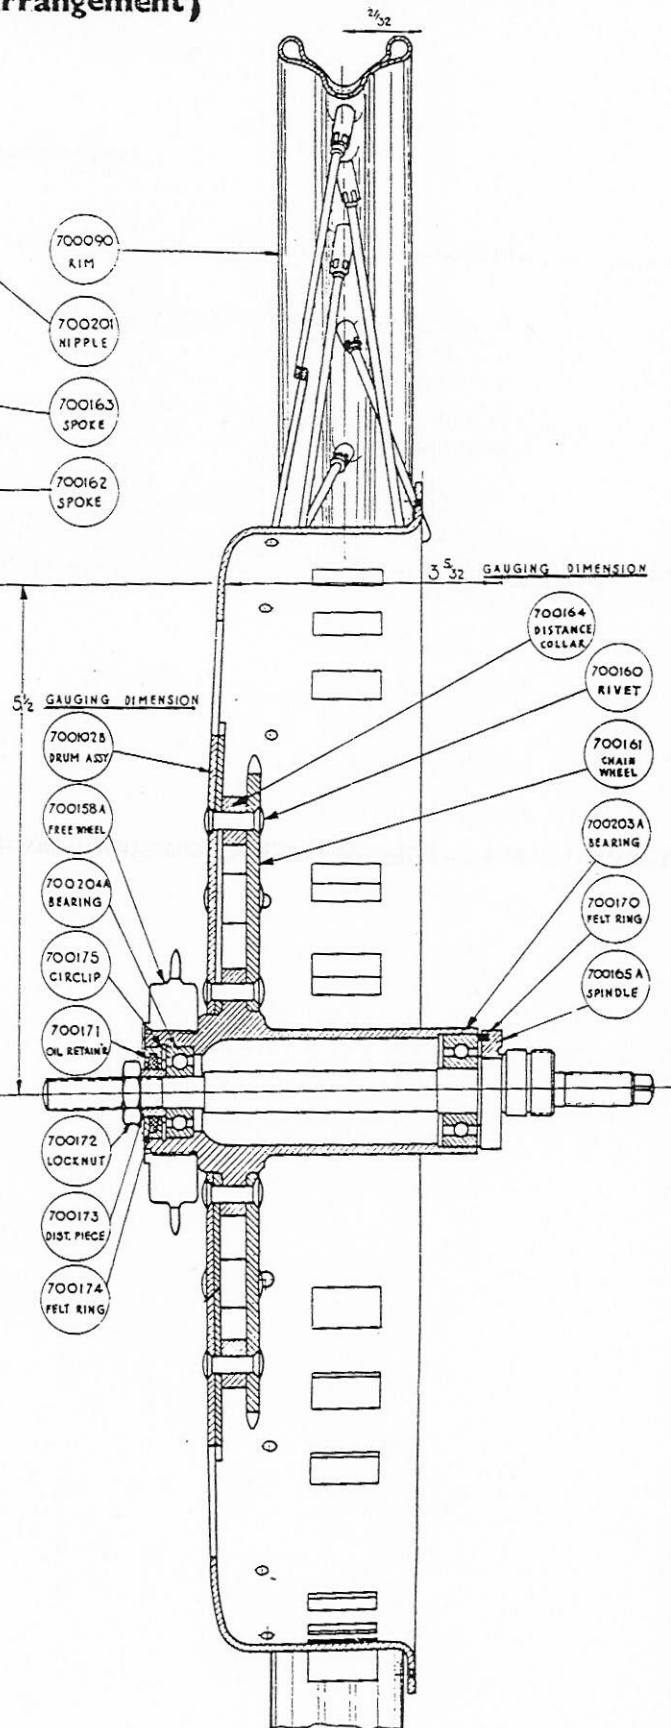

- 700164 DISTANCE COLLAR.
- 700160 RIVET.
- 700161 CHAIN WHEEL.
- 700203A BEARING.
- 700170 FELT RING.
- 700165A SPINDLE.
- 5 3/2 GAUGING DIMENSION
- 700107B DRUM ASSY.
- 700158A FREE WHEEL.
- 700204A BEARING.
- 700175 CIRCLIP.
- 700171 OIL RETAINER.
- 700172 LOCKNUT.
- 700173 DIST. PIECE.
- 700174 FELT RING.
- 5 1/2 GAUGING DIMENSION

INDEX

	Page		Page
CARBURETTOR		FREE WHEEL	
Description	9	Bearings	6
Exploded Drawing	4	Drawings	4, 22
Float	10	Lubrication	6
Jet	10	FUEL SYSTEM	
Removal of Carburettor	10	Mixture Ratio	2
Re-assembly	12	Tank capacity	2
CHAIN ADJUSTMENT		GAS AND OIL SEAL	18
Clutch to Drum	6	GENERAL ARRANGEMENT DRAWINGS 22, and	
Pedals to Wheel	3	facing 24	
Spring link fitting	3	GENERAL INFORMATION	2
CLUTCH		HUB	
Adjustment	14	Free wheel	6
Exploded Drawing	4	Eadie Coaster	5
Description	14	IGNITION	
Free Travel	2	Bantamag	12
Inspection	18	Exploded drawing of above	11
Lubricant	2	Wipac Series 90	13
CRANKSHAFT, PISTON and CON-ROD		Exploded drawing of above	11
Exploded Drawing	11	Contact breaker gap	12, 13
General Servicing Information	16	Spark plug gap	2
CYLINDER and CRANKCASE		Timing	12, 14
Exploded Drawing	11	MULTI-SPEED GEARS	2
DECARBONIZING	15	PERFORMANCE	2
EADIE COASTER HUB		PISTON	
Adjustment	5	Assembling	16
Assembling	8	Clearance	16
Dismantling	8	Exploded drawing (with crankshaft and con-rod)	11
Drawings	4, 22	Removal from con-rod	16
Lubrication	5	PISTON RINGS	16
ENGINE		RATIOS	
Dismantling	15	Compression	2
Exploded drawings	11	Mixture	2
Gas and oil Seal	18	Transmission	2
General description	9	REPLACEMENT PARTS	24
Location Bracket (illustration)	3	SPARKING PLUG	2
Mounting Bushes	18	Plug lead connection	13
Number—Location of	1	SPOKE ADJUSTMENT	6
Rebuilding	16	TANDEMS	2
Removal	7	TOOLS—Service	
Stand for holding	1	Drawings showing use	7, 17, 21
EXPLODED DRAWINGS		List	24
Carburettor	4	TYRES	2
Clutch and controls	4	WHEEL	
Cylinder and crankcase	11	Bearings (Eadie Coaster hub)	5
Ignition (Bantamag)	11	Bearings (Free wheel hub)	6
Ignition (Wipac Series 90)	11	Construction	2
Piston, con-rod, crankshaft	11	Exploded drawings	4
Wheel with free wheel hub	4	Fitting	3
Wheel with Eadie Coaster hub	4	General Arrangement Drawings	22, and facing 24
FIRST SERVICE	7	Removing	5
FORKS		Size and Weight	2
Opening out	3		

SERVICE TOOLS

Cyclomaster can be maintained, and ordinary repairs carried out, with no other tools than those which most owners already have about the house, together with the special spanner supplied with the wheels.

For overhaul, and other work which involves partial or complete dismantling, certain special tools are required. These have been designed and made in conjunction with Cyclomaster engineers, and their use is described and illustrated in this Manual. Where a page reference is given in the list below, it means that an illustration will be found on that page. The other tools may not be absolutely necessary, but their use will reduce the time required for certain work.

Tool No.	Description	Retail Price £ s. d.	Packing & Postage
CA 1	Rotor Extractor (Bantamag) (Page 17)	10 6	6d.
CB 1	Rotor Extractor (Series 90 Magneto) (Page 17)	5 0	6d.
CA 2	Clutch Housing Casting Extractor (Page 17)	9 5	9d.
CA 3	Ball Race Extractor (Driving Side of Crankshaft) (Page 17)	17 10	9d.
CA 4	Ball Race Extractor (Valve Side of Crankshaft) (Page 17)	17 2	9d.
CA 5	Ball Race Clamp (For use with CA 3 & CA 4) (Page 17)	9 5	6d.
CA 7	Oil Retainer Extractor (Wheels Nos. 1 to 50000) (Page 7)	1 4 10	9d.
CA 8	Piston Ring Sleeve (32 cc. engine) (Page 21)	6 6	6d.
CB 8	Piston Ring Sleeve (25.7 cc. engine) (Page 21)	6 6	6d.
CA 9	Crankshaft Distance Piece (Page 17)	1 9	3d.
CA 10	Piston and Gudgeon Pin Tool (25.7 cc. engine) (Page 21)	15 4	9d.
CB 10	Piston and Gudgeon Pin Tool (Both pistons) (Page 21)	16 6	9d.
CA 11	Rotor Retaining Arm (Bantamag) (Page 17)	7 6	9d.
CA 12	Magneto Cam Remover (Bantamag)	13 3	6d.
CA 13	Piston Rest and Crankshaft Support (Page 21)	5 8	6d.
CA 14	Ball Race Fitting Tube (Page 21)	2 2	6d.
CA 15	Chain Adjusting Key (Wheels Nos. 1 to 50000)	2 11	6d.
CA 16	Exhaust Nut Spanner	10 11	9d.
O.B.A. Spanner	(Cylinder Head Nut and Front Engine Mounting Bolt)		
CA 17	Workshop Pattern (Britool)	11 9	6d.
CA 18	Owner's Tool Kit Pattern (C.M.G.)	3 9	6d.
CA 19	Sparking Plug Spanner	1 9	6d.
CA 20	Tyre Valve Adaptor	4	3d.

(We regret that owing to general conditions, all prices must be regarded as subject to variation without notice).

REPLACEMENT PARTS

Cyclomaster owners are advised, in their own interests, to see that when replacements are required, only genuine Cyclomaster Parts are fitted. These parts are made to the same drawings, from the same materials, on the same machines as the parts used to build the original wheel. They are subjected to the same severe inspections and are therefore identical in specification and quality. Genuine Parts can be easily obtained from any of over a thousand Cyclomaster Dealers, and they are so reasonable in price that it is not worth the risk of trying to "make do" with anything else.

ALWAYS GIVE THE ENGINE NUMBER (See Page 1) WHEN ORDERING PARTS OR WRITING

Cyclomaster


Address for all correspondence :—

CYCLOMASTER LIMITED

38a, ST. GEORGE'S DRIVE, VICTORIA, LONDON, S.W.1

Telephone VICToria 6312

This fully-detailed General Arrangement Drawing of the complete Cyclometer is included for the benefit of those who wish to study a picture of the unit as a whole, and it applies almost without modification to the first 500001 wheels made. Improvements which have been made since the first 500001 wheels were made are indicated by the letter "B" in the New Eagle Coaster Hub, new magnets with lighting set, larger sprockets, and so on) have led to changes of detail and part numbers. All such improvements are described in the appropriate sections of this Manual, together with new part numbers and illustrations where necessary.

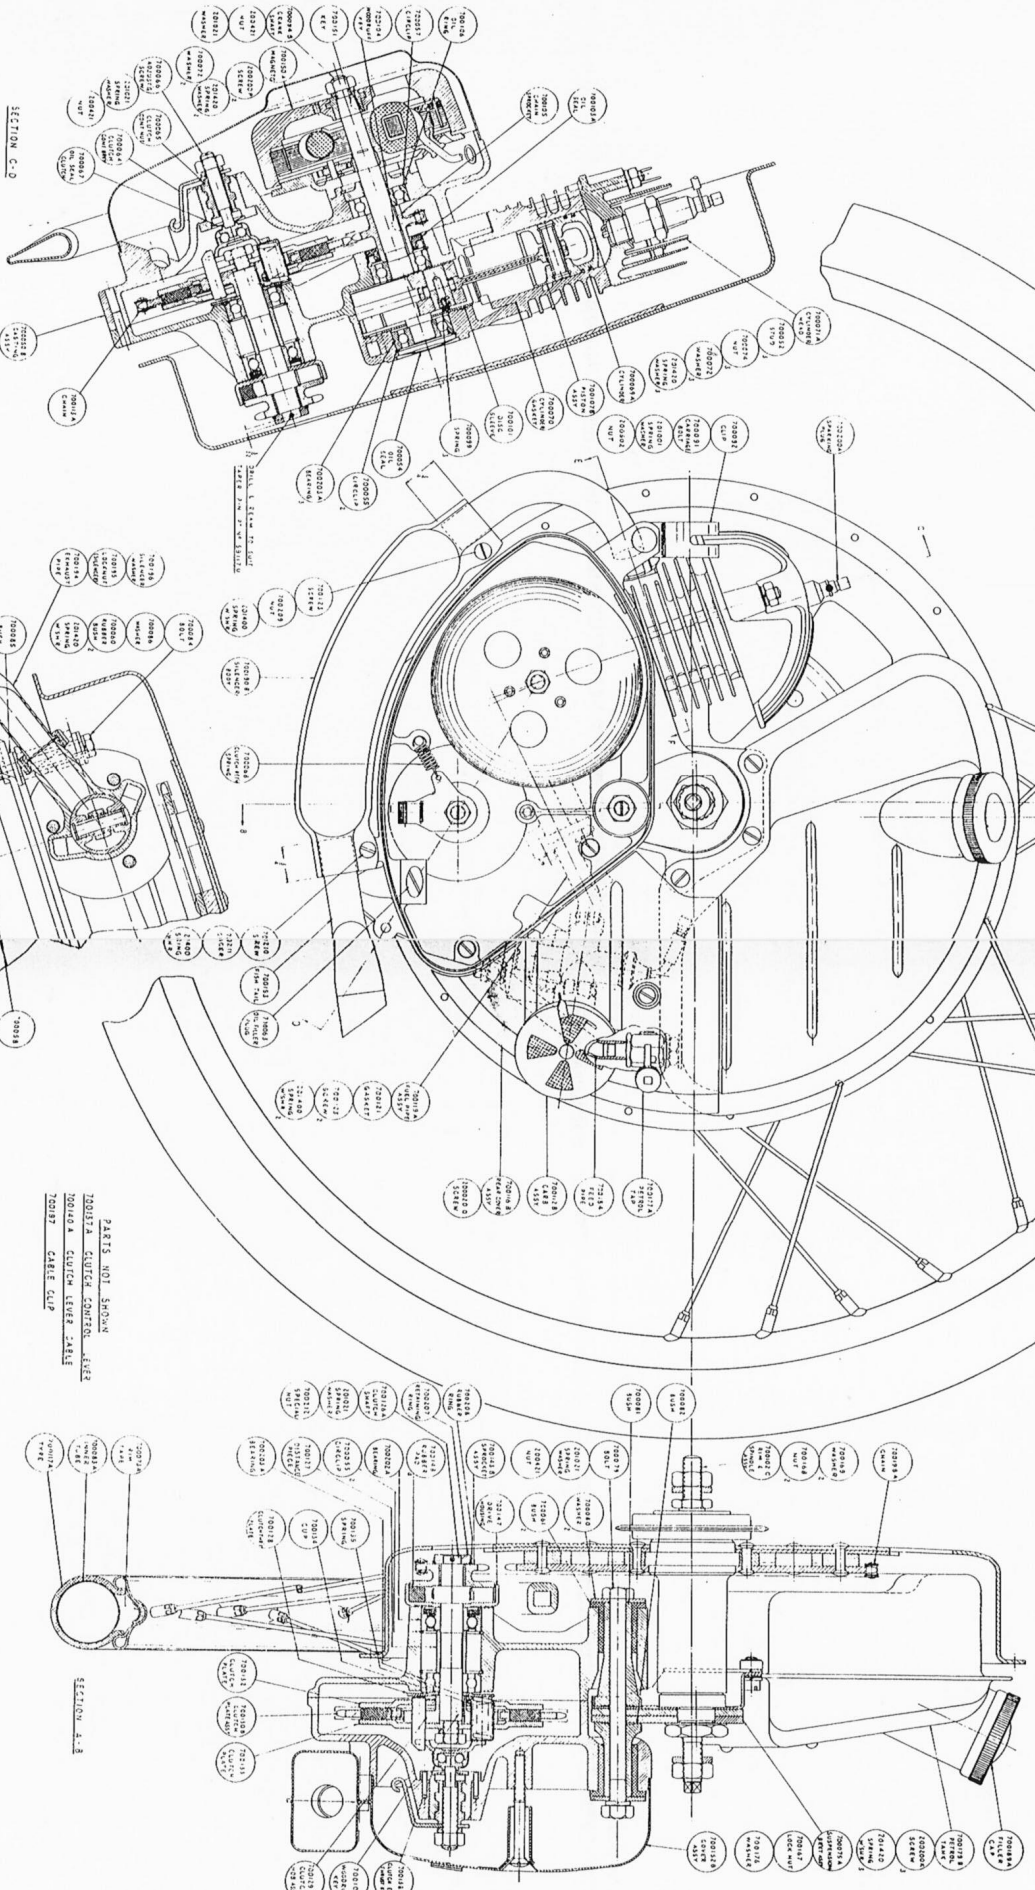

PARTS NOT SHOWN	
700157A	CLUTCH CONTROL LEVER
700140 A	CLUTCH LEVER CABLE
700197	CABLE CLIP

IMPORTANT

In the list of service tools Piston Ring Sleeve CA 8 is for the 25.7 cc. engine, and Piston Ring Sleeve CB 8 for the 32 cc. engine.