

INSTRUCTIONS FOR NO.431 AND 331 LAMP
SETS FOR USE WITH POWER ASSISTANCE UNIT
WITH LIGHTING COIL.

These lamp sets consist of a headlamp and rearlamp with specially matched bulbs.

The headlamps are provided with twin leads, the shorter, fitted with a nipple, and a hook shaped terminal eyelet, being the headlamp to dynamo lead.

The nipple on the dynamo lead should be fitted in the generator output lead terminal connector, whilst the hook shaped terminal eyelet should be fitted to the bolt of the engine mounting lug.

The longer lead, fitted with a closed eyelet and a hook shaped terminal eyelet is the headlamp to the dynamo lead.

The eyelet should be connected to the rearlamp bulbholder, terminal, and the hook shaped terminal eyelet to the rearlamp body clip bolt.


Replacement of headlamp bulbs may be carried out as detailed in the instructions leaflet No.453 Set.

Headlamp Main Bulb - Lucas No. C.205 (6v.6w.S.C.C.).

Headlamp Pilot - Lucas No. C.974 (3.5.v.0.15a.MES)

To replace rearlamp bulb, slacken the clamping screw, and withdraw the bulbholder. The replacement should be Lucas No.C.997 (6v,0.5a MES).

IceniCAM Information Service

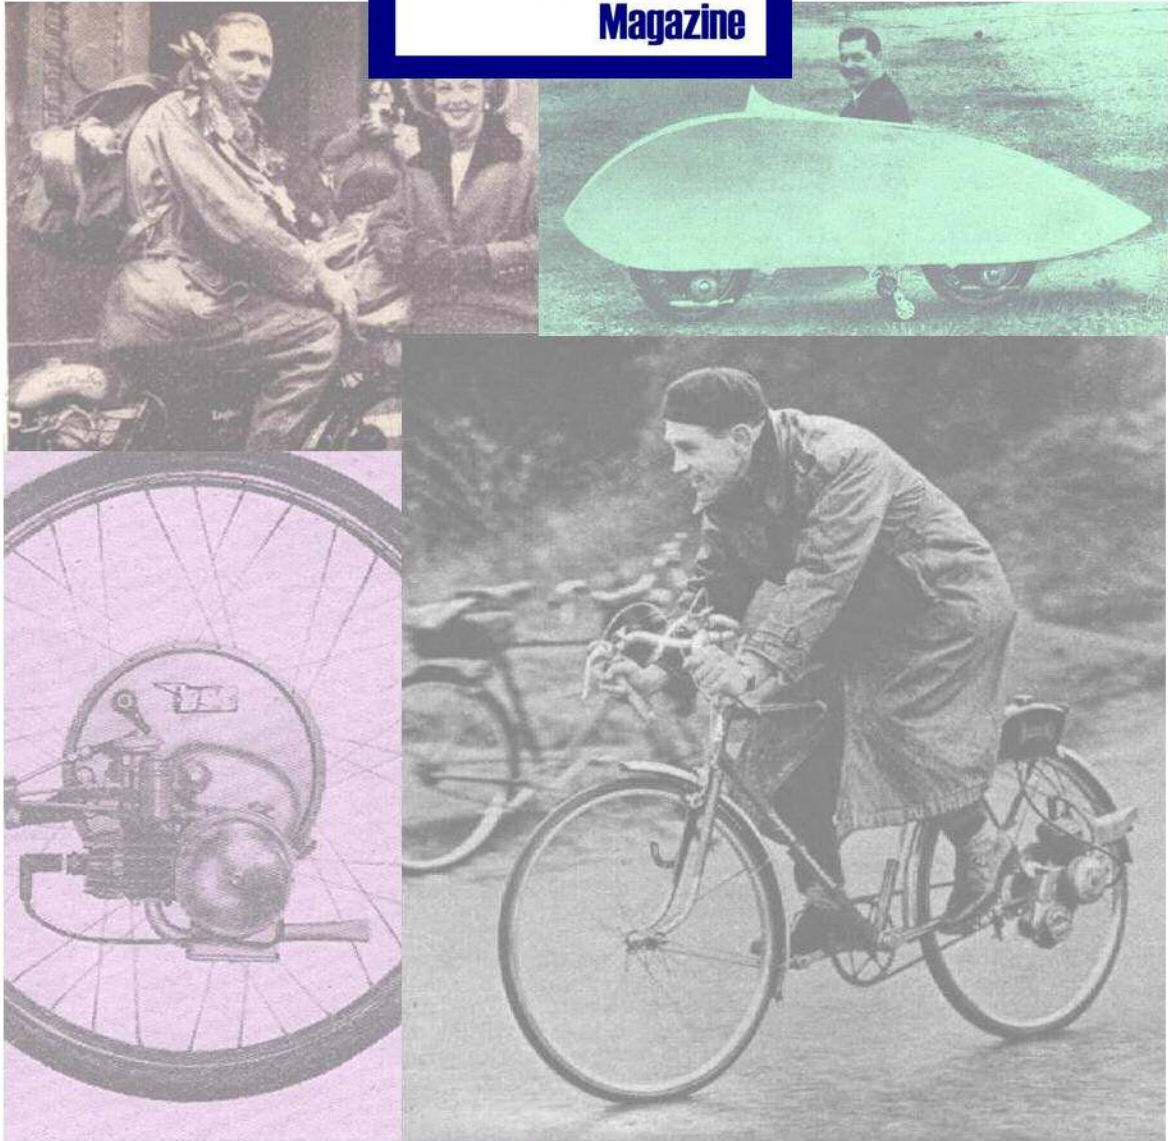

www.icenicam.org.uk