



Instruction Manual

Models

D1 125 c.c. Bantam

D7 175 c.c. Lintam Super



Instruction Manual

for



D Models

B.S.A. MOTOR CYCLES LTD., BIRMINGHAM, 11

Telephones: Birmingham VICToria 2381

Telegrams and Cables: "SELMOTO," Birmingham.

SERVICE, SPARES AND REPAIRS DEPARTMENT—
Montgomery Street, Birmingham 11

Telephones: Birmingham VICToria 2234

Telegrams and Cables: "SELSERV," Birmingham

B.S.A. Motor Cycles Ltd. reserve the right to alter the designs or any constructional details of their manufactures at any time without giving notice.

Printed in England Jan. 1959 Copyright B.S.A. Co. Ltd. MC 1134-10

This Instruction Manual is intended to acquaint the B.S.A. owner with details of the controls, general maintenance and technical data which may be required for normal operation of the machine.

It does not contain the information necessary to carry out complete stripping for major overhauls, but if any owner feels he is competent to carry out this type of work a service manual and an illustrated, priced, spares catalogue for this machine can be obtained from your B.S.A. spares stockist or local distributor.

Owners in the British Isles can obtain these publications direct from B.S.A. Motorcycles Ltd., Service Department, Birmingham 11. The service manual is priced at seven shillings plus sixpence postage, and the spares catalogue is five shillings and sixpence, plus sixpence postage. Always quote full engine and frame numbers when ordering these publications.

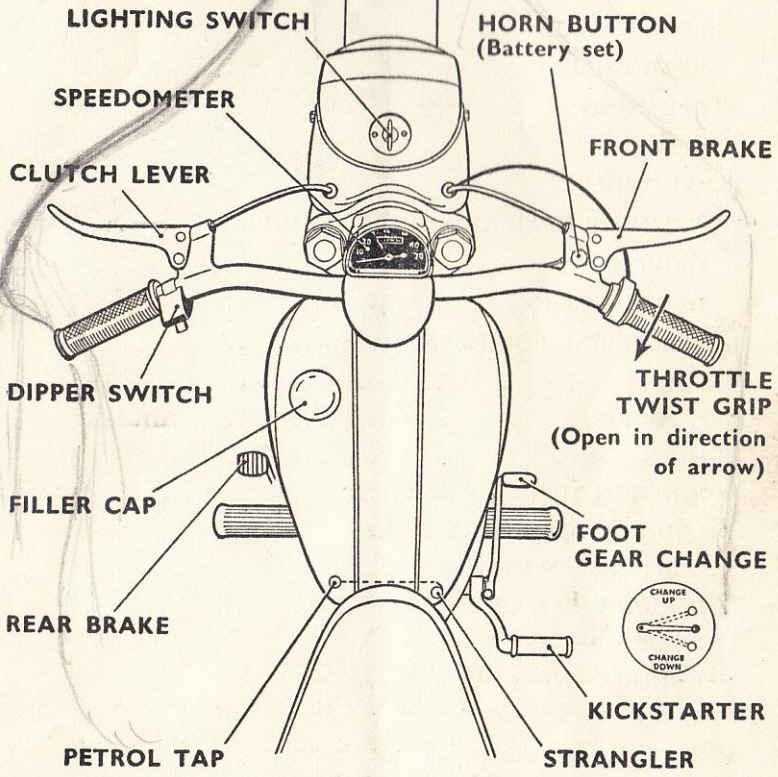


Fig. 1. The Controls

CONTENTS

	pages
AIR CLEANER	20
BRAKES	26
CARBURETTER	18
FRONT CHAIN	20
REAR CHAIN	25
CLEANING	10
CLUTCH	23
CONTROLS	7
CYLINDER HEAD AND BARREL REMOVAL ..	13
DRIVING	8
DECARBONISING	12
ELECTRICAL EQUIPMENT	30
FORKS	27
GEARBOX	25
HUBS	25
IGNITION TIMING	11
LUBRICATION CHART	21-22
LUBRICATION SYSTEM	11
PERIODICAL MAINTENANCE	10
REAR SUSPENSION	29-30
RUNNING-IN	9
SPARES STOCKISTS	37
SPARKING PLUG	16
STEERING HEAD	27
TECHNICAL DATA	5-6
TRANSMISSION	20
WHEEL REMOVAL (FRONT)	25
WHEEL REMOVAL (REAR)	25
WIRING DIAGRAM (DIRECT LIGHTING SET) ..	34
WIRING DIAGRAM (BATTERY SET)	35-36

TECHNICAL DATA

Engine Number—on top of crankcase below cylinder.

Frame Number—at top of steering head tube.

Engine:	<i>Model D1</i>	<i>Model D7</i>
Capacity	123 c.c.	174 c.c.
Cylinder bore	52 mm.	61.5 mm.
Stroke	58 mm.	58 mm.
Compression ratio	6.5—1	7.4—1
Piston ring gap	minimum .009 in. maximum .013 in.	.009 in. .013 in.
Sparking plug	L10S (L.7)*	L10S (L.7)*
Plug points gap	minimum .018 in. maximum .012 in.	.018 in. .020 in.
Transmission:		
Gear ratios:	top .. 7.0 second .. 11.7 first .. 22.0	6.48 10.74 20.2
Clutch—friction plates.. 3	3
Chain size and pitch front		
$\frac{3}{8} \times .250$ in.	50	50
rear $\frac{1}{2} \times .305$ in.	117	121
Teeth on: engine sprocket	17	17
gearbox sprocket	15	16
clutch sprocket	38	38
rear chainwheel	47	46
Capacities:		
Fuel tank	1 $\frac{3}{4}$ gallons	2 gallons
Petrol mixture	See page 21	See page 21
Gearbox	$\frac{3}{4}$ pint	$\frac{3}{4}$ pint
Front forks	—	70 c.c. each leg
Wheels:		
Rim size	front WM1—19 rear WM1—19	WM1—18 WM1—18
Tyre size.. .. .	front 2.75—19 rear 2.75—19	3.00—18 3.00—18
**Tyre pressure	front 16 p.s.i. rear 22 p.s.i.	16 p.s.i. 24 p.s.i.
Brake size	dia. 5 in. wide $\frac{5}{8}$ in.	5 $\frac{1}{2}$ in. 1 in.

TECHNICAL DATA

Carburation: Amal	<i>Model D1</i>	<i>Model D7</i>
Bore	$\frac{5}{8}$ in.	$\frac{7}{8}$ in.
Main jet	75	140
Pilot jet	—	25
Throttle valve	5	$375/3\frac{1}{2}$
Needle position	2	4
Needle jet106	1.055
Air cleaner	Amal.	Amal.

General Details:

Front suspension movement	$3\frac{3}{4}$ in.	3 in.
Rear suspension movement	2 in.	$2\frac{3}{8}$ in.
Generator output	30 watts	30 watts
Contact breaker gap015 in.	.015 in.
Battery capacity (battery lighting)	8 amp hour	8 amp hour
Overall length	77 in.	$79\frac{1}{2}$ in.
Wheelbase	50 in.	51 in.
Ground Clearance	$4\frac{3}{4}$ in.	$5\frac{1}{2}$ in.
Saddle height	27 in.	31 in.
Overall height	$38\frac{3}{4}$ in.	36 in.
Handlebar width	$26\frac{1}{2}$ in.	$27\frac{3}{4}$ in.
Steering head angle	61°	61°
Steering lock angle	45°	45°

* New Champion rating, in brackets.

** The recommended tyre pressures are based on a rider's weight of 140 lbs. If the rider is heavier, increase the pressures as follows:—

Front tyre: Add one lb. per sq. in. for every 28 lb. increase above 140 lb.

Rear tyre: Add one lb. per sq. in. for every 14 lb. increase above 140 lb.

If additional load is carried in the form of a pillion passenger or luggage, the actual load bearing upon each tyre should be determined and the pressures increased in accordance with the Dunlop Load and Pressure Schedule.

TAKING OVER THE MACHINE

Before running the machine make sure that the fuel tank contains the correct mixture of oil and petrol, that the gearbox is properly topped up with oil and that the battery (when fitted) is filled and charged. (See appropriate chapters for filling instructions.) Normally these preparations will be carried out by the dealer who is selling the machine and the new owner has only to arrange the controls to his liking and the machine is ready for the road.

The Controls.

The new rider should make sure that he is quite familiar with all the controls before attempting to ride the machine. Most of the controls are adjustable and should be positioned so that they can be reached without moving the hands from the grips or the feet from the footrests. Handlebars should be adjusted so that a comfortable and natural riding position is achieved. Make sure that the bolts retaining the handlebar clamps are tight after completing any adjustment. Badly positioned controls cause poor control of the machine and will bring discomfort on long journeys.

HANDLEBAR CONTROLS

Twist Grip.

Mounted on the right handlebar it controls the throttle opening. To open the throttle (i.e. to increase the engine speed) turn the grip so that the top moves towards the rider. Full movement is about a quarter of a turn.

Front Brake.

Hand lever mounted on the right handlebar in front of the twist grip. Squeeze the lever towards the bar to operate the brake.

Clutch

Hand lever mounted on the left handlebar in front of the grip. Squeeze the lever towards the bar to free the clutch, i.e. disengage the drive between the engine and the rear wheel.

Horn (Battery Equipment)

The horn button is mounted on the right handlebar on the top of the front brake lever bracket.

Headlamp Dipper Switch

On the left handlebar attached to the rear of the clutch lever. It controls the switching from main to dipped headlamp filaments.

FOOT CONTROLS

Rear Brake

This is a toe pedal on the left-hand side of the machine and it operates the rear brake only.

Gear Change Pedal

On the right-hand side there are two pedals one of which projects forwards, this being the gear change pedal. To engage first gear from the neutral position, the pedal is moved downwards. To change to a higher gear move the pedal upwards. To change to a lower gear depress the pedal. The pedal automatically returns to central position, ready for next gear change.

Kickstarter Pedal

This is the other pedal on the right-hand side. Depression of this pedal rotates the engine.

OTHER CONTROLS

Petrol Tap

This is located under the rear end of the tank. To turn the petrol on, pull the button out and lock in position by turning anti-clockwise. To turn the petrol off, turn the button in a clockwise direction and push in.

Lighting Switch

This is operated by a switch on the headlamp, and has three positions—OFF, LOW, and HEAD respectively. The LOW position is also for use when the machine is stationary. On direct lighting models the parking bulb draws its current from a dry battery accommodated in the headlamp behind the reflector.

On battery lighting models turn the lighting switch to 'LOW' if the battery is discharged as this will deliver the maximum charging current to the battery when the engine is running.

Carburettor Tickler

This is a small plunger in the top of the carburettor float chamber. Pressing it down pushes down the float and frees the needle valve thus permitting the carburettor to receive excess petrol.

Steering Lock

Mounted underneath the bottom fork yoke. To operate the lock turn the forks to the left then turn the key in the lock to release the plunger. This prevents the machine being driven or wheeled.

DRIVING

To Start the Engine

Set the gear in neutral (i.e. between the first and second gear positions).

If cold, first depress the carburettor tickler momentarily and close the strangler. Open the twist grip control a small amount and give the kickstarter a vigorous kick downwards, whereupon the engine should fire at once.

During normal running the strangler must always be kept fully open and it should be opened immediately the engine fires, or should the weather be cold, at the earliest possible moment.

Note. While it is necessary to close the strangler when starting from cold, this may not be necessary when the engine is warm and should certainly not be so if the engine is restarted after a short wait only.

To Stop the Engine

Close the throttle and disengage the clutch. If the engine does not stop it indicates that the throttle is not closing properly.

To Engage First Gear

Declutch and move the gear change pedal downwards to its limit. If difficulty is experienced in engaging first gear when stationary, rock the machine backwards and forwards maintaining slight pressure on the gear change pedal, until the gear is felt to engage.

To Move Off

Open the throttle slightly and gently release the clutch lever. As the clutch engages open the throttle a little further.

To Change Gear (Up)

Disengage the clutch and immediately thereafter raise the gear change pedal upwards to its limit, at the same time easing the throttle back. Engage the clutch and reopen the throttle together immediately after changing.

To Change Gear (Down)

Disengage the clutch, open the throttle slightly, and press the gear change pedal downwards to its limit, all these operations being performed in rapid succession. Re-engage the clutch immediately.

Note. Violent pressure on the gear change pedal is neither necessary nor desirable.

To Select Neutral

Neutral is situated between first and second gear. To select neutral from first gear, with the clutch withdrawn lift the gearchange pedal gently until it is felt to click into the neutral position. If the lever is lifted up too far it will travel through to second gear. To select neutral from second gear push the lever down until it is felt to click into position.

Riding Hints

Avoid violent acceleration and braking, particularly on wet roads. Always use both brakes together and apply them smoothly and progressively. Try to anticipate the need to change gear or brake so that your riding is not jerky or untidy. Maintain a natural riding position as this provides maximum control and prevents discomfort on long journeys.

RUNNING-IN

The rider who has just purchased a new machine for the first time will do well to remember that all the hidden working parts are just as new as the enamel and plating which he can see, and that they must not be overloaded until they are well run-in.

This running-in is really the most important period in the life of the engine, and the handling you give it during the first 1,000 to 1,500 miles will determine what sort of service it is going to give you later.

It is advisable not to exceed half throttle in any gear during the first 500 miles. The model's maximum will then not disappoint you. If you try to put it through its paces too soon you will run the risk of seizure and other troubles which may have a lasting effect on the engine, and, in any case, until it is really run-in it will not be at its best.

Avoid sudden and sharp acceleration, especially when the engine is not pulling under load.

Do not force it up hills in top gear, when a change down would ease the load.

Carry out the periodical maintenance details described later with faithful regularity.

After the first 250 miles (400 km.), remove the smaller of the two screwed plugs from the bottom of the crankcase and drain out any oil which may have accumulated there. With the petrol lubrication system employed there is never

a considerable quantity of liquid oil in the crankcase, but whatever oil there is should be drained away, and this is preferably done while the engine is warm immediately after a run, as the oil will flow more freely and carry with it any foreign matter which may have found its way into the crankcase during the running-in process.

Make certain on replacing the plug that it is made really tight in order to prevent loss of crankcase compression.

During the running-in period the gearbox should also be drained and flushed out and this is preferably done at the same time as the crankcase.

Information regarding the correct grades of oil is given in the chart on page 21.

ROUTINE MAINTENANCE

To keep the machine in good condition and provide trouble-free running, maintenance must be regularly carried out. The following list of items requiring regular attention will serve as a guide to the periods between servicing and the method of carrying out the various adjustments will be found under the appropriate headings in the later chapters.

Weekly

Check tyre pressures and remove any embedded stones or pieces of metal.
Oil brake pedal pivot and all exposed joints and cables.

Monthly

Examine the battery (when fitted) and top up if necessary. More frequent examination is advisable in a hot climate.

Every 300 miles

Check oil level in gearbox and top up if necessary.

Every 1,000 miles

Grease hubs, steering head, clutch operating mechanism, central stand, front forks and rear suspension (plunger type).

Oil brake cam spindles and saddle nose bolt.

Check rear chain adjustment.

Every 2,000 miles

Change the oil in the gearbox.

Grease the speedometer drive.

Check tightness of all nuts and bolts.

Every 3,000 miles

Check contact breaker adjustment and grease the felt pad.

Cleaning

Obviously regular and thorough cleaning will keep your machine looking smart and will help to retain both its new appearance and value. But it helps also to lengthen its life and maintain efficiency if the cleaning process is carried out correctly.

Take special care to prevent dust and grit from working into such parts as hubs, carburetter, magneto, brakes and gearbox.

To rub dry and caked mud from the frame, tank and mudguards means that the enamel on these parts will be subjected to an abrasive action which will quickly destroy the polish. Soak the mud first, and then float it off with copious supplies of clean water supplied either with a hose or a sponge. If a hose is used, take care not to direct the stream of water directly on to the hub bearings, magneto and carburetter.

When all dirt is removed, dry and polish off with a clean duster.

The engine and gearbox are best cleaned with a brush and paraffin, and then dried off with a clean rag.

ENGINE

Lubrication

Lubrication for the engine is provided by oil dissolved in the petrol to provide a moisture commonly called "petroil". The filler cap on top of the petrol tank will be found to incorporate a tubular extension which projects into the tank. This serves as a measure for lubricating oil and is used for preparing the correct mixture of petrol and oil required. The correct proportion of oil to petrol is given on page 21, the grades of oil recommended should be used as lighter grades may prove unsuitable.

For correct running of the engine and also for adequate lubrication, it is essential that the oil should be completely dissolved in the petrol, and it is, therefore, preferable to mix the two in a separate container before pouring into the tank. If this is not possible, however, as for instance, when obtaining petrol from a wayside pump, the oil should be put into the petrol after filling up with the latter and the machine should be shaken thoroughly to ensure correct mixing of the two liquids. If this is not done, there is the risk of liquid oil undiluted with petrol reaching the carburetter and clogging the fuel supply system. As the only lubrication for the engine is by means of fuel drawn in through the carburetter the machine must not be coasted downhill for long periods with the throttle shut as the engine may suffer seizure through lack of lubrication.

Ignition Timing

The ignition timing is accurately set within very close limits and there is no manual adjustment for the rider as this has been found quite unnecessary in practice. The contact breaker cam *A*, (Fig. 2) is keyed on to an extension of the mainshaft, and its position with reference to the piston position is therefore constant.

Any variation in timing can only be secured by moving the contact breaker housing *B* (Fig. 2) or the rocker arm *C*. The former can be rotated through a very small angle by releasing the screws *D* not forgetting to retighten them after the adjustment has been made. It is emphasised that this is a works adjustment rather than one which the private owner is ever likely to carry out.

In order to obtain correct timing and proper functioning of the contact breaker, the points must be set when in the fully open position at the correct gap, and this point should be checked periodically as recommended on page 31. To do this, turn the engine until the points are fully open and insert a feeler gauge between them. The correct gap in this position should be .015 in. (.38 mm.) and if this is found to be wrong release screw *E* about one turn with a screwdriver and move the adjusting plate up or down until the correct gap of .015 in. has been restored, finally retightening screw *E*.

To check the actual timing remove the sparking plug and turn the engine until the piston is felt to be at top dead centre by means of a suitable rod inserted through the sparking plug hole, and then turn the engine back until the piston has descended $\frac{5}{16}$ in. (3.75 mm.) D1 models; $\frac{1}{16}$ " (1.59) D7 model. With the piston in this position, the contact breaker rocker arm should just be commencing to rise on the contact breaker cam, and the points should have opened not more than .002 in. (.05 mm.). If they are open more than this the timing is too far advanced. If they are open less the timing is excessively retarded, although a small variation in either direction is not detrimental to the running of the engine.

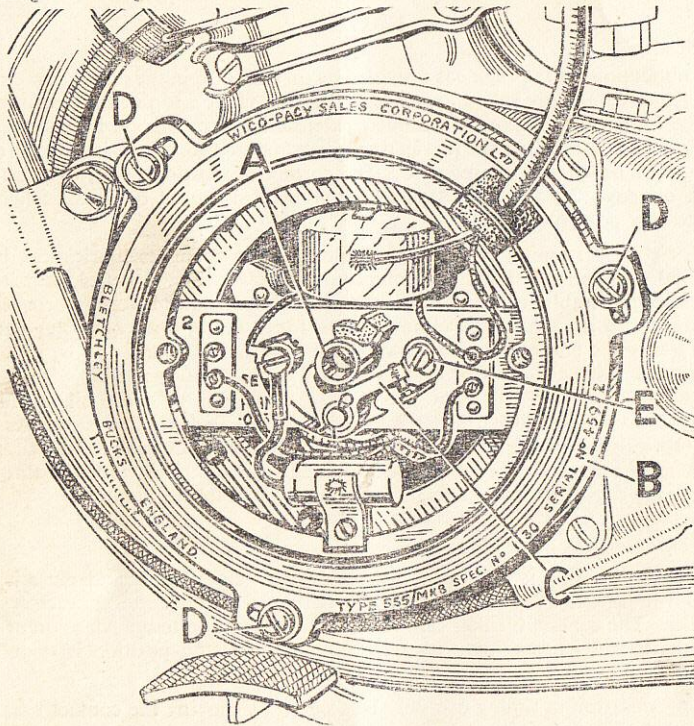


Fig. 2. Contact breaker

DECARBONISATION

Decarbonising is extremely simple and should be carried out at regular intervals of about fifteen hundred miles (2,500 km.) if consistent results are to be expected. The symptoms indicating an excessive deposit of carbon are undue roughness of the engine and a tendency to pink under load, erratic running with excessive four and eight stroking, and an appreciable falling off in power. This latter item is particularly noticeable when the exhaust port becomes fouled with carbon as it causes an obstruction to the free escape of the exhaust gas, and interferes with the correct scavenging of the cylinder which is so necessary for the efficient transfer of combustible mixture from the crankcase.

Silencer

The silencer is fitted with a detachable end cap held in position by a single central nut inside the exhaust opening. This is easily unscrewed and the cap and internal baffle removed for cleaning. Note when replacing the baffle unit that the copper sealing ring is in position before fitting the end cap. The two plain washers and one spring washer must be replaced on the stud before tightening the central locking nut.

Removal of Cylinder

First turn off the petrol and detach the petrol pipe by means of the hexagon on top of the float chamber. The plastic petrol pipe is clipped to the petrol tap union and should not be disturbed. Next remove the carburetter from its stub at the rear of the cylinder by releasing the clip bolt by means of which it is attached. The exhaust pipe must also be disconnected by releasing the union nut at the front of the cylinder barrel by means of the special "C" spanner included in the tool kit. If this nut should prove unduly obstinate, a few drops of penetrating oil should be applied to the threaded portion immediately above the nut and a little time should be allowed for this to act before attempting to unscrew the nut. Disconnect the high tension lead from the sparking plug and unscrew the latter.

The cylinder head and barrel are attached to the crankcase by means of four long studs, and when the four nuts on the top of the cylinder head are removed, the head can easily be lifted clear. Removal of the cylinder barrel is greatly facilitated if the two petrol tank front locking bolts are unscrewed so that the tank can be raised slightly. Take care when removing the barrel to support the piston as it emerges from the end of the bore in order that it may not be damaged as it falls clear.

Piston

Place the cylinder head and barrel on one side on a bench and examine the piston. It should not be necessary to remove this from the connecting rod, but if it should be desired to do this for any reason, first remove the circlip from one end of the gudgeon pin using a pair of pointed nose pliers or some suitable instrument to lever the circlip out. Then holding the piston firmly in the hand, tap the gudgeon pin out from the other end. If it is too tight to move, it can be released by warming the piston by means of a rag soaked in hot water and wrung out. Application of this rag will cause the aluminium alloy of the piston to expand more than the steel gudgeon pin, thus releasing the latter which can then be freely pushed or tapped out.

Scrape off any carbon which has accumulated on the crown of the piston, taking care not to damage the relatively soft surface of the metal itself, and after removing all the carbon, polish lightly with fine emery cloth if desired and finally wipe clean with an oily rag.

Piston Rings

Now examine the piston rings noting that these are located in their grooves by means of pegs which engage in the piston ring gaps. If in good condition, the rings will be found to present a uniformly smooth metallic surface over their entire peripheries, and if they are in this condition and obviously have a certain amount of "springiness" as evidenced by the fact that their free gap is considerably greater than the closed gap when in the bore they should not be disturbed. If, on the other hand, the rings show signs of heat as evidenced by brown or more

highly discoloured patches, they should be replaced by new rings, and in this case particular attention should be paid to the fit of the ends of the rings on their locating pegs in the piston ring grooves, and they should also be checked in the bore to ensure that they have an adequate gap. These points will not arise if genuine B.S.A. spares are fitted as the gaps on these are already correct when the rings are sent out, but if for any reason genuine B.S.A. spares are not obtainable, these points must receive careful attention. First place the ring in the cylinder bore in a position where it is clear of the ports and, making certain that it is square by pressing the skirt of the piston against it or a suitable bar of material of the correct diameter, examine the gap which should be not less than specified (see Technical Data, page 5) Having satisfied yourself on this point, place the ring in its groove on the piston and make certain that it is free without perceptible up and down play. If it is not free and the groove itself is clean, rub the ring down on a piece of fine emery cloth laid on a dead flat surface, using a rotary motion of the arm to ensure uniform pressure on the ring. As soon as ring is found to be free in its groove, wipe it absolutely clean and fit it into position.

Check also that there is sufficient clearance between the inner portion of the gap and the locating peg in the groove. Do this by closing the ring in its groove by finger pressure until there is no gap, thus shewing that there is clearance at the peg underneath. If the gap will not close, indicating that the steps are binding on the peg, ease the steps gently with a dead smooth file. If the piston has been removed from the connecting rod refit it, first putting a smear of oil on the gudgeon pin, not forgetting a new circlip to replace the one which was removed.

The piston must be replaced in its original position—i.e., with piston ring gaps towards the rear on D1 and the front on D7 engines.

Then put a piece of clean rag over the piston and crankcase mouth and turn your attention to the cylinder barrel and head.

Cylinder Head and Ports

Remove all carbon deposit from the cylinder head, bearing in mind again that the aluminium is soft and easily damaged if the decarbonising tool is carelessly applied, and carefully wipe clean to ensure the removal of all loose particles. Most of the carbon deposit likely to have accumulated in the cylinder will be in the exhaust port, and this is most important as explained above. Scrape this out carefully, taking care not to let the tool slip into the bore and damage the surface of the latter. Examine the transfer and inlet ports for the presence of carbon, although this is unlikely to be heavy, and finally wipe the ports and the cylinder bore absolutely clean.

Big-end Bearing

While the cylinder is off it is as well to test the big-end bearing for wear. This is done by taking hold of the connecting rod stem and pulling it upwards until the crank is at top dead centre. Then holding it in this position try gently but firmly to pull and push the connecting rod in the direction of its travel in order to feel whether there is any play. If the big-end is in a sound condition there should be no play in this direction, although it may be possible to rock the rod sideways, i.e. at right angles to the axis of the machine. If vertical play is perceptible in the big-end and you do not feel qualified to decide whether the amount in evidence is permissible or not, you should seek expert advice. This point is not likely to give trouble, however, provided that the machine has been carefully used and adequately lubricated, for the big-end bearing is of ample dimensions for the work it has to do. But if for any reason the big-end bearing

has deteriorated as the result of neglect or abuse, it should be replaced and unless you have the necessary experience and facilities for this class of work it is preferable to have it done by an expert repairer. For the benefit of the experienced owner who may wish to dismantle his engine-gear unit, a horizontal section of this is given in Fig. 3, but it is emphasized that no attempt should be made to carry out work of this nature unless it becomes absolutely necessary.

Re-assembly

Before attempting to replace the cylinder barrel over the piston, smear the latter generously with engine oil and then place it over the piston, carefully manipulating the rings into the end of the bore and seeing that they enter freely without the application of force. As soon as the cylinder barrel is home, replace the cylinder head and put the washers and nuts on the four holding down bolts. Tighten the nuts in diagonal order so as to avoid distortion.

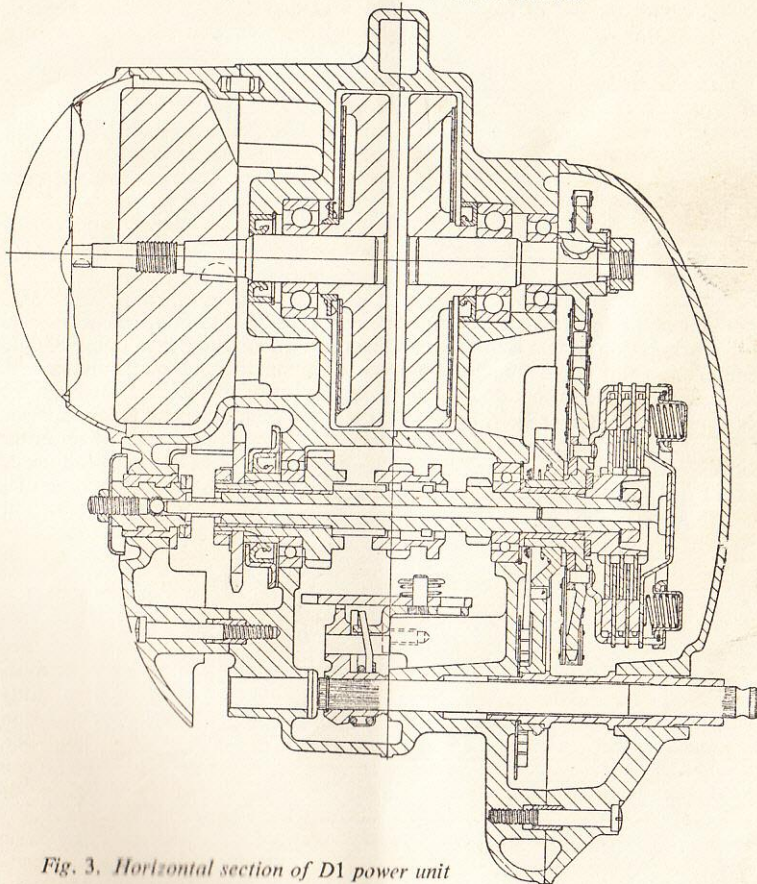


Fig. 3. Horizontal section of D1 power unit

Examine the sparking plug and replace if sound, and finally reconnect the exhaust pipe and the carburetter.

Sparking Plug

The sparking plug is of great importance in satisfactory engine performance, and every care should be taken to fit the correct type when replacements are necessary. There is little to be gained by experimenting with different plugs as the make and type fitted by us as official factory equipment is best suited to the requirements of the motor. This is Champion Type No. L10S, as illustrated in Fig. 4. (Note: according to the new Champion rating this plug will be designated No. L.7.)

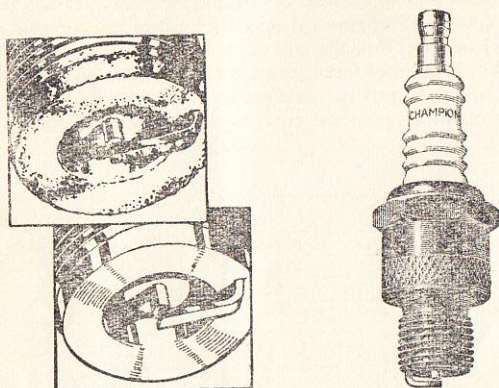


Fig. 4. The sparking plug

Remove the sparking plug every 1,000 miles (1,500 km.) or so for inspection. If the carburation system is in correct adjustment the sparking plug points should remain clean almost indefinitely. An over-rich mixture from the carburetter will, however, cause the formation of a sooty deposit on the points and, later, on the plug end face (as upper view, Fig. 4). If therefore such a deposit is found, clean it off carefully and check your carburetter. Too high a proportion of oil in the petrol mixture will also cause plug fouling (see page 9). The continued use of leaded fuel may also eventually produce a deposit on the plug—this time of a greyish colour.

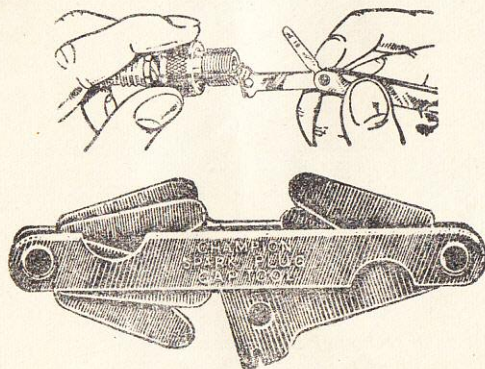


Fig. 5. Setting the plug points

A light deposit due to any of these causes can easily be cleaned off, but if it is allowed to accumulate, particularly inside the body, the plug may spark internally with an adverse effect on engine performance—if, indeed, it does not stop the engine altogether. The plug should be cleaned and tested at regular intervals, and it is suggested that this service be performed at your garage on a special "Air Blast" service unit. If eventually the cleaning process fails to restore the plug to its original condition of efficiency, it should be replaced by a new one.

When inspecting a plug, also check the gap between the points. This should be .018-.020 in. (.44-.50 mm.) and adjustment should be made by bending the side wire (Fig. 5). Never attempt to move the centre electrode, and it is always advisable to use the special plug gap tool illustrated, obtainable at 2/- from any Champion Plug stockist or from the Champion Sparking Plug Co. Ltd., Feltham, Middlesex. Feeler gauges are attached to verify correct gap.

When refitting a plug, make sure that the copper washer is not defective in any way. If it has become worn and flattened, fit a new one to ensure obtaining a gastight joint.

Screw the plug down by hand as far as possible, then use a spanner for tightening only. Always use a tubular box spanner to avoid possible fracture of the insulator, and do not in any circumstances use an adjustable spanner.

Paint splashes, accumulation of grime and dust, etc., on the top half of the insulator, are often responsible for poor plug performance. The plug should be wiped frequently with a clean rag.

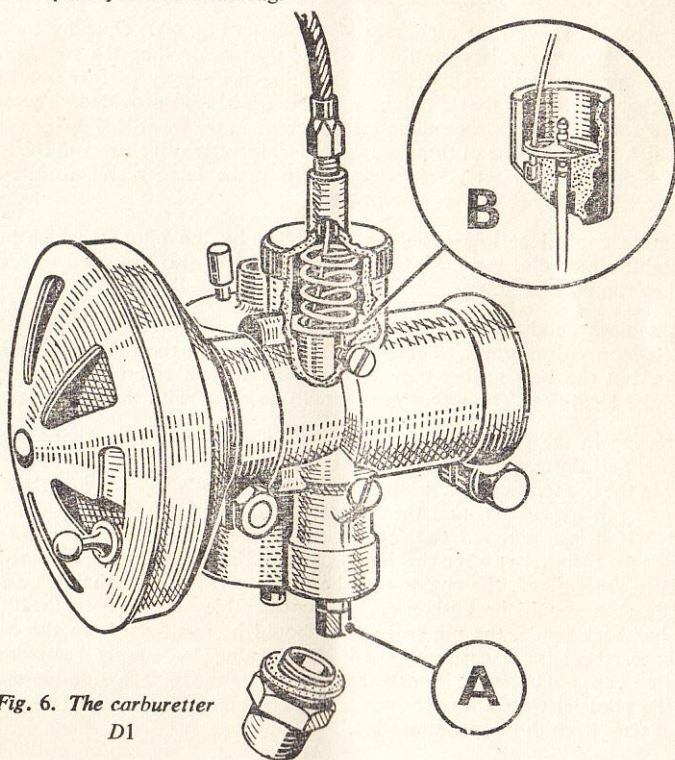


Fig. 6. The carburettor
D1

CARBURATION (D1)

So long as the engine continues to run satisfactorily the carburetter is best left alone, particularly by the inexperienced rider. The setting employed is suitable for a very wide range of climatic temperature and road conditions, and it is highly improbable that the rider will need to modify it in any way. If however, it is felt that the conditions under which the machine is operated might permit of a slightly more economical setting this can be provided by the fitting of a smaller main jet (*A* Fig. 6) or by lowering the jet needle *B* one notch. The former alteration will supply a slightly weaker mixture throughout the entire range of throttle opening, whereas an alteration to the jet needle position has little or no effect on the full throttle setting. Conversely, the fitting of a larger main jet enriches the mixture throughout the entire range, while raising the jet needle a notch has a similar effect on intermediate throttle openings only. It is emphasised, however, that no alteration to the setting should be made except for special requirements, and only then on expert advice.

CARBURATION (D7)

The carburetter is of simple and robust construction and the only attention that may be required is adjustment of the pilot jet and throttle stop.

An exploded view of the carburetter is shown in Fig. 6A. Opening the twist grip throttle control raises the throttle slide thus controlling the supply of air to the engine. The tapered needle controlling the supply of fuel is attached to the throttle slide so that a balanced mixture is always provided. The needle has five notches at its upper end and it is secured in the throttle slide by a spring clip which locates in one of these notches. The throttle valve size and the needle position are carefully set before despatch from the factory and no alteration to these settings is necessary or desirable.

Mixture control at low speeds is controlled by the pilot jet which has an adjustable air supply. An adjustable throttle stop is also provided to regulate the slow running speed.

To achieve good petrol economy accurate adjustment of the pilot jet and throttle stop is important. These are adjusted before the machine leaves the Works, but the best setting may vary slightly to suit riders requirements or particular localities. The adjustment should be made with the engine warm.

Screwing in the pilot air screw restricts the air supply thus giving a richer mixture, and unscrewing it weakens the mixture. The best way to adjust is to screw in the pilot air screw until the mixture is obviously too rich and the engine starts to run irregularly, and then unscrew the adjuster until the engine runs evenly. If it is unscrewed too far the engine may cut-out or may spit back through the carburetter when the throttle is opened. When the proper adjustment has been determined, the engine may be running too fast and in this case the throttle stop should be unscrewed. If considerable alteration to the throttle stop has been made, the pilot air screw should be re-adjusted. In the case of blockage, the jets are easily exposed for cleaning by simply removing the covering caps. The main jet can then be unscrewed with a suitable spanner and the pilot jet with a screwdriver. No advantage will be gained by altering the jet sizes from those recommended.

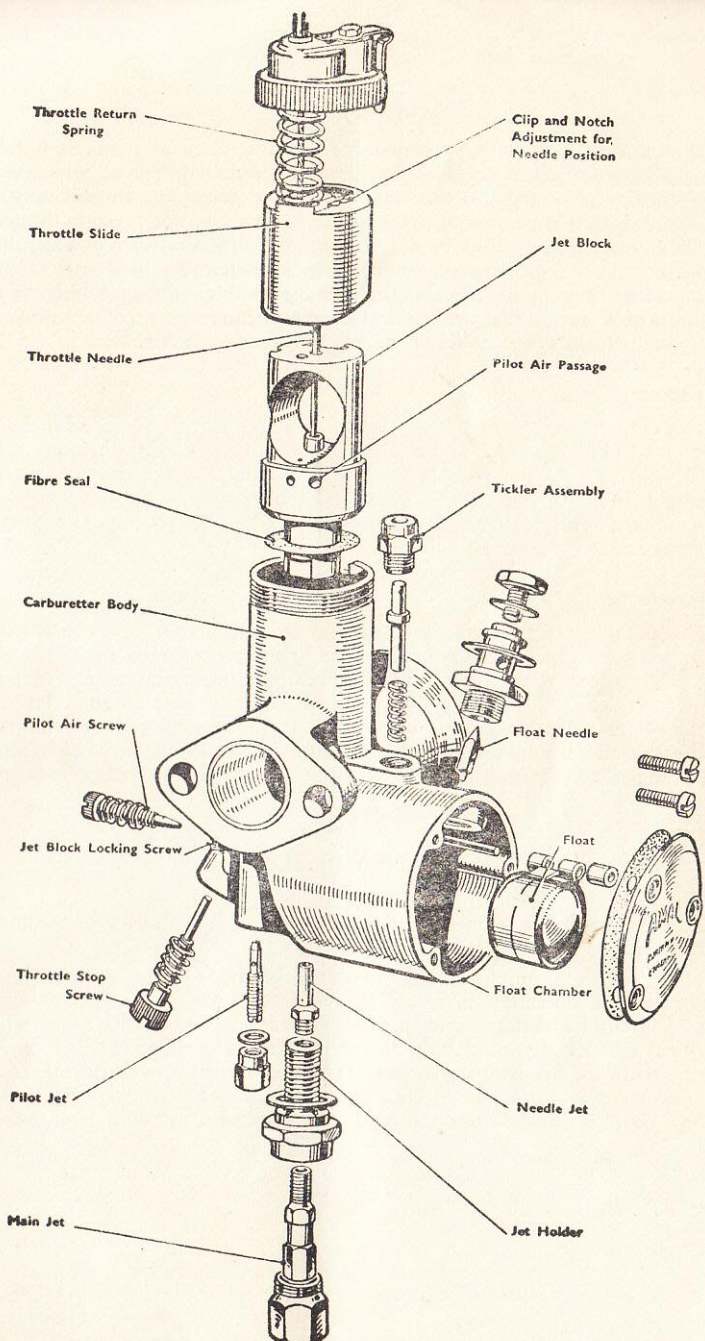


Fig. 6A. The Carburettor. D7

ALL MODELS

Special Note. New riders especially are advised to study the action of the strangler and to treat this device with respect. It should only be used *momentarily* when starting from cold and even then only when necessary. Immediately the engine fires it should be opened. This point is of special importance in the event of difficult starting, possibly due to some other circumstance such as a defective sparking plug, for repeated operation of the kick-starter with the strangler closed results in the accumulation of liquid petrol in the crankcase and when this occurs, starting is quite impossible until it is drained away by the removal of the crankcase drain plug, which is the smaller of the two plugs under the crankcase.

Air Cleaner

This is built into the carburetter intake bell and, as it is of the oil dip type, it requires to be dismantled and cleaned periodically, say, every thousand miles (1,500 km.). To do this, release the clip bolt, and take the bell off. Soak it thoroughly in petrol, allow it to dry, and then submerge it in light engine oil for a few minutes. Then take out, allow the surplus oil to drain off, wipe the exterior, and re-assemble.

Carburetter Strangler


This is built into the air intake "bell" of the carburetter, and consists of a perforated plate which when rotated covers or uncovers similar perforations in the bell, thus varying the amount of air admitted to the carburetter. When the strangler is "closed" (i.e. brought into operation) by raising the small lever on the right-hand side, this closes the perforations, thus reducing the air admitted to the carburetter to a minimum and providing in consequence a very rich mixture. The strangler should at all times be kept open except when starting from cold.

TRANSMISSION

Front Chain

The front chain runs on short fixed centres and adjustment for tension is neither required nor provided.

This chain will run for many thousands of miles before examination is required. This operation involves the removal of the primary chain cover (Fig. 7), after the kickstarter and gear change pedals, both of which are mounted on splines and locked by pinch bolts "B" and "C" respectively, have been removed, together with the five securing screws "D". The normal up and down play on the front chain is up to $\frac{1}{8}$ in. (1 cm.) and the maximum permissible, indicating that the chain is unduly worn and requires replacement, is about $\frac{3}{8}$ in. (2 cm.).

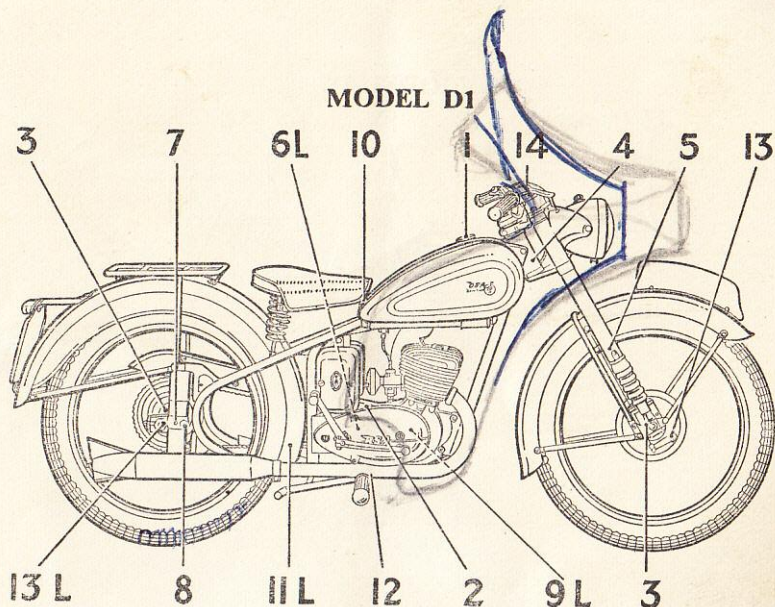

KEY LUBRICATION POINTS

(L indicates left hand side, remainder right hand side or both sides.)

RECOMMENDED LUBRICANTS


(Summer and Winter.)

Mix one of the following Oils with petrol in the ratio of 1:20 unless otherwise shown.

1:20—two filler cap measures to each gallon of petrol.

1:16—two and a half filler cap measures to each gallon of petrol.

Brand	Oil		Grease Points	D7 Front Forks
	Engine	Gearbox		
Wakefield	Castrol Two-Stroke Oil (1:16) or Castrol XXL	Castrol XXL	Castrolase Heavy	Castrolite
Shell	2T Petrolier Mix or 2T Two-Stroke Oil	Shell X-100 40	Shell Retinax A	Shell X100-20
Esso	Esso Two-Stroke Motor Oil (1:16) or Essolube 40	Esso Extra Motor Oil 40/50	Esso Multi Purpose Grease H	Esso 20W/30
Mobil	MobilMix TT (1:16) or Mobiloil BB	Mobiloil BB	Mobilgrease MP	Mobiloil Arctic
BP	BP Zoom or Energol Two-Stroke Oil	Energol SAE 40	Energrease L2	Energol SAE 20

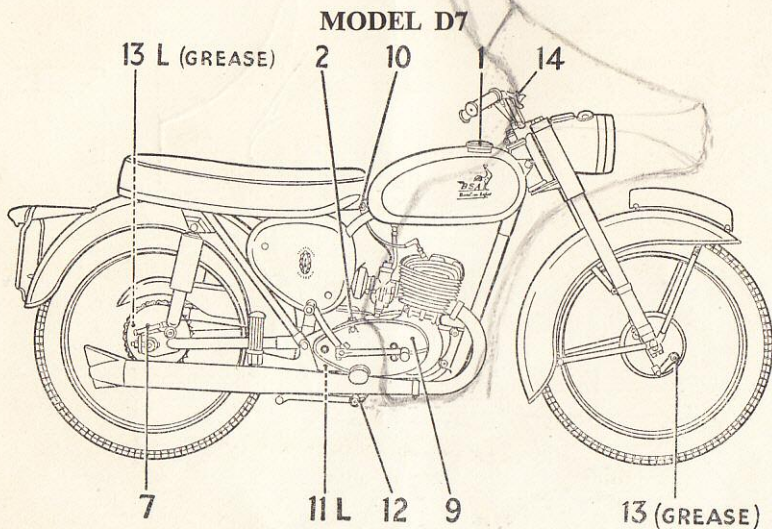

ENGINE OIL

No.	Item	Pages
1	Petrol Mixture	10
2	Gearbox and Primary Drive	9

GREASE

No.	Part	Pages
3	Wheel Hubs	9
4	Steering Head	9
5	Fork Legs	9
6	Clutch Operation	9
7	Speedometer Drive	9
8	Rear Suspension Units (Plunger)	—
9	Contact Breaker Cam Pad	9

A FEW DROPS OF ENGINE OIL

No.	Part	Pages
10	Saddle Nose Bolt (Except with dual seat) ..	9
11	Brake Pedal	9
12	Stand Fulcrum	—
13	Brake Cams	9
14	Handlebar Levers	—
—	Control Joints and exposed cables (not illustrated)	9

Primary Chain Lubrication

This has a common oil supply with the gearbox and therefore requires no separate attention, beyond the instructions for the gearbox.

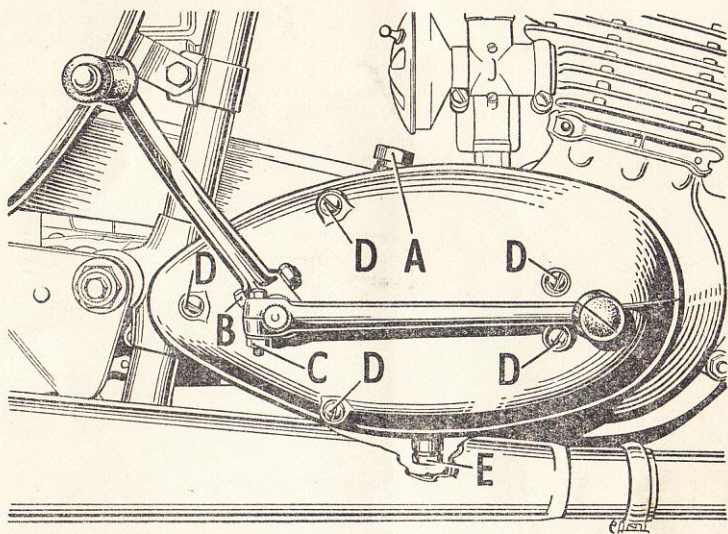


Fig. 7. Primary drive

Care of the Rear Chain

It is a good plan periodically to remove the rear chain, clean it thoroughly in petrol or paraffin, and then gently warm in a mixture of grease and graphite. When cool wipe off excess grease, clean sprockets and replace chain. Remember when replacing the chain which is fitted with a detachable connecting link that the spring fastener must always be put on with the closed end facing the forward direction of travel (i.e. on the top run) of the chain.

Rear Chain Adjustment

Adjustment of the rear chain involves moving the rear wheel and is described on page 25.

Clutch Control

The clutch adjustment will be found at the left-hand end of the gearbox mainshaft (see Fig. 8) and it consists of an adjusting pin *C* screwed into the clutch withdrawal quick thread sleeve and a locknut *B* (protected by an outer cover on Model D7) to secure it in position. This adjusting pin presses against the clutch withdrawal rod with a steel ball interposed. The withdrawal mechanism must at all times be so adjusted that there is a slight amount of play between the pin, the steel ball and the operating rod, in order to ensure that the clutch springs may exert their full pressure on the driving and driven plates. If there is not sufficient play there will be a tendency for the clutch to slip continually owing to reduced spring pressure, and this in

turn will cause over-heating and serious damage to the clutch itself. If the play becomes excessive difficulty will be experienced in changing gear, as the clutch may not fully disengage, in which case the control should be adjusted as explained below.

To adjust, release the locknut and holding it with a spanner turn the adjusting pin with a screwdriver back one or two turns. Then, still holding the locknut with a spanner, screw the adjusting pin gently in until it is felt to meet some resistance. Then unscrew it half-a-turn and holding it in this position retighten the locknut. If the adjustment is correctly made in this manner, it will be found that there is a small amount of free play at the clutch lever on the left handlebar before this is felt to take up the spring pressure during the action of declutching.

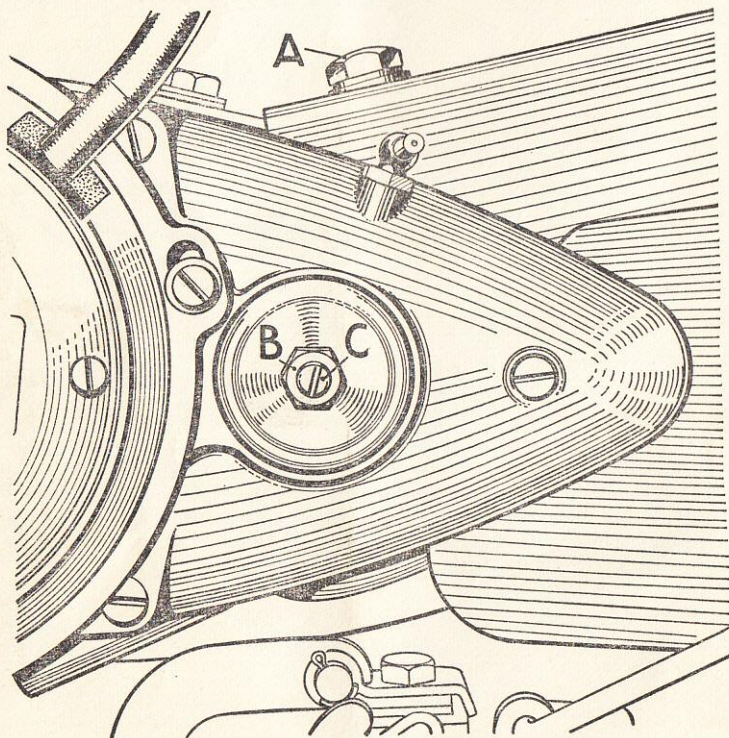


Fig. 8. Clutch control adjustment (Model D1)

The clutch operating mechanism should be greased at regular intervals to maintain it in good condition.

Clutch Dismantling

Before dismantling the clutch the primary chain case cover must be removed as described under Front Chain on page 20. The clutch springs must be compressed by pushing on the outer plate until the circlip retaining the spring pressure

plate can be removed. Care must be taken to see that the springs are properly compressed as damage may result if they are released suddenly and the job is best accomplished with the aid of special clutch spring compressing tool 61-3191. When the spring pressure plate is removed the three cork and two plain clutch plates can be withdrawn. If the cork inserts are burnt the plates should be replaced. Re-assembly is carried out in the reverse order.

Gearbox

The gearbox, although built in unit construction with the engine, is self-contained as regards lubrication. Engine oil is used for lubricating the gears and primary drive and the correct level is determined by a dipstick incorporated in the gearbox filler plug. (A, Fig. 8.)

When topping up the gearbox pour engine oil in until it just reaches the bottom of the dipstick attached to the plug when the latter is placed in position, so that when it is screwed down the oil level will reach the graduation.

To change the oil in the gearbox remove drain plug *E* (Fig 7) at bottom of gearbox and drain out old oil. Wash out gearbox with flushing oil and refill with new oil through filler hole *A*, to level of dipstick.

WHEELS

Hub Lubrication

Inject grease through the nipples in the centres of the hubs. Do not over-lubricate, or grease may be forced on to the brake linings and cause ineffective brakes. Three or four strokes of the grease gun should be ample. **DO NOT LUBRICATE WITH OIL.**

Hubs

These are fitted with ball journal bearings, and no adjustment is either provided or required. So long as they are adequately lubricated as described above they will give faultless service throughout the life of the machine.

Front Wheel Removal

The brake cable must be uncoupled at the lever on the brake cover plate. Take off two spindle nuts. Then undo the three mudguard stay bolts on the other side (i.e. the nearside) and lift up the nearside fork leg enabling the wheel to drop out at an angle. This procedure is necessary because of the fork anchor plate on the cover plate. Replacement is carried out in the reverse order.

Rear Wheel Removal

Disconnect the speedometer cable from the speedometer gearbox and remove the knurled adjusting nut from the rear brake lever. The rear chain should be disconnected at its spring link and unwound from the rear wheel sprocket. It is advisable to leave the chain in position on the gearbox sprocket. Finally, slacken the spindle nuts sufficiently to allow the wheel to be withdrawn. During re-assembly make sure that the slot in the brake plate extension engages on the locating peg on the fork end and that the chain adjusters are up against the ends of the lugs.

Rear Chain

The rear chain is adjusted by means of screw adjusters in the fork ends at the back of the wheel spindle. First slacken off the knurled rear brake adjusting

nut, as the brake rod may prevent free movement of the wheel. It is not necessary to disturb the speedometer gearbox unit. Slacken off nuts *A* (Fig. 9) and screw the adjusters *B* in or out until the chain tension is correct.

The rear chain should be adjusted with the machine on its stand, i.e., with the rear wheel in its lowest position in the rear suspension. The adjustment is correct when the total up and down movement in the centre of the chain run at its tightest point is $\frac{1}{2}$ in. for plunger frame models and $\frac{3}{4}$ in. for swinging arm frame models.

Make sure that the wheel is hard up against the adjusters when checking, and also that the adjustment is equal on both sides of the wheel so that the latter is in correct alignment in the frame. This can be done either by glancing along the line of both wheels when the front wheel is set straight, or by means of a long straight-edge or the edge of a plank placed along the sides of the wheels. The straight-edge should touch both walls of both tyres.

After adjusting retighten nuts *A* and *B*.

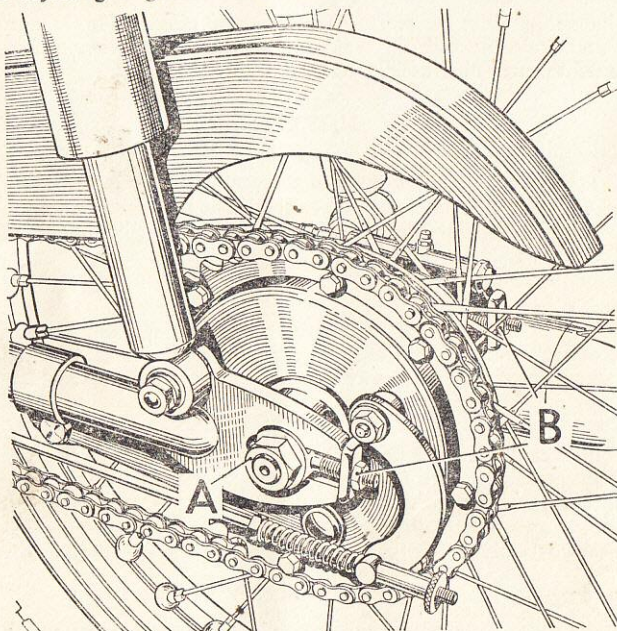


Fig. 9. Rear Chain Adjustment

Brakes

In the case of the rear brake a knurled nut on the brake rod effects any adjustment necessary, and a few turns are all that is required to improve braking efficiency. The front brake is adjusted by means of the knurled thumb nut on the cable stop at the lower end of the forks.

Brake Shoe Removal and Replacement

After the brake plate has been removed from the wheel, the brake cam lever should be detached and the cam spindle pushed in slightly to allow the shoes to clear the brake plate. Insert a screwdriver between the brake shoes at the fulcrum pin and twist the screwdriver.

Place a small lever between one of the shoes and the cover plate and lever the shoe away from the plate until the spring pressure is released. Both shoes can then be lifted away from the cover plate.

The shoes can be replaced by the reverse procedure. Hook the springs on to the shoes and place the ends of the shoes in position on the fulcrum pin and cam lever. Then push the shoes outwards until the springs pull them into their correct position.

Note: The brake shoe springs are quite strong and care should be taken that the fingers are not trapped by the brake shoes during these operations.

Brake Shoe Relining

With the shoes removed the linings can best be removed by drilling away the heads of the rivets and punching the shanks out to the inside of the shoe with a suitable drift.

New linings are die pressed to suit the curvature of the shoes, but will require drilling and counter-boring for the rivets. Position the lining and hold it in place at one end by means of clamps. Using the holes in the shoes as guides, drill holes of the correct size for the rivets adjacent to the clamp. Turn the shoe over, and counter-bore the holes just drilled sufficiently deep so that the rivet heads will stand below the lining surface; this is important, since the rivets will otherwise score the brake drum.

Insert the rivets into the holes and rivet them over on the inside of the shoe. This is easily accomplished by holding in a vice a short length of rod, whose diameter is equal to that of the rivet head, and using it as an anvil upon which to rest the rivet head while hammering the shank over. This will also make sure that the rivets do not stand proud of the lining.

Move the clamps to the next pair of holes, taking care that the lining is kept in firm contact with the shoe the whole time, and repeat the above procedure. When the lining is finally riveted down, bevel off the ends of the linings and file off any local high spots.

Complete relined brake shoes are available through the Exchange Replacement Service which operates in the British Isles only.

FRAME AND FORKS

Forks

D1. There is no adjustment for the telescopic forks fitted to this model. The only maintenance required, apart from the routine check up on the tightness of nuts and bolts, is regular lubrication of the fork sliding members via the grease nipples attached to each fork leg as indicated on page 22.

Application of the grease gun to these nipples charges the annular space between the fixed outer member and the sliding inner member of each fork leg, and several strokes of the grease gun should be given every 1,000 miles in order to ensure that the supply of lubricant is maintained.

D7. This model is fitted with hydraulically damped front fork, the capacity of each leg being 70 c.c. (See page 21.)

Protective Gaiters

These are fitted to prevent the entry of foreign matter into the moving parts and are a *push fit* on the fork tubes. Periodically remove these gaiters, cleaning and greasing the sliding members.

Steering Head Adjustment

It is first necessary to raise the front wheel clear of the ground—this can best be done by lifting the machine on its stand and putting some small weight on the

saddle or carrier causing the rear wheel to rest on the ground. Test for play by grasping the fork legs and attempting to push them backwards and forwards. If play can be detected the head bearing requires adjustment. Slacken the top clip bolt *A* (Fig. 10). On machines fitted with a bulb horn unscrew this item and lift off the steering head dust cover. On other machines the dust cover is held in position by a central screw.

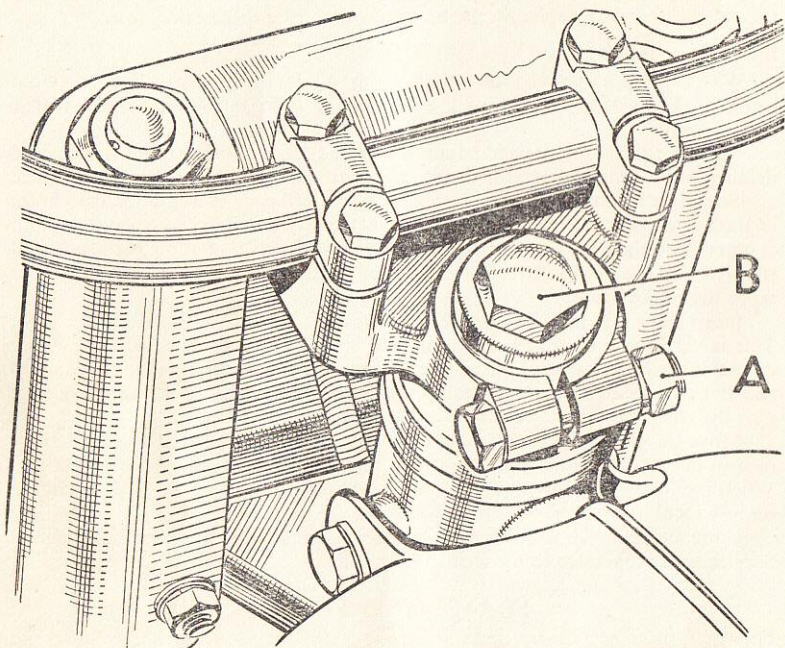


Fig. 10. Model D7. Front Fork and steering head

D1 Model only

Slacken the clip nut *B* on each fork leg so that the bottom yoke is free to take up a new position. Then release the locknut and tighten the adjusting nut underneath until any slackness has been taken up. Do not over-tighten or steering will be stiff and the ball races may be damaged. Finally retighten the locknut. Tighten the clip bolt and nuts.

Note. Should both nuts be removed for any reason take care to see that the thicker adjusting nut is replaced first with its recess downwards.

Model D7

Release the steering head clip bolt *A*, Fig. 10, and tighten adjuster nut *B* until any slackness has been taken up. Do not over-tighten or steering will be stiff and the ball races may be damaged. Finally, retighten the steering head clip bolt *A*.

Rear Suspension (Model D1)

To dismantle the rear suspension, first detach the rear wheel.

Next detach the silencer by removing the right hand nut at (B, Fig. 11). Then release pinch bolts A and B.

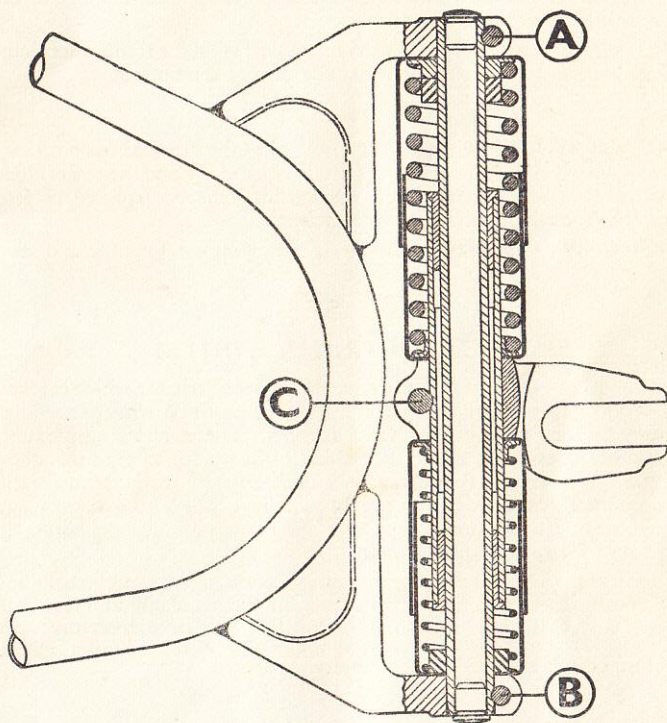


Fig. 11. Rear Suspension Unit (D1)

The central columns of the suspension units can then be tapped out from underneath and withdrawn through the top lugs. When this is done the remainder of each unit can be slid off sideways from the bottom lug, and laid on a bench for complete dismantling, which consists merely of taking the various pieces apart, carefully noting their respective positions for subsequent reassembly. The wheel spindle brackets which, together with the bearing sleeves to which they are attached, form the spring plungers, can be separated from the sleeves when the

pinch bolts *C* are withdrawn. Note that each of these engages in a notch in its bearing sleeve and also that the studs at *A* and *B* similarly engage in notches in the central columns. These are essential for correct engagement and locking, and particular attention must be paid to their proper alignment on reassembly.

Rear Suspension (Model D7)

The two suspension units each comprise a telescopic damper unit and a totally enclosed coil spring. The hydraulic dampers require no attention whatsoever. They are sealed during manufacture and if they suffer damage or become ineffective they must be replaced.

The complete suspension units can be removed from the frame after detaching the pivot bolts at the top and the retaining nuts at the bottom.

Frame

The frame will not require any attention unless the machine has been involved in an accident. It should then be inspected very carefully and the wheel alignment checked. If the frame is damaged or distorted it must be replaced or returned to your B.S.A. dealer for rectification if feasible.

The rear fork silent-bloc bushes have an extremely long life and the need for replacement is unlikely.

THE ELECTRICAL SYSTEM

The equipment consists of a permanent magnet alternator which on the basic model supplies direct lighting. On those machines fitted with battery lighting the alternator charges a battery via a rectifier. The electrical apparatus (i.e., lights and horn), is connected to the battery. It is the function of the alternator and rectifier to maintain the battery in a charged state for all load conditions. This is accomplished by a system of coil switching, which adjusts the generator output according to the load. The coil design also ensures regulation of the output over the working speed range.

In the case of Model D7 the equipment consists of a permanent magnet alternator which provides directing lighting for the headlamp and also a trickle charge for the battery through a rectifier. The headlamp therefore does not operate when the engine is stationary, although current for the other items (pilot light, horn, etc.) is supplied by the battery.

Battery

Access to the battery (Model D7) is obtained by removing the two nuts and washers under the the rear of the dual seat so that the seat can be lifted and pulled away to the rear. Remove the two small bolts securing the top strap to gain access to the top of the battery, and by merely unscrewing the two battery terminals the battery is left free to be lifted out.

About once a month take off the battery lid, remove the filler plugs from each of the cells and examine the level of the electrolyte. If necessary, add sufficient distilled water to bring the level of the electrolyte up to the top of the separators. Do not use tap water and do not use a naked light when examining the conditions of the cells.

The condition of the battery should occasionally be checked by taking hydrometer readings of the specific gravity of the electrolyte. If distilled water has been added a reading should not be taken until after the machine has been

used, to ensure that the electrolyte is thoroughly mixed. The specific gravity readings should be as follows:

Temp.	Fully Charged	Requires Charging
120°F.	1.270	1.220
100°F.	1.280	1.230
80°F.	1.285	1.235
60°F.	1.295	1.245
40°F.	1.305	1.255
20°F.	1.310	1.260
0°F.	1.320	1.270
-20°F.	1.325	1.275

The readings for each of the three cells should be approximately the same. If one cell gives a reading very different from the others it may be that the electrolyte has been spilled or has leaked from this particular cell or there may be a short circuit between the plates. If leakage from the top of the battery is known to have occurred, due to a spill, the battery should be topped up with battery acid of suitable specific gravity.

Never leave the battery in a discharged condition as it will suffer permanent damage. When standing idle the battery should be given a freshening charge at least once a month. Twelve hours at one amp. is recommended. Keep the top of the battery clean and smear the terminals with vaseline to prevent corrosion.

A positive earth wiring system is employed. Make sure that the battery is connected correctly, i.e. with the positive or + side of the battery connected to earth.

Running Without a Battery

If it is required to run the machine without the battery in position, unscrew the terminals and remove the battery. The negative lead (brown) which previously went to the battery must be insulated, and the stop light must be disconnected. If this is not done the rectifier may be seriously damaged.

The machine must only be run without a battery in an emergency. The lighting equipment can be used but if the engine is revved excessively the bulbs will blow and serious damage may result to the lighting equipment.

Alternator

The flywheel comprises six high grade cast magnets with laminated pole pieces. It is *self-keeping* and may be separated from the stator without any loss of magnetism.

The laminated stator has six salient poles, four of which are wound with coils of enamelled copper wire.

The set requires very little maintenance, and if the following notes are observed the life of the machine should prove trouble free. Check and if necessary readjust the contacts once ever 5,000 miles (8,000 km.) as described on page 11.

Occasionally clean the contacts by inserting a dry smooth piece of paper between them and withdrawing while the contacts are in the closed position. Do not allow the engine to run with grease or petrol on the contacts or they will start to burn and blacken. If they do, lightly polish with a piece of smooth emery cloth.

Smear the cam lubricating pad with a little grease every 5,000 miles (8,000 km.). Do not run with a faulty or damaged high-tension lead, and occasionally clean away mud and dirt from around the high-tension insulator.

If the Unit requires any attention beyond the replacement of contact points and condenser, it is recommended that the complete machine should be sent to an authorised Wico service station.

Rectifier (Battery Set only)

This is fitted between the toolbox and the battery in a position that ensures air-cooling when the machine is moving.

It is important not to obstruct the air flow to the rectifier by the fitting of any additional accessories.

Provided the leads are securely attached to the rectifier no service or adjustment should be required.

Contact Breaker and Stator Unit

To remove this, first take off the contact breaker cover plate which is held in position by two screws. Remove the central screw holding the cam *A*, Fig. 2, and pull the cam out, then lift out the cam key. Then remove the three screws *D* holding the contact breaker housing. The whole unit can then be lifted off with the housing.

Removal of Generator

This should not be attempted by the private owner unless B.S.A. Service Tool number 61-3188 flywheel extractor is used as described below, otherwise serious damage to the mainshaft is almost inevitable.

Before proceeding to extract the flywheel from the mainshaft, make sure that the cam key has been removed from its keyway. Then remove the central nut and its shakeproof washer. Screw the B.S.A. extractor on to the exposed thread as *far as it will go*. Finally, turn the central extractor bolt with a suitable spanner until the flywheel is drawn from its taper.

Electric Horn

The horn is adjusted at the works to give its best performance and will give a long period of service without any attention. If it becomes uncertain in action, giving only a choking sound, or does not vibrate, it does not follow that it has broken down. First ascertain that the trouble is not due to some outside source such as, a discharged battery, or a loose connection or short circuit in the wiring. If none of the previous suggestions prove successful, the horn may be readjusted as follows:

Remove the rubber plug in the horn body; this will expose the adjusting screw. A slight turn to left or right while depressing the horn button will enable the best note to be obtained. Finally replace the rubber plug.

If the horn still gives trouble it should be removed and returned to the manufacturers.

Headlamp

The lamp front, together with the reflector and bulb assembly, is secured to the main lamp casing by means of a slotted screw under the lamp. To replace a bulb (or battery on direct lighting models), therefore, it is only necessary to loosen the screw until the rim can be removed.

To replace the double filament bulb, the small tabs projecting from the base of the reflector must first be bent downwards so that the bulb assembly bracket can be removed by a slight anticlockwise rotation. When inserting this bulb the offset (dip) filament should be uppermost. (See Fig. 12.)

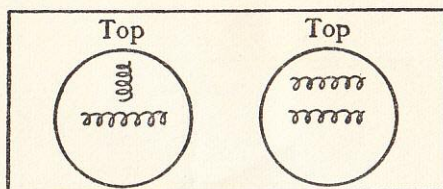


Fig. 12. Double filament bulbs

The best way of checking the setting of the lamp is to stand the motor cycle in front of a light coloured wall at a distance of about 25 feet. If necessary, slacken the bolts securing the headlamp and move the lamp until, with the main driving light switched on, the beam is projected straight ahead and parallel with the ground. With the lamp in this position, the height of the beam centre on the wall should be the same as the height of the centre of the headlamp from the ground.

Parking Battery

The headlamp used with A.C. direct lighting equipment includes a dry battery (Twin Cell, No. 800) for parking lights. The battery is positioned upside down in the holding bracket, the vertical battery strip making contact with the battery bracket at the rear of the lamp and the horizontal battery strip rests on top of the lower contact.

Rear Lamp

A single bulb is used with direct lighting sets plus two screw-in stop light bulbs with battery sets.

The transparent red plastic portion of the lamp can be removed by unscrewing the two countersunk screws.

Stop Light Switch (battery set only)

This is operated by the brake rod through a spring. It is desirable to see that any mud or grease is periodically cleared away from the switch, and the operating mechanism should be oiled occasionally with thin oil.

GENERAL NOTES

The wiring is connected by means of snap connectors at various convenient places on the machine and it is desirable occasionally to check it over and make certain that these connectors are tight.

BULB TYPES

Headlamp (main bulb)	D*	6 volt, 24/24 watt.
Headlamp (main bulb)		6 volt, 24/24 watt.
Headlamp (pilot bulb)	D	2.5 volt, .25 amp.
		Screw fitting.
Headlamp (pilot bulb)		6 volt, 3 watt.
		Screw fitting.
Rear lamp bulb	D	6 volt, 6 watt.
<i>Rear and Stop lamp incorporating three bulbs</i>		
Rear lamp bulb		6 volt, 6 watt.
Two Stop light bulbs		6 volt, 0.5 amp.
		Screw fitting.

* D indicates direct lighting set

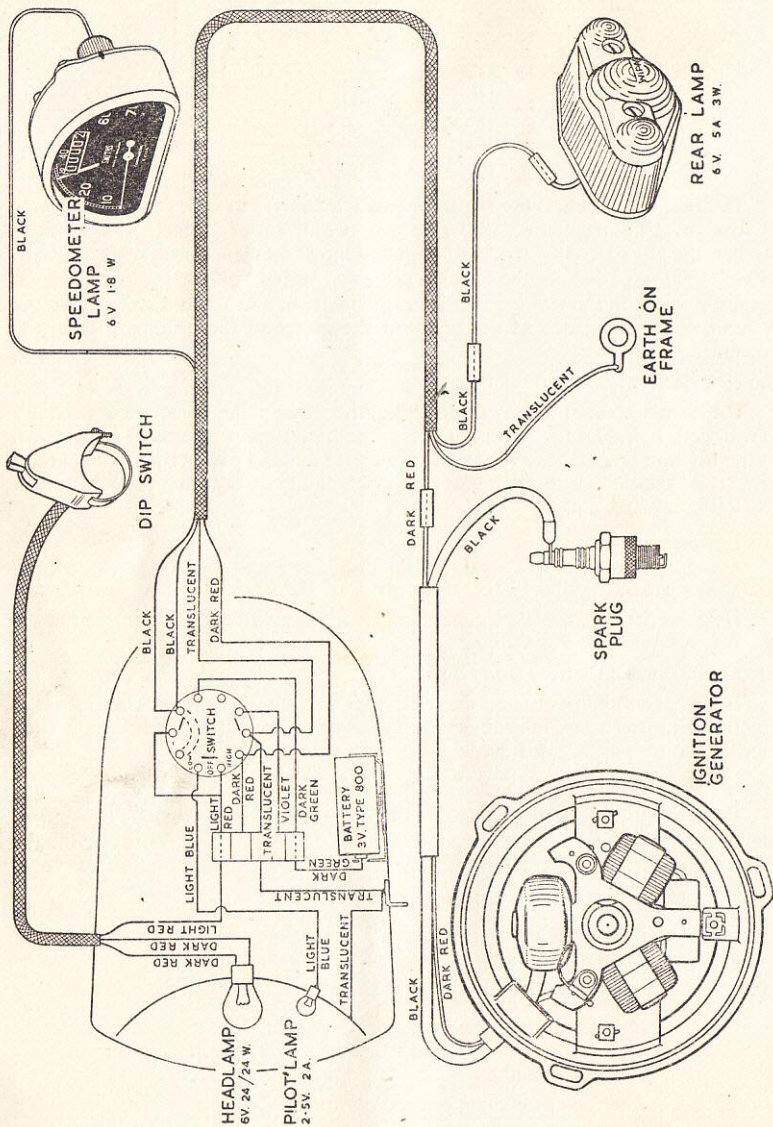


Fig. 13. Wiring Diagram (Direct Lighting)

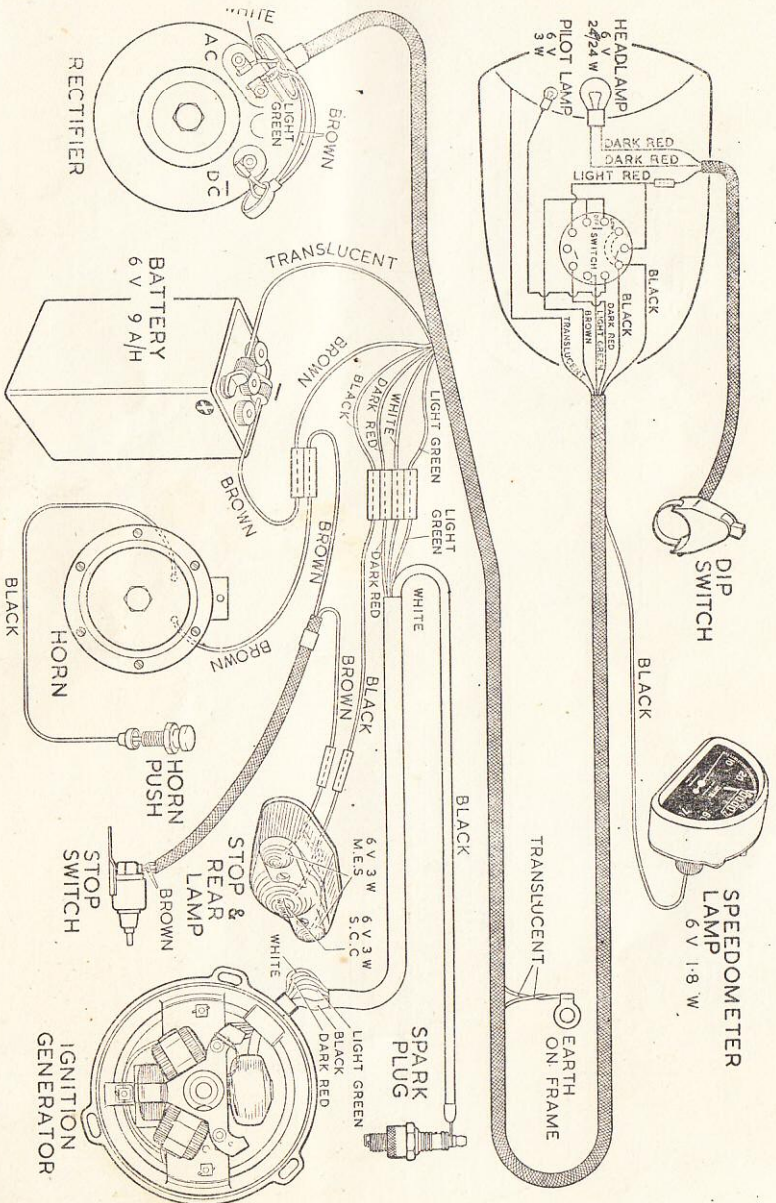


Fig. 14 Wiring Diagram Battery Lighting (D1 only)

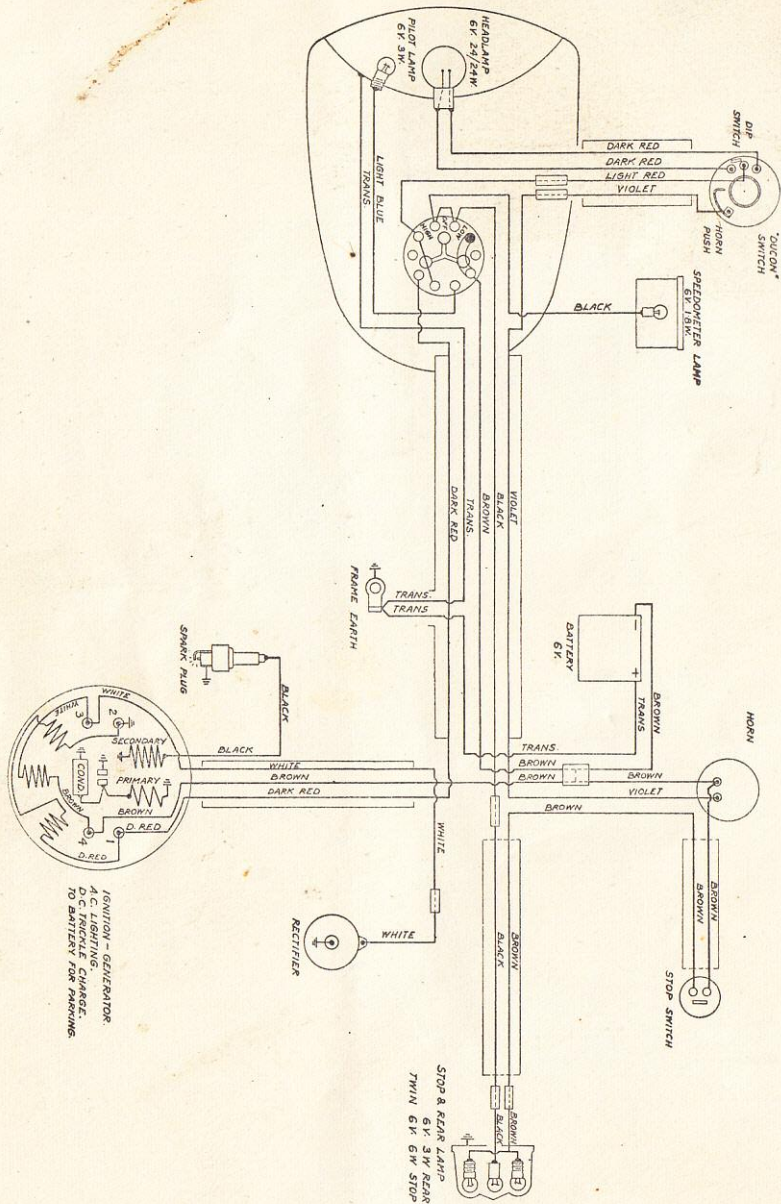


Fig. 15 Wiring Diagram Battery Lighting (D7 only)

B.S.A. MOTOR CYCLE SPARES STOCKISTS



Save time and postage by contacting your nearest B.S.A. Stockist for B.S.A. Spare Parts, Spare Parts Catalogues, Instruction Books, Transfers, etc.

All B.S.A. Dealers carry stocks of B.S.A. Spare Parts but the following appointed Stockists maintain a comprehensive range.

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Aberdeen	J. Dawson	24-26 Thistle Street	25556	
"	George Cheyne (Cycles) Ltd.	147/149 Holburn St.	50341/2	Motobike, Aberdeen.
Aberystwyth	Gwalia Motor Co.	North Parade	525	
Accrington	Bill Snape Ltd.	379 Blackburn Road	4724	
Aldershot	Phillips Bros. (Aldershot) Ltd.	Birchett Road	1111/2	Phillips, Cycles, Aldershot.
Alfoa	J. G. Robertson	55-57 High Street	193	
Andover	Corbett & Ellis (Andover) Ltd.	Weyhill Road	2991	
Ashington	Mains of Ashington	Laburnum Terrace	3204	
Aylesbury	Eborn's Garage	44 Walton Street	3150	Eborn's,
Banbury	Trinder Bros.	2 & 3 Broad Street	2546	
Barnsley	T. Garner & Son	Sheffield Road	2866	
Barnstaple	Bob Ray Ltd.	43 High Street	4266	
Bath	R. U. Holoway & Son	32-33-34 St. John's Road Bathwick.	5084/64101	
Bedford	The Imperial Cycle Co.	58 St Loyes	2374	
Belfast	W. J. Chambers & Co.	106 and 108, Donegall Pass	27253/4	Fastmote, Belfast.
Biggleswade	Bryants	25, 27, 72 and 74, Shortmead Street	3108	
Birkenhead	Bob Simister Ltd.	540 New Chester Rd., Rock Ferry.	1452	Rock Ferry
Birmingham	County Cycle & Motor Co. Ltd.	266 Broad Street 104 Bath Row (Repairs) (closed Saturday 1 p.m.)	Mid. 2671 Mid. 2817	
"	C. E. Cope & Sons Ltd.	481-487 Hagley Road, Edgbaston 17	Bearwood 2246/7	
"	Shovelbottom's Ltd.	376 Ladypool Road, Sparkbrook 12	South 2212	
"	Aston Auto Motors	172 Aston Road 6	Aston Cross 3201/2	
Blackburn	S. & G. Motor Cycles (Blackburn) Ltd.	15-17 Great Bolton St.	6678	
Blackpool	J. Hall & Son	102-6 Devonshire Rd., (opp. School)	22130	
Blandford	The Badger Garages Ltd.	Salisbury Road	615	
Bolton	Charlie Robinson	119 and 121 Higher Bridge Street	3931	
Boscombe, Bournemouth	Craze Bros.	473 and 475 Christchurch Road	Boscombe 33231/2	
Bradford	C. Sidney Ltd.	107 Manningham Lane	29889	
"	J. K. Hurst	41 Wakefield Road	22543	
Bridgwater	Anderson & Wall	18 St. Mary Street	2416	Anderson & Wall, Bridgwater

B.S.A. Motor Cycle Spares Stockists—continued

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Brighton	Redhill Motors (Brighton) Ltd.	104 North Road	5281	
Bristol	S. J. Fair Motors Ltd.	201-3 Cheltenham Rd.	4-6238/4-1015	
Bromsgrove	Harold Tozer (Broms-grove) Ltd.	110 Birmingham Road	3228	
Bury St Edmunds	Barclay Motors	Kings Road Corner	2345/9	
Cambridge	King & Harper Ltd.	Milton Road Corner	3201	Motors, Cambridge
Canterbury	Halletts of Canterbury	St. Dunstan's Street	2275/6	
Cardiff	Car Distributors (Cardiff) Ltd.	134-140 City Road	30022	
"	Robert Beven & Son	29-35 Castle Street	27477/8	
Carlisle	W. T. Tiffen & Son	Irishgate Brow	25024	Tiffin, Irishgate, Carlisle.
Carmathen	Eddie Stephens (Motors)	22-23 Water Street	6233	
Castleford	Barrett's Motor Cycles (Castleford) Ltd.	27-35 Aire Street	2983	
Chapel-en-le Frith.	E. W. Bowers	129 Town End	144	
Chatham	Grays of Chatham Ltd.	11-19 High Street	4005	
Chelmsford	Hadlers Garage Ltd.	New Street	4844/5	Hadler, Chelmsford
Cheltenham	Leslie Paynter	Bath Street	2887	
Chester	Davies Bros.	34 Bridge Street	2550	
Chichester	W. Goodridge & Co. Ltd.	East Street	2033	
Clydebank	John A. Weddell	72-114 Dumbarton Rd.	1429	
Colchester	G.B.R. Motors Ltd.	1-2 East Hill	6131/2	
Colne, Lancs.	C. H. Scholfield (Motors) Ltd.	Market Place	859	
Coventry	Coventry Motor Mart Ltd.	86 London Road	22146/7	Coventry Motor Mart.
Crewe	Cooke's Garages (Crewe) Ltd.	10-20 Nantwich Road	2011	Cookes Motors, Crewe.
Croydon	Godfreys Ltd.	228-234 London Road	Croydon 3641/2	Gofrabike, Croydon
Dagenham, Essex.	Reginald Smith	Imperial House, New Road	Rainham 3284/2786	
Dalton-in-Furness	H. Hume	24/26 Ulverston Rd.	25	
Darlington	The Duplex Motor and Cycle Co. Ltd.	10-16 Grange Road	2071	Duplex, Darlington.
"	White Bros.	201/205-9 Northgate	67757	
Dartford	Schweizo Bros.	177 Lowfield Street	4279	
Derby	Ingle's Provincial Garages Ltd.	Wallbrook Road	45289	
Doncaster	W. Cusworth (Doncaster) Ltd.	7 Hall Gate	4594	
Douglas, I.O.M.	Gilbert Harding	18 Duke Street	Douglas 170	
Dudley	Chas. E. Cope & Sons Ltd.	193 High Street	3464/5/6	
Dundee	George McLean Ltd.	Ward Rd., Riverside Drive	5087	Vehicles, Dundee
Dunstable	B. G. England (Dunstable) Ltd.	Halfmoon Hill, London Road	843/4	

B.S.A. Motor Cycle Spares Stockists—continued

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Eastbourne	Jempsons Ltd....	118 Seaside ...	756	Jempsons, Eastbourne.
Edinburgh	J. R. Alexander & Co. Ltd.	10-14 Lothian Road	4455	Motorcycles, Edinburgh.
Elgin (Morayshire)	Farquharsons ...	55-57 High Street ...	7188	Elgin 7188
Enfield	D. J. Shepherd & Co. (Enfield) Ltd.	434-6 Hertford Road, Enfield Highway.	Howard 1631	
Exeter	P. Pike & Co. Ltd.	Alphington Street ...	58241	Piko, Exeter.
Frome	J. Difazio ...	25 Catherine Street	2913	
Gateshead, 8	O. Carmichael & Son ...	75, 83 and 87 High Street West	71815	
Glasgow, C3	Bell Bros. (H.P.) Ltd. ...	215-233 St. George Rd.	Douglas 6414	Douglas 6414 Glasgow
„ C4	J. R. Alexander & Co. Ltd.	264-280 Great Western Road	Douglas 3802/3/4	Alex Moto, Glasgow.
Gloucester	Harpers of Gloucester ...	23a Worcester St. ...	23187	Gloucester 23187
Grimsby	H. J. Gresswell & Sons Ltd.	13-15 Osborne Street	2202	
Guernsey	Millard & Co. Ltd. ...	Victoria Road	777	Millard Motors, Guernsey.
Guildford	E. Pascal (Guildford) Ltd.	11-12 Woodbridge Rd.	Guildford 2274/5/6	
Harrogate	H. Aclam (Prop. H. Baynes)	11 Bower Road	5125	
Harrow	Pinks of Harrow ...	Station Road ...	0044/5 Spares 3328	Pink, Harrow.
Hatfield	W. Waters & Sons Ltd.	32 Gt. North Rd. ...	2255	
Hereford	A. Kear & Co. ...	52b Commercial St.	2239	Kear, Hereford.
Holbeach Lincs.	G. Woodman Ltd. ...	34 Fleet Street	3221	
Hornchurch	T. W. Kirby Ltd. ...	10 Roneo Corner	8785	
Hounslow, Middlesex	Stanley's Motors	46-8 Lampton Road	Hounslow 1949	
Huddersfield	Earnshaw ...	Manchester Road	1232	
Hull	Browns (Witham) Ltd....	47-49 Witham	29802/33990	
„	Jordans of Hull ...	Story Street ...	16131	Gumpton, Hull.
Iford	J. J. Double ...	14 Mildmay Parade, Cranbrook Road	3621 Valentine	
Ilkeston Derbyshire	Ray Gamble ...	Station Road ...	873	
Ipswich	Revetts Ltd. ...	Clarkson Street	53726/7	
Jersey	Colebrooks (J. O. Poingestre)	22½ New St. John's Rd. St. Helier	Central 642	Colebrooks, Jersey
Keighley	Dick Ratcliffe ...	Coldshaw Garage, Haworth.	Haworth 3133	
Kendal	Tom O'Loughlin ...	66 Stricklandgate	315	
Kings Lynn	Peter Guest Ltd. ...	123/5 Wooton Rd. ...		
Kirkcaldy	County Motors (Kirkcaldy) Ltd.	Junction Road	Dysart 5631	
Lancaster	Pye Motors Ltd. ...	Parliament Street	3553	
Launceston	J. Wooldridge & Son	Western Road	21	Wooldridge, Launceston.
Leeds	Watson-Cairns & Co. Ltd.	157/8 Lower Briggate	33024/5	Watson-Cairns, Briggate, Leeds.
Leicester	E. W. Campion & Son Ltd.	Welford Place	58054	

B.S.A. Motor Cycle Spares Stockists—continued

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Lincoln	... Wests (Lincoln) Ltd.	... 116 High Street	... 21262	
Liverpool, 7	Bee Cycle & Motor Co. Ltd.	17-19 Renshaw Street	Royal 6375/6	Bee Cycles, Liverpool
"	3 ... Cundles (Liverpool) Ltd.	41 and 61 Byrom St....	Central 4148	Cundles, Central 4148.
Llwhaden	... James Bowen & Sons	Llwhaden, near Narberth, Pem.	Llwhaden 6	
London, E.6	... Godfrey's Ltd.	... 220 Barking Road, East Ham.	Grangewood 8088	Gofrabike, Forgate.
"	E.6 ... Glanfield Lawrence (Highbury) Ltd.	... 28-32 Highbury Corner	North 2791	
"	E.7 ... Godfrey's Ltd.	... 418 Romford Road, Forest Gate	Grangewood 1234-5	Gofrabike, Forgate.
"	E.8 ... Eleanor Motors	... 265/7/9 Mare Street Hackney	Amherst 5134-3923	
"	N.12 George Grose Ltd.	... 834 High Rd., Finchley	Hillside 2149	
"	N.12 Glanfield Lawrence Ltd.	Junction Great North Road and North Circular Road	Finchley 0091	Glanfin, Norphone London.
"	N.15 Godfreys Ltd.	... 94-96 High Road, Sth. Tottenham.	Sta. 9960	Gofrabike, London.
"	N.W.1 J. Grose Ltd.	... 379-381 Euston Road	Euston 5231	
"	N.W.10 Slocombs Ltd.	... 269 Neasden Lane, Neasden.	Gladstone 3355	
"	S.E.11 Writers Ltd.	... 51-61 Kennington Ln.	Reliance 1362	
"	S.E. 13 F. Parks & Son Ltd.	... 404 Lewisham High St.	Lea Green 0535	
"	S.E.15 West End Motors Ltd....	171 High St., Peckham	Newcross 2589	
"	S.E.18 Cleare & Co. Ltd.	... 1 & 125 High Street	Woolwich 0174	
"	S.W.6 Claude Rye Ltd.	... 897-921 Fulham Road, Fulham.	Renown 6174	Ryebikes, Walgreen. London.
"	S.W.9 Pride & Clarke Ltd.	... Stockwell Road	Brixton 6251	
"	S.W.11 Owen Bros.	... 19 Battersea Rise, Clapham Junction	Battersea 7816/7	
"	S.W.17 Elite Motors	... 951-961 Garratt Lane, Tooting Broadway.	Balham 1200	
"	W.1 Godfreys Ltd.	... 208-210 Great Portland Street.	Euston 4632/4	Gofrabike, London
"	W.3 Whitby's of Acton Ltd.	273 The Vale, Acton	Sh. Bush 5355/6	
"	W.5 Kays of Ealing Ltd.	... 8-10 Bond Street	Ealing 2387	Sparesokay, Ealux, London.
"	W.12 Turners Stores	... 81-83 Goldhawk Road, Shepherds Bush	Sh. Bush 2436	
Lowestoft	... R. Wright	... 67-69 London Rd., Sth	645	
Macclesfield	... A. Watling	... 49 Buxton Road	3592	
Maidstone	... Redhill Motors (Maidstone) Ltd.	The Broadway...	3096	
Manchester, 3	Tom Davies (Motors) Ltd.	233 Deansgate	Blackfriars 0681	
"	... Fred Fearnley Ltd.	... 692-4 Ashton Old Rd.	East 1445/6	Fernbike, Manchester.
"	... Alex Parker	... 31/33 Palatine Road Northenden	Wythenshaw 2062	
Mansfield	... Henstocks	... 128 Chesterfield Rd.	329	Henstock 329 Mansfield.
Middlesbrough	J. T. Dickinson (Middlesbrough) Ltd.	150-162 Lindhorpe Road.	3861	Payacob Middlesbrough.
Neath	... Fred Rist	... 16 Windsor Road	Neath 780	

B.S.A. Motor Cycle Spares Stockists—continued

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Newcastle-on-Tyne	Dene (Newcastle) Motor Co. Ltd.	Haymarket ...	2-9165/6	Ened, Newcastle-on-Tyne.
Newton Abbot	J. E. Green & Co. ...	87 Queen Street ...	653	
Newport, Mon.	R. J. Ware & Sons ...	69 Commercial St. ...	66206	
Norwich	Chapmans (Norwich) Ltd.	38-42 Duke Street ...	24727	
Nottingham	E. W. Campion & Son Ltd.	Arkwright Street and Queen's Road	83444	
Oldham	Alan Taylor (Northern) Ltd.	192 Manchester St. ...	Main 4456	
Oswestry	Roy Evans ...	Willow Street ...	1144/5	
Oxford	H. F. Temple ...	69 High Street, St. Thomas	2485	
"	John Avery ...	228/230 Banbury Road	57362/3	
"	Faulkener & Son ...	12 Cardigan Street ...	57279	
Parkstone	Bob Foster ...	472-5 Ashley Road ...	3500	
Perth	M. Shaw & Sons ...	143 High Street ...	483	
Peterborough	Burrows Bros. ...	55-57 Westgate ...	2154	
Plymouth	P. Pike & Co. Ltd	Millbay Road ...	63018	Plymouth Piko, Plymouth.
Pontardulais, Glam.	T. Griffiths ...	Forest Garage ...	323	Pontardulais
Portsmouth	Jenkins & Purser Ltd.	277-281 Copnor Rd.	2339	
"	Glanfield Lawrence ...	147-157 Fratton Rd.	74331	
Preston	Loxham's Garages Ltd.	Central Garage Charnley Street, Fishergate.	4242	Sales Dept. Loxham's, Preston. Service Dept. 4243
Pulborough	Gray & Rowsell...	Bury Gate ...	Bury 4	
Radcliffe	Will Lord ...	115 Blackburn Street	2002	
Reading	Phillips & Bloomfield Motors Ltd.	10-24 South Street	2635	
"	Stocker & Shepherd Ltd.	131 Oxford Road and Weyland Street	2212-3983	
Redhill	The Redhill Motor and Cycle Works Ltd.	50/54 Brighton Road...	327	
Rotherham	Ernest Cross ...	55-59 Drummond St.	Rotherham 3987	
Salisbury	Pankhurst (Weymouth) Ltd.	78 Exeter Street	Salisbury 5222/3	
Scarborough	E. Andrew ...	Roscoe Street	Scarborough 1857	
Sevenoaks	Angus Motor Cycles	Station Parade	3338	
Sheffield, I	Walter Wragg Ltd.	Stanley Works, Wellington Street.	26098	26098 Sheffield.
Shrewsbury	J. R. Meredith ...	Coleham Head	6529	
Sittingbourne	Scoones, Garage	9 West Street	66	Scoones, Sittingbourne.
Slough	Sid Moram ...	Wexham Corner, High Street.	Slough 23767	
Southampton	Alec Bennett Ltd.	152 Portswood Road	54081/2/3	
Southport	H. F. Brockbank	62 King Street	5054	
Southsea	Percy Kiln ...	65-67 Elmgrove	P'mouth 23734	
St. Helens, Lancs.	Geoff Duke Ltd.	Greenfield Rd. Garage	3918	
St. Ives, Hunts	Hallens (Hunts.) Ltd.	The Broadway	St. Ives 3071	Hallens, St. Ives
Stockport	Theobald & Coppack	6 Chestergate	2843	Theobald Coppack, Stockport.
Stockton-on-Tees	T. Cowie Ltd. ...	49-50 Brunswick St.	67534	

B.S.A. Motor Cycle Spares Stockists—continued

Town	Name of Stockist	Address	Telephone No.	Telegraphic Address
Stoke-on-Trent	J. & N. Bassett ...	Howards Place, Shelton.	2890	
Stourbridge	Pearson's Cycle Depot...	31 Market Street ...	5677	
Sunderland	Dunns Garage (Sunderland) Ltd.	Wheatsheaf Corner, North Bridge St.	57666	
Swansea	... Handel Davies Ltd. ...	230 Oxford Street ...	50311	
Swindon	... Easters of Swindon ...	73-75 Cricklade Road	4196	
Taunton	... W. P. Edwards (Motors) Ltd.	Station Road ...	2943	Edwards, Motor Cycles, Taunton
Thames Ditton	Comerfords Ltd. ...	Oxford House, Portsmouth Road	Emberbrook 5531	
Torquay	... P. H. Sharam Ltd. ...	244-6 Union Street ...	4184 & 7255	
Troon, Ayrshire	Cooper Bros. ...	125-129 Templehill ...	925	
Truro, Cornwall	W. H. Collins ...	Kenwyn Mews ...	Truro 2168	
Tunbridge Wells.	G. E. Tunbridge Ltd. ...	21 London Road ...	416	Motors, Tunbridge Wells.
Twickenham...	C. A. Blay ...	192-9 Heath Road ...	Popesgrove 2103 & 1435	
Uxbridge	... J. H. Miles Ltd. ...	60 High Street ...	Uxbridge 6000	
Wakefield	... Parkinsons (Wakefield) Ltd.	38-40 Ings Road ...	2087	
Walsall	... The Motor Cycle Mart (Walsall) Ltd.	12 Ablewell Street ...	3363	
Warrington	Jack Frodsham Ltd. ...	37a Winwick Street ...	34713	
Watford	... Lloyd Cooper & Co. ...	61 Queen's Road ...	2125	Lloyd Cooper, Watford.
Westcliff-on-Sea.	J. Costin & Sons ...	233-5-7 London Rd. ...	Southend 42215	
Weston-super-Mare	Wyvern's of Weston Ltd.	3 Locking Road ...	524	Wyvern's, Weston-super-Mare
Weybridge	... W. L. Lewis & Sons ...	51 Church Street ...	2210	
Weymouth	... Tilleys ...	9 Frederick Place ...	72	
Whitehaven, Cumberland	Mark Taylor ...	21 King's Street ...	252	
Wolverhampton	C. E. Cope & Sons Ltd.	168-9 Stafford St. ...	24605/6	
Worcester	... W. J. Bladder & Son ...	52 Sidbury ...	2438	Bladder, Sidbury, Worcester.
Worksop	... Ezra Sugden Ltd. ...	109 Gateford Road ...	3053	
Yeovil	... The Yeovil Motor Mart	Hendford ...	267	
York	... C. S. Russell (York) Ltd.	Lawrence Street ...	23793	Russell, Lawrence Street, York.

PROPRIETARY INSTRUMENTS FITTINGS & ACCESSORIES

No expense is spared to secure as standard equipment the most suitable and highest quality instruments and accessories. Nevertheless, the Company's guarantee does not cover such parts, and in the event of trouble being experienced the parts in question should be returned to and claims made direct on the actual manufacturers, who will deal with them on the terms of their respective guarantee, as follows:

Carburettors:

Messrs. Amal Ltd., Holford Works, Perry Barr, Birmingham.

Dual Seats:

Messrs. Metal and Plastic Compacts Ltd., Armoury Road, Small Heath, Birmingham.

Electrical Equipment:

Messrs. Wico-Pacy Sales Corporation Ltd., Bletchley, Bucks.

Batteries:

Messrs. Joseph Lucas Ltd., Birmingham.

Spring Seat Saddles:

Messrs. Wrights Saddle Co. Ltd., Dale Road, Selly Oak, Birmingham.

Speedometers:


Messrs. Smiths Motor Accessories Ltd., Cricklewood, London, N.W.2.

Tyres:

Messrs. Dunlop Rubber Co. Ltd., Fort Dunlop, Birmingham.


SPECIAL NOTE

Claims under guarantee whether to B.S.A. Motor Cycles Ltd. or any of the manufacturers listed above, should be submitted through the B.S.A. dealer from whom the machine was purchased.

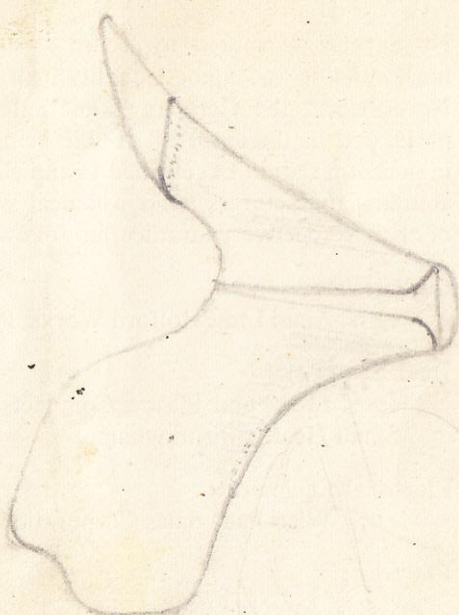



IceniCAM Information Service

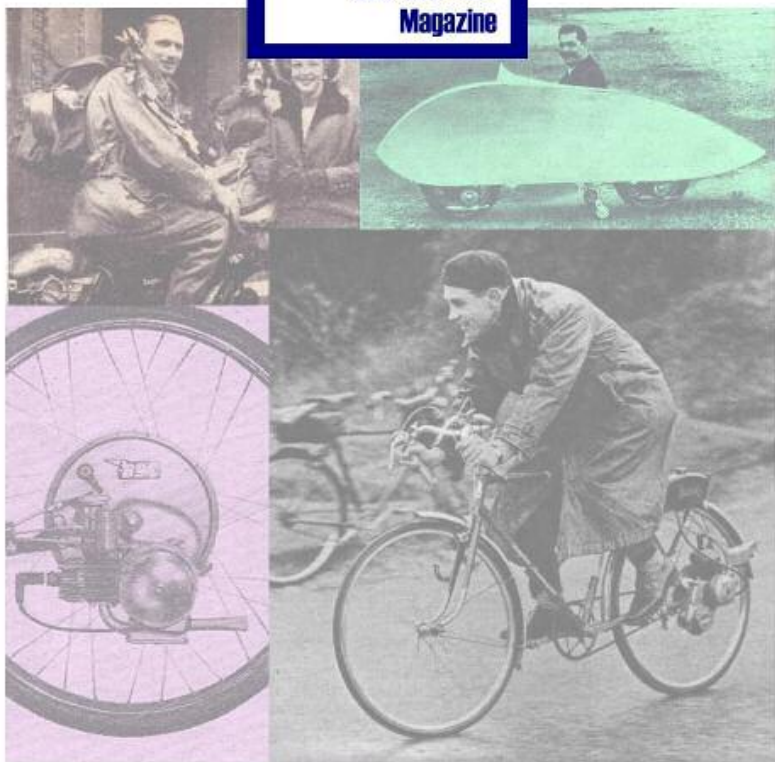

www.icenicam.org.uk