


IceniCAM Information Service

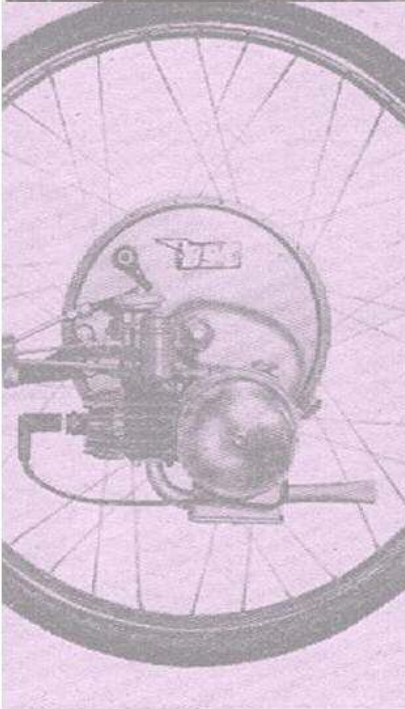

www.icenicam.org.uk

SERVICE INSTRUCTIONS

FOR THE **WIPAC** SERIES 55 MK 8

FLYWHEEL IGNITION GENERATOR

RUNNING MAINTENANCE

The magneto requires very little maintenance and if the following notes are observed the life of the machine should prove trouble free.

Check and if necessary re-adjust the contacts once every 5,000 miles. (See Service Instructions.)

Occasionally clean the contacts by inserting a dry smooth piece of paper between them and withdrawing while the contacts are in the closed position. Do not allow the engine to run with oil or petrol on the contacts or they will start to burn and blacken, and if they do, lightly polish with a piece of smooth emery cloth.

After every 5,000 miles it is necessary to re-lubricate the cam oil pad. This is done by removing the pad and

squeezing and working into it a Summer grade of motor transmission grease which will very closely resemble that used at the factory. Do not use ordinary grease.

Do not run with a faulty or damaged high-tension lead and occasionally clean away mud and dirt from around the H.T. insulator.

If the magneto requires any attention beyond the replacement of contact points and condenser, it is recommended that the complete machine should be sent to us or to an authorised Wico service station. The following information is given for the benefit of those unable to do so :—

GENERAL MAINTENANCE

Checking the Magneto for Spark

If the engine fails to start and there is an indication of the magneto causing trouble, the spark can be checked by holding the H.T. lead $\frac{1}{8}$ " away from a point on the frame. When the engine is kicked over in the usual way, a spark should jump this gap. If no spark is visible, see that the H.T. lead is in good condition and examine the contact breaker.

Make sure there are no metallic particles inside the housing, and that the contacts are perfectly clean, and the contact breaker gap is correct to the recommended setting.

If the contacts are found to be in a burnt or badly pitted condition, a faulty condenser is indicated. If the contact breaker appears to be in order, the stator plate may be removed from the engine complete with coils.

To do this, the following procedure should be adopted :—

Unscrew the two cover securing screws and remove the cover, unscrew the cam screw and withdraw the cam free of the shaft. The small cam key in some instances may leave its keyway, so care should be taken to make sure of this point when taking the cam from the shaft. Next remove the three stator plate securing screws. The stator can now be withdrawn clear of the engine.

The leads of the ignition coil should be examined to ensure that there is no break in the wiring. One lead will be found to be joined to a tab which is clamped underneath one of the nuts which anchor the stator coil assembly to the stator housing. If this is in order, check the sleeved lead of the primary ignition coil which is connected to the front of the insulated post, which also carries the condenser lead and contact breaker return spring.

The screw which locks the insulated post in position will be found underneath the low tension coil on the right-hand side looking at the inside of the stator housing when in its upright position.

There is, however, no need to remove this screw for any of the investigations recommended in these instructions. The second screw lying at a larger radius and appearing over the top of the coil is the earthing screw for the No. 2 terminal on the front of the machine.

If the leads joined to the insulated post are in order and firmly clamped and the tags not earthing in any way, the ignition coil should be in working order. Should it be necessary to completely remove the stator plate entirely, the low and high tension leads should be freed from the insulated terminal boards on the front of the unit and the plugs respectively, the former by the loosening off of the grub screws and withdrawing the low tension leads which are coloured through the rubber insulator. The stator plate assembly should then be entirely free of the engine.

In the unlikely event of the H.T. insulation of the coil breaking down, provided this is not internal, it should be possible to detect signs of charring on the binding tape of the coil. If the absence of spark is due to tracking, track burns may be visible on the insulator gasket.

Replacement of Ignition Coil

The removal of the stator coil assembly is effected by first disconnecting the ignition lead from the coil, then freeing the white, red and green low tension leads from the terminals marked 3, 1 and 4 respectively, and unscrewing the two clamp nuts. The live lead of the primary winding of the ignition coil must then be disconnected from the insulated post by removing the securing screw. The stator coil assembly may then be gently eased off the two stator plate studs.

In order to slide the ignition coil from the iron limb, it is necessary to straighten the small brass tab which will be found on the side of the coil which faces the stator housing. If the coil is grasped firmly in one hand with the fingers under the insulator gasket and on either side of the core, it may be quite easily pulled off.

THE WIPAC GROUP — BLETCHLEY ENGLAND
NORTHERN AREA BRANCH AND SERVICE DEPOT 7 PARK SQUARE, LEEDS

SERVICE INSTRUCTIONS

To refit the ignition coil proceed as follows :—

- (a) Hold the coil in the left hand with the brass contact pointing away from the line of vision and the lead wires projecting downwards from the underside, and drop the leads through the rectangular hole in the insulating gasket, the extended end of which must point in the same direction as the coil tab.
- (b) With the other hand, push the coil core through the coil, making sure that the brass locking tab rivetted to the iron is on the same side as the coil contact. Drive the fibre wedge provided in between the core and the coil, on the same side as the locking tab and bend over the tab.
- (c) Replace the stator coil assembly in position on the stator plate and before pushing right down on the studs, bring the sleeved low tension lead of the ignition coil inside the base of the right-hand stator core stud. This keeps the lead clear of the flywheel rotor. Pass the low tension leads through to the front of the unit. Note also that none of the coil leads become clamped in between the stator and the housing.
- (d) Press the core down firmly and tighten down the two clamp nuts anchoring the ignition coil earth lead tab underneath the left-hand nut.
- (e) Reconnect the sleeved ignition coil lead to the insulated post together with the condenser lead tab and the contact breaker return spring. Firmly screw home the securing screw.
- (f) Reconnect the ignition lead to the H.T. terminal of the ignition coil, and reconnect the low tension leads to the appropriate terminals as follows :—
The white lead to No. 3, green to No. 4 and red lead to No. 1 terminal on the front of the unit.
- (g) Make sure that all tabs are clean and all clamped connections are tight.

IMPORTANT : Bend all stray loops of wire to behind the radius of the stator to ensure they do not foul the rim of the flywheel rotor.

Removal of Condenser

To replace the condenser, remove the condenser terminal nut and free the condenser lead. Unscrew the condenser bracket fixing screw and withdraw the condenser.

Adjustment and Replacement of Breaker Points

The only adjustable part of the magneto is the breaker plate which provides for the setting of the breaker points. To set these points proceed as follows :—

Turn the engine over until the breaker points are fully open and insert the feeler gauge. Slacken off the locking screw which is to be found immediately above the points, and if the gauge is tight, adjust the fixed contact plate, by means of a suitable screwdriver engaged in the recess provided, in an anti-clockwise direction until the correct setting of 0.015" is obtained. Tighten up the fixed contact plate locking screw. The breaker point setting should only be adjusted in the manner described and at no time should the fixed contact plate be bent to provide adjustment. The moving contact is integral with the breaker arm. If the points

need replacement it is recommended that both fixed and moving points be replaced at the same time.

When assembling the moulded breaker arm to the magneto it is necessary to lightly prime the pivot pin with oil or soft grease, and an occasional priming throughout its life will be found to be advantageous.

Care must be taken to put in the correct number of thin spacing washers behind the breaker arm in order to bring the contacts in line with one another. The free end of the contact breaker spring is then anchored to the insulated terminal post with a screw and shake-proof washer. The condenser and primary ignition coil sleeved lead is secured by the same screw and washer. Place one of the spacing washers over the pivot on the outer side of the breaker arm and insert the spring clip in its groove.

The Low Tension Coils

These coils are robust in character and are most unlikely to develop fault. In the event of a fault developing in the coil group, the removal more so than the replacement, of the coil or coils may not be an easy operation, and it is likely that further damage to the windings will occur during the removal process. It is advisable before any steps are taken to remove the low tension coils, that the coils be thoroughly checked and proved beyond doubt to be at fault. The coils are secured to the iron core by means of a varnish adherent assisted by a fibre wedge. Paper formers are used, so damage to the windings can occur when being taken off.

In view of this, it is strongly recommended that should a fault occur in the low tension coil group, that application be made for a coil group replacement already secured to the iron core.

The ignition coil can be removed from the stator assembly as previously described and replaced on the new stator core and coil group replacement. Having completed the coil assembly, proceed as instructed under paragraph "Replacement of Ignition Coil."

Care should be taken to see that the wire connections face toward the front of the machine when assembling the stator coil assembly into the housing.

Any wire loops or wires that could come into contact with the flywheel rotor should be pushed back clear to prevent any fouling or electrical breakdown.

Finally, when connecting the low tension leads of the frame wiring to the magneto generator, make sure that the white, red and green leads are placed on the machine terminals already carrying that colour of lead. This is part of a colour coding scheme, the complete scheme of which is given with the wiring diagram.

The Flywheel Rotor

The robust construction of the flywheel rotor reduces the possibility of any faults on this unit to a minimum. The three powerful magnet inserts are cast in the rim of the rotor and it is not possible to demagnetise them by ordinary usage. No keepers are necessary when the magneto housing and stator are removed. The boss of the flywheel rotor is located on the crankshaft by a keyed taper and locked by a nut and shakeproof washer. It is unnecessary to remove the rotor unless at any time the engine has to be dismantled. A thread cut on the outside of the rotor boss enables it to be removed by the use of a special extractor. When replacing, the rotor must be perfectly clean inside and out.