


AMAL

September, 1964.

LIST No. 621/2 (Issue No. 1)
(Supersedes List No. 463)

SPARES AND SETTINGS TYPE 308 CARBURETTOR

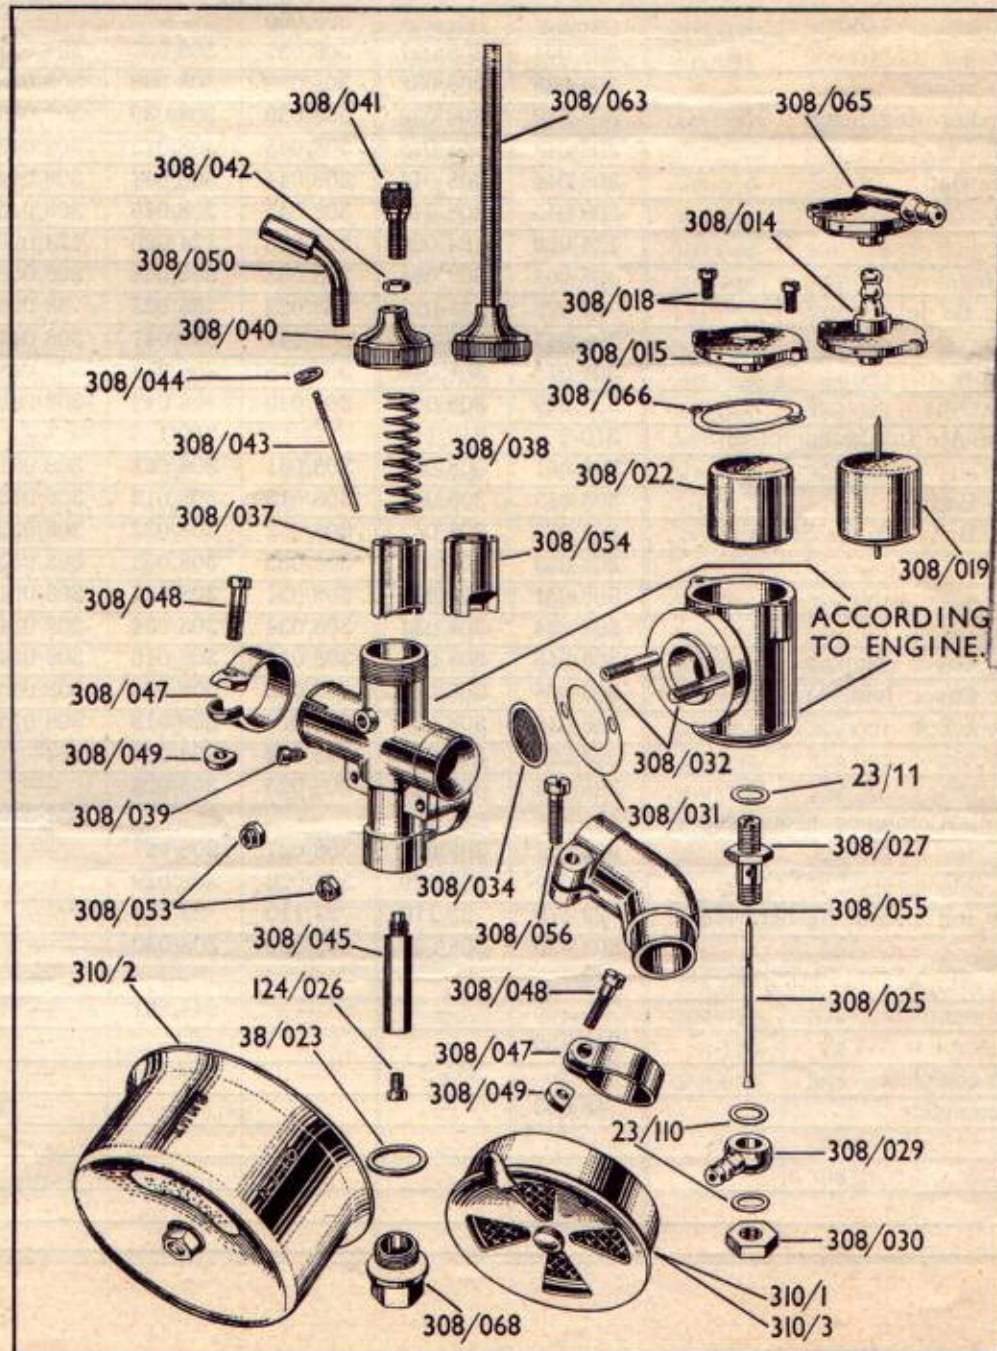

R. G. SINCLAIR,
Date... 24th JULY 1976
No.

**AMAL LTD., HOLDFORD ROAD, WITTON,
BIRMINGHAM 6, ENGLAND**

Phone: Birmingham, BIRchfields 4571.
(P.B.X. 6 lines)

Telegrams: "AMALCARB, 'PHONE,
BIRMINGHAM."

LIST No. 621/2

| Component | 308/1 | 308/2 | 308/4 | 308/5 | 308/6 | 308/9 |
|--|---------|---------|---------|---------|---------|---------|
| Carburettor complete, less Controls & Cables | 308/1 | 308/2 | 308/4 | 308/5 | 308/6 | 308/9 |
| Mixing Chamber Body | 308/001 | 308/003 | 308/001 | 308/002 | 308/003 | 308/001 |
| Mixing Chamber Top Cover | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 |
| Cable Adjuster | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 |
| Cable Guide | — | — | 308/050 | — | — | — |
| Throttle Valve | 308/054 | 308/037 | 308/037 | 308/037 | 308/037 | 308/037 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 309/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 |
| Main Jet | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/047 | 308/047 | 308/047 | 308/047 | 308/047 | 308/047 |
| Outlet Clip Pin | 308/048 | 308/048 | 308/048 | 308/048 | 308/048 | 308/048 |
| Outlet Clip Pin Nut | 308/049 | 308/049 | 308/049 | 308/049 | 308/049 | 308/049 |
| Strangler Gauze Air Intake complete | 310/2 | 310/1 | — | 310/1 | — | — |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 |
| Float Chamber Body | 308/013 | 308/013 | 308/013 | 308/013 | 308/012 | 308/012 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 |
| Flange Washer | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 |
| Filter Gauze | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 |
| Float Chamber Cover complete | 308/015 | 308/015 | 308/015 | 308/015 | 308/014 | 308/014 |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | 308/022 | 308/022 | 308/022 | 308/022 | — | — |
| Float Needle | 308/025 | 308/025 | 308/025 | 308/025 | — | — |
| Float and Needle Combined (Top Feed) | — | — | — | — | 308/019 | 308/019 |
| Needle Seating | 308/027 | 308/027 | 308/027 | 308/027 | — | — |
| Banjo | 308/029 | 308/029 | 308/029 | 308/029 | — | — |
| Needle Seating and Banjo Washer | 23/110 | 23/110 | 23/110 | 23/110 | — | — |
| Banjo Nut | 308/030 | 308/030 | 308/030 | 308/030 | — | — |
| Throttle Cable complete (AF1152) | 224/757 | — | — | — | — | — |
| Throttle Cable complete | — | — | — | 244/891 | — | — |
| Clutch Cable complete | 244/756 | — | — | — | — | — |
| Throttle Lever complete | 355/2 | 355/2 | — | — | — | — |
| Clutch Lever complete | 18/643 | — | — | — | — | — |
| | | | | | | |
| | | | | | | |
| | | | | | | |

| Component | 308/10 | 308/11 | 308/12 | 308/13 | 308/15 | 308/16 |
|--|---------|---------|---------|---------|---------|---------|
| Carburettor complete, less Controls & Cables | 308/10 | 308/11 | 308/12 | 308/13 | 308/15 | 308/16 |
| Mixing Chamber Body | 308/002 | 308/001 | 308/009 | 308/006 | 308/003 | 308/002 |
| Mixing Chamber Liner | — | — | — | — | — | — |
| Mixing Chamber Top Cover | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 |
| Mixing Chamber Top Cover complete .. | — | — | — | — | — | — |
| Cable Adjuster | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 |
| Cable Guide | — | 308/050 | — | — | — | — |
| Throttle Valve | 308/037 | 308/037 | 308/037 | 308/037 | 308/037 | 308/037 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 |
| Main Jet | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/047 | 308/047 | 308/047 | 308/047 | 308/047 | 308/047 |
| Outlet Clip Pin | 308/048 | 308/048 | 308/048 | 308/048 | 308/048 | 308/048 |
| Outlet Clip Pin Nut | 308/049 | 308/049 | 308/049 | 308/049 | 308/049 | 308/049 |
| Strangler Gauze Air Intake complete .. | 310/1 | 310/1 | 310/3 | — | 310/1 | 310/1 |
| Elbow for Intake | — | 308/055 | — | — | — | 308/055 |
| Securing Screw for Elbow | — | 308/056 | — | — | — | 308/056 |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 |
| Float Chamber Body | 308/012 | 308/013 | 308/013 | 308/067 | 308/013 | 308/012 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 |
| Flange Washer | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 |
| Filter Gauze | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 |
| Float Chamber Cover complete | 308/014 | 308/015 | 308/015 | 308/015 | 308/015 | 308/014 |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | — | 308/022 | 308/022 | 308/022 | 308/022 | — |
| Float Needle | — | 308/025 | 308/025 | 308/025 | 308/025 | — |
| Float and Needle Combined (Top Feed) .. | 308/019 | — | — | — | — | 308/019 |
| Needle Seating | — | 308/027 | 308/027 | 308/027 | 308/027 | — |
| Banjo | — | 308/029 | 308/029 | 308/029 | 308/029 | — |
| Needle Seating and Banjo Washer | — | 23/110 | 23/110 | 23/110 | 23/110 | — |
| Banjo Nut | — | 308/030 | 308/030 | 308/030 | 308/030 | — |
| Throttle Cable complete (AF1152) | — | 244/678 | — | — | 244/678 | — |
| Throttle Lever complete | — | 12/524 | — | — | 12/564 | — |
| Throttle Operating Rod complete | — | — | — | 308/093 | — | — |

LIST No. 621/2

| Component | 308/17 | 308/20 | 308/21 | 308/23 | 308/28 | 308/31 |
|--|---------|---------|---------|---------|---------|---------|
| Carburettor complete, less Controls & Cables | 308/17 | 308/20 | 308/21 | 308/23 | 308/28 | 308/31 |
| Mixing Chamber Body | 308/006 | 308/087 | 308/005 | 308/100 | 308/003 | 308/002 |
| Mixing Chamber Top Cover | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 | 308/040 |
| Cable Adjuster | 308/041 | 308/091 | 308/041 | 308/041 | 308/041 | 308/041 |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 |
| Throttle Valve | 308/037 | 308/037 | 308/037 | 308/037 | 308/037 | 308/037 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 |
| Main Jet | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/105 | 308/105 | 308/105 | 308/105 | 308/105 | 308/105 |
| Outlet Clip Pin | 335/022 | 335/022 | 335/022 | 335/022 | 335/022 | 335/022 |
| Outlet Clip Pin Nut | 308/106 | 308/106 | 308/106 | 308/106 | 308/106 | 308/106 |
| Strangler Gauze Air Intake complete | 310/1 | 310/1 | 310/2 | 310/6 | 310/1 | 310/1 |
| Tickler | — | — | — | — | 308/109 | — |
| Tickler Bush | — | — | — | — | 308/110 | — |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 |
| Float Chamber Body | 308/013 | 308/088 | 308/099 | 308/013 | 308/013 | 308/013 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 | 308/053 |
| Flange Washer | 308/031 | 308/094 | 308/031 | 308/031 | 308/031 | 308/031 |
| Filter Gauze | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 |
| Float Chamber Cover complete | 308/015 | 308/089 | 308/014 | 308/015 | — | 308/015 |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | 308/022 | — | — | 308/022 | 308/022 | 308/022 |
| Float Needle | 308/025 | — | — | 308/025 | 308/025 | 308/025 |
| Float and Needle Combined (Top Feed) | — | 308/019 | 308/019 | — | — | — |
| Needle Seating | 308/027 | — | — | 308/027 | 308/027 | 308/026 |
| Banjo | 308/029 | — | — | 308/029 | 308/029 | — |
| Needle Seating and Banjo Washer | 23/110 | — | — | 23/110 | 23/110 | 23/110 |
| Banjo Nut | 308/030 | — | — | 308/030 | 308/030 | — |
| Throttle Operating Rod complete | — | 308/093 | — | — | — | — |
| Tickler Spring | — | — | — | — | 308/111 | — |
| Throttle Lever complete | — | — | — | 314/1 | — | — |
| Throttle Lever complete | 355/4 | — | — | — | 355/5 | 355/1 |
| Clutch Lever complete | — | — | — | 18/643 | — | — |
| Throttle Cable complete | — | — | — | 244/779 | — | — |
| Decompressor Cable complete | — | — | — | 244/780 | — | — |

| Component | 308/32 | 308/34 | 308/35 | 308/36 | 308/39 | 308/42 |
|--|---------|---------|----------|---------|---------|---------|
| Carburettor complete, less Controls & Cables | 308/32 | 308/34 | 308/35 | 308/36 | 308/39 | 308/42 |
| Mixing Chamber Body | 308/003 | 308/119 | 308/119 | 308/087 | 308/003 | 308/006 |
| Mixing Chamber Top Cover | 308/040 | 308/122 | 308/122 | 308/040 | 308/040 | 308/129 |
| Cable Adjuster | 308/041 | 308/041 | 308/041 | 308/091 | 308/041 | — |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 | — |
| Throttle Valve | 308/037 | 308/054 | 308/125 | 308/037 | 308/037 | 308/127 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 |
| Main Jet | 124/026 | 124/026 | 124/126 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/121 | 308/121 | 308/121 | 308/121 | 308/121 | 308/121 |
| Outlet Clip Pin | 335/051 | 335/051 | 335/051 | 335/051 | 335/051 | 335/051 |
| Outlet Clip Pin Nut | 335/052 | 335/052 | 335/052 | 335/052 | 335/052 | 335/052 |
| Strangler Gauze Air Intake complete | 310/1 | — | 310/1 | 310/1 | 310/1 | 310/1 |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 | — |
| Float Chamber Body | 308/013 | 308/012 | 308/013 | 308/088 | 308/013 | 308/013 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/123 | 308/123 | 308/123 | 308/123 | 308/123 | 308/123 |
| Flange Washer | 308/031 | 308/031 | 308/031 | 308/094 | 308/031 | 308/031 |
| Filter Gauze | 308/034 | 308/034 | 308/034 | — | 308/034 | 308/034 |
| Float Chamber Cover complete | — | 308/014 | 308/015 | 308/089 | — | — |
| Float Chamber Cover complete | 308/112 | — | — | — | 308/112 | 308/112 |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | 308/022 | — | 308/022 | — | 308/022 | 308/022 |
| Float Needle | — | — | 308/114 | — | 308/114 | 308/025 |
| Float and Needle Combined (Top Feed) | — | 308/019 | — | 308/019 | — | — |
| Needle Seating | 308/027 | — | 308/027 | — | 308/027 | 308/027 |
| Banjo | 308/029 | — | 308/029 | — | 308/029 | 308/029 |
| Needle Seating and Banjo Washer | 23/110 | — | 23/110 | — | 23/110 | 23/110 |
| Banjo Nut | 308/030 | — | 308/030 | — | 308/030 | 308/030 |
| Tickler | 308/109 | — | — | — | 308/109 | 308/109 |
| Tickler Bush | 308/110 | — | — | — | 308/110 | 308/110 |
| Tickler Spring | 308/111 | — | — | — | 308/111 | 308/111 |
| Throttle Lever complete | 355/2 | 355/2 | 355/5 | — | 355/5 | — |
| Throttle Cable complete | — | — | 244/1306 | — | — | — |
| Flange Stud Nut Washer | 308/124 | 308/124 | 308/124 | 308/124 | 308/124 | 308/124 |
| Throttle Operating Rod and Wire | — | — | — | 308/093 | — | — |
| Float Chamber Seal Washer | — | — | — | 308/133 | — | — |
| Elbow and Strangler Valve Assembly | — | 178/112 | — | — | — | — |
| Throttle Valve Plunger Rod | — | — | — | — | — | 308/128 |
| Adjusting Nut for Ditto | — | — | — | — | — | 308/130 |
| Adjusting Nut Cotter Pin | — | — | — | — | — | 4/060 |

LIST No. 621/2

| Component | 308/43 | 308/44 | 308/46 | 308/47 | 308/48 | 308/49 |
|---|---------|---------|---------|---------|---------|---------|
| Carburettor complete, less Controls & Cables .. | 308/43 | 308/44 | 308/46 | 308/47 | 308/48 | 308/49 |
| Mixing Chamber Body | 308/002 | 308/002 | 308/119 | 308/119 | 309/119 | 308/119 |
| Mixing Chamber Top Cover | 308/040 | 308/040 | 308/122 | 308/122 | 308/122 | 308/122 |
| Cable Adjuster | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 | 308/041 |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 |
| Throttle Valve | 308/037 | 308/037 | 308/125 | 308/125 | 308/125 | 308/125 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 | 308/045 |
| Main Jet | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 | 308/068 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/121 | 308/121 | 308/121 | 308/121 | 308/121 | 308/121 |
| Outlet Clip Pin | 335/051 | 335/051 | 335/051 | 335/051 | 335/051 | 335/051 |
| Outlet Clip Pin Nut | 335/052 | 335/052 | 335/052 | 335/052 | 335/052 | 335/052 |
| Strangler Gauze Air Intake complete | 310/1 | 310/2 | 310/1 | 310/1 | 310/1 | — |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 |
| Float Chamber Body | 308/013 | 308/013 | 308/013 | 308/013 | 308/013 | 308/013 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/123 | 308/123 | 308/123 | 308/123 | 308/123 | 308/123 |
| Flange Washer | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 | 308/031 |
| Filter Gauze | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 | 308/034 |
| Float Chamber Cover complete | 308/015 | 308/015 | 308/015 | 308/015 | 308/015 | 308/015 |
| Float Chamber Cover complete | — | — | — | — | — | — |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | 308/022 | 308/022 | 308/022 | 308/022 | 308/022 | 308/022 |
| Float Needle | 308/025 | 308/025 | 308/114 | 308/114 | 308/114 | 308/114 |
| Float and Needle Combined (Top Feed) | — | — | — | — | — | — |
| Needle Seating | 308/117 | 308/027 | 308/027 | 308/027 | 308/027 | 308/027 |
| Banjo | — | 308/118 | 308/029 | 308/029 | 308/029 | 308/029 |
| Needle Seating and Banjo Washer | 23/110 | 23/110 | 23/110 | 23/110 | 23/110 | 23/110 |
| Banjo Nut | — | 308/030 | 308/030 | 308/030 | 308/030 | 308/030 |
| Tickler | — | — | — | — | — | — |
| Tickler Bush | — | — | — | — | — | — |
| Tickler Spring | — | — | — | — | — | — |
| Throttle Lever complete | — | — | — | — | — | — |
| Throttle Lever complete | 355/1 | 355/1 | 355/5 | 355/2 | 355/5 | 355/5 |
| Clutch Lever complete | — | — | — | — | — | — |
| Throttle Cable complete | — | — | — | — | — | — |
| Decompressor Cable complete | — | — | — | — | — | — |
| Flange Stud Nut Washer | 308/124 | 308/124 | 308/124 | 308/124 | 308/124 | 308/124 |
| Throttle Operating Rod and Wire | — | — | — | — | — | — |
| Float Chamber Seal Washer | — | — | — | — | — | — |
| Elbow and Strangler Valve Assembly | — | — | — | — | — | 178/112 |
| Throttle Valve Plunger Rod | — | — | — | — | — | — |
| Adjusting Nut for Ditto | — | — | — | — | — | — |
| Adjusting Nut Cotter Pin | — | — | — | — | — | — |

| Component | 308/50 | 308/51 | 308/52 | 308/53 | 308/54 |
|---|---------|---------|---------|---------|---------|
| Carburettor complete, less Controls & Cables .. | 308/50 | 308/51 | 308/52 | 308/53 | 308/54 |
| Mixing Chamber Body | 308/135 | 308/135 | 308/144 | 308/144 | 308/087 |
| Mixing Chamber Top Cover | 308/122 | 308/122 | 308/145 | 308/145 | 308/040 |
| Cable Adjuster | 308/041 | 308/041 | 308/091 | 308/091 | 308/091 |
| Cable Adjuster Locknut | 308/042 | 308/042 | 308/042 | 308/042 | 308/042 |
| Throttle Valve | 308/125 | 308/125 | 308/037 | 308/037 | 308/037 |
| Throttle Valve Spring | 308/038 | 308/038 | 308/038 | 308/038 | 308/038 |
| Throttle Valve Locating Screw | 308/039 | 308/039 | 308/039 | 308/039 | 308/039 |
| Throttle Needle | 308/043 | 308/043 | 308/043 | 308/043 | 308/043 |
| Throttle Needle Clip | 308/044 | 308/044 | 308/044 | 308/044 | 308/044 |
| Needle Jet | 308/045 | 308/045 | 308/045 | 308/147 | 308/147 |
| Main Jet | 124/026 | 124/026 | 124/026 | 124/026 | 124/026 |
| Needle Jet Cover | 308/068 | 308/068 | 308/068 | 308/148 | 308/148 |
| Washer for Needle Jet Cover | 38/023 | 38/023 | 38/023 | 38/023 | 38/023 |
| Outlet Clip | 308/121 | 308/121 | 308/121 | 308/121 | 308/121 |
| Outlet Clip Pin | 335/051 | 335/051 | 335/051 | 335/051 | 335/051 |
| Outlet Clip Pin Nut | 335/052 | 335/052 | 335/052 | 335/052 | 335/052 |
| Strangler Gauze Air Intake complete | 310/1 | 310/1 | 310/1 | 310/1 | 310/1 |
| Cable Nipple | 308/051 | 308/051 | 308/051 | 308/051 | 308/051 |
| Float Chamber Body | 308/136 | 308/136 | 308/088 | 308/088 | 308/088 |
| Float Chamber Body Flange Studs | 308/032 | 308/032 | 308/032 | 308/032 | 308/032 |
| Flange Stud Nut | 308/123 | 308/123 | 308/123 | 308/123 | 308/123 |
| Flange Washer | 308/094 | 308/094 | 308/094 | 308/094 | 308/094 |
| Filter Gauze | — | — | — | — | — |
| Float Chamber Cover complete | 308/015 | 308/015 | 308/089 | 308/089 | 308/089 |
| Float Chamber Cover Joint Washer | 308/066 | 308/066 | 308/066 | 308/066 | 308/066 |
| Cover Securing Screw | 308/018 | 308/018 | 308/018 | 308/018 | 308/018 |
| Float | 308/022 | 308/022 | — | — | — |
| Float Needle | 308/114 | 308/114 | — | — | — |
| Float and Needle Combined (Top Feed) | — | — | 308/019 | 308/019 | 308/019 |
| Needle Seating | 308/027 | 308/027 | — | — | — |
| Banjo | 308/029 | 308/029 | — | — | — |
| Needle Seating and Banjo Washer | 23/110 | 23/110 | — | — | — |
| Banjo Nut | 308/030 | 308/030 | — | — | — |
| Tickler | — | — | — | — | — |
| Tickler Bush | — | — | — | — | — |
| Tickler Spring | — | — | — | — | — |
| Throttle Lever complete | — | 355/2 | — | — | — |
| Throttle Lever complete | — | — | — | — | — |
| Clutch Lever complete | — | — | — | — | — |
| Throttle Cable complete | — | — | — | — | — |
| Decompressor Cable complete | — | — | — | — | — |
| Flange Stud Nut Washer | 308/124 | 308/124 | 308/124 | 308/124 | 308/124 |
| Throttle Operating Rod and Wire | — | — | 308/093 | 308/093 | 308/093 |
| Float Chamber Seal Washer | 308/133 | 308/133 | 308/133 | 308/133 | 308/133 |
| Petrol Filter | 308/137 | 308/137 | — | — | — |
| Outlet Clip | — | — | 360/024 | 360/024 | 360/024 |
| Adjusting Nut for Ditto | — | — | — | — | — |
| Adjusting Nut Cotter Pin | — | — | — | — | — |



LIST No. 621/2.

SETTINGS LIST.

| Engine | Carb. Type No. | Internal Bore | Jet Size | Throttle Valve | Throttle Needle Position | Needle Jet |
|--------------------------------------|----------------|------------------|----------|---------------------|--------------------------|------------|
| BANTAMOTA | 308/15 | .39" | 27 | No. 2 | 3 | -0745 |
| BERINI | 308/1 | .39" | 32 | No. 4 | 3 | -0745 |
| BUSY BEE | 308/2 | .312 | 27 | No. 2 | 3 | -078 |
| CYCLAID | 308/5 | .39" | 25 | No. 2 | 3 | -078 |
| CYCLEMASTER | 308/11 | .39" | 30 | No. 2 | 3 | -0745 |
| CYCLEMASTER | 308/11 | .39" | 35 | No. 2 | 3 | -0745 |
| CYMOTA | 308/12 | .312 | 25 | No. 2 | 1 | -078 |
| DIESELLA | 308/15 | .39" | 32 | No. 2 | 3 | -078 |
| J.A.P., MODEL "O" .. | 308/2 | .312 | 27 | No. 2 | 3 | -078 |
| J.A.P., "MINIATURE" | 308/17 | .312 | 25 | No. 2 | 3 | -078 |
| J.A.P., MODEL "O" .. | 308/28 | .312 | 25 | No. 2 | 3 | -078 |
| KOLBERG CASPARY .. | 308/20 | 10.5 mm. | 32 | No. 2 | 3 | -078 |
| KOLBERG CASPARY (MOTOR SAW) | 308/36 | 10.5 mm. | 32 | No. 2 | 3 | -078 |
| KOLBERG CASPARY .. | 308/21 | .39" | 25 | No. 4 | 3 | -0745 |
| MILLER | 308/23 | .39" | 30 | No. 2 | 3 | -0745 |
| MOCYC | 308/16 | .39" | 27 | No. 2 | 5 | -078 |
| MOTOMITE | 308/10 | .39" | 27 | No. 2 | 3 | -078 |
| OUTBOARD MOTORS .. | 308/32 | $\frac{5}{16}$ " | 40 | No. 3 | 4 | -078 |
| OUTBOARD MOTORS .. | 308/39 | $\frac{5}{16}$ " | 40 | No. 3 | 4 | -078 |
| TEAGLE | 308/31 | .39" | 25 | No. 3 | 3 | -0745 |
| TEAGLE (HEDGE CUTTER) | 308/43 | .39" | 25 | No. 3 | 3 | -0745 |
| TEAGLE (CYCLE MOTOR) | 308/44 | .39" | 25 | No. 3 | 3 | -0745 |
| J.A.P., MODEL "80" .. | 308/35 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| J.A.P. (CLIFFORD AERO) | 308/34 | 12 mm. | 45 | No. 1 | 3 | -0745 |
| J.A.P., 34 cc. | 308/42 | .312" | 20 | No. 2 | 3 | -0745 |
| J.A.P. (HALEY) | 308/46 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| J.A.P., 80 c.c. | 308/47 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| J.A.P., 80 c.c. | 308/48 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| J.A.P., 80 c.c. | 308/49 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| DANIEL MECH. SAW, J.A.P., 80 c.c. | 308/50 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| ACROW LTD., J.A.P., 80 c.c. | 308/51 | 12 mm. | 35 | No. 1 $\frac{1}{2}$ | 3 | -0745 |
| KOLBERG CASPARY- JO-BU. SAW | 308/52 | 12 mm. | 35 | No. 1 | 3 | -078 |
| KOLBERG CASPARY- JO-BU. SAW | 308/53 | 12 mm. | 35 | No. 1 | 3 | -078 |

GUARANTEE.—The Company take all possible reasonable care in the manufacture and the quality of their products. Purchasers are informed that, any part proved to be defective in manufacture or quality, and returned to the works within six months of its purchase new, will be replaced. The Company must respectfully point out however, that its responsibility and that of its agents, stockists and dealers, is limited to this Guarantee and that they cannot, under any circumstances, be held responsible for any loss or for any contingent or resulting liability arising through any defect. These conditions of sale and use also apply when the Company's products form part of the original equipment of machines purchased new.

500/9/64. W


Printed in England.

**AMAL LTD., HOLDFORD ROAD, WITTON,
BIRMINGHAM 6, ENGLAND**

Phone: Birmingham, BIRchfields 4571.
(P.B.X. 6 lines)

Telegrams: "AMALCARB, 'PHONE,
BIRMINGHAM."

IceniCAM Information Service

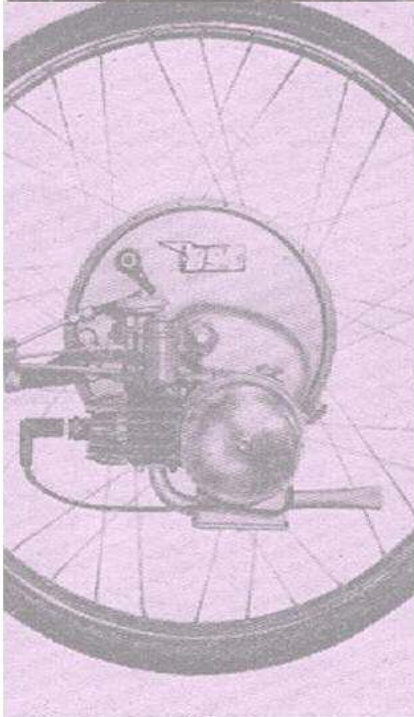

www.icenicam.org.uk