

RUNNING MAINTENANCE

The ignition generator requires very little maintenance and if the following notes are observed the life of the machine should prove trouble-free.

Check and if necessary re-adjust the contacts once every 5,000 miles.

Occasionally clean the contacts by inserting a dry smooth piece of paper between them and withdrawing while the contacts are in the closed position. Do not allow the engine to run with oil or petrol on the contacts or they will start to burn and blacken, and if they do, lightly polish with a piece of smooth emery cloth.

After every 5,000 miles it is necessary to re-lubricate the cam grease pad. This is done by removing the pad and squeezing and working into it a Summer grade of motor transmission grease which will very closely resemble that used at the factory. **Do not use ordinary grease.**

SERVICING

Checking ignition for spark

If the engine fails to start and there is indication that the ignition is at fault:—

- (A) Disconnect H.T. lead from the spark plug and hold it about $\frac{3}{16}$ " away from some unpainted portion of the frame or engine. Kick-start the engine in the usual way and a spark should jump this gap.
- (B) If no spark is visible:—
 1. Make sure H.T. lead is screwed right home into Coil box.
 2. Check H.T. lead for continuity.
 3. Check contact breaker points for correct gap setting and see that they are clean.
Check breaker point adjustment screws for tightness.
 4. By removing the flywheel examine the internal leads for breaks and see they are all properly secured. Make sure covered leads are not chafed and earthing.
 5. Make sure there are no metallic particles inside the unit.

Condenser

A weak or faulty condenser can be detected by badly burnt and pitted contacts or a continuous **intense blue** spark across the contacts when running. A very small white spark across the points when running is normal.

The condenser can be removed by undoing the screw securing it and releasing the lead from the terminal post.

Contact breaker points

Adjustment. Turn engine over until points are fully open.

Test with feeler gauge between "points". If the "points" require adjustment slacken the fixing screw and carefully move the fixed contact plate by means of a screwdriver until the correct gap is obtained. Tighten screw.

The breaker point setting should only be adjusted in the manner described and **at no time should the breaker arm be bent to provide adjustment.**

If the contact points need replacing both the fixed and movable points must be replaced at the same time.

Replacement of ignition and lighting coils

Removal. First release ignition coil primary leads, then with a gentle pull the coil can be withdrawn from the core. Considerable force may be necessary to remove L.T. coils from core as a fibre wedge is used to ensure a tight fit and a varnish adherent is also used to secure the lighting coils.

THIS IGNITION GENERATOR IS
FITTED AS STANDARD EQUIPMENT
TO THE

JAMES 150c.c. FLYING CADET

AND

FRANCIS-BARNETT 150c.c.

PLOVER 86

MAIN DETAILS

Wipac Type	Series 141
Engine cylinder	Single
Rotation	Clockwise
Flywheel weight	3 lbs. 13 ozs.
Flywheel diameter	5½"
Ignition	Direct from magneto
Lighting	6 volt A.C. 28.8 watts at 2,800 r.p.m.
H.T. lead	21" (5 mm.)
Breaker point setting	.018"
Flywheel extractor	S0073
Recommended spark plug	P60L

Flywheel

This flywheel is robustly constructed with the cam integral with the flywheel boss and it is unlikely to develop any faults in normal use. **A KEEPER RING IS NOT NECESSARY WHEN WITHDRAWING IT FROM THE STATOR PLATE.**


Removal. Remove the nut securing the flywheel to the shaft. If an extractor is not available and the flywheel cannot be easily withdrawn, grasp the flywheel firmly and while attempting to pull it off, tap the end of the crankshaft with a mallet or lead hammer, being careful during this operation not to damage the crankshaft. When replacing the flywheel make sure metallized dust or small steel items have not been attracted onto the magnets.



PARTS IN EXPLODED VIEW	COMPONENTS	SETS	UNITS
			S1032 Flywheel and Cam Unit
	S0052 Condenser Fixing Set	S1051 Condenser Set (includes S0052)	
	S0054 Breaker Point Fixing Set	S0577 Breaker Point Set	
	S1053 L.T. Coil Set		
	S0057 Core and Plate Assembly (includes S0055)		S1052 Stator Unit
	S1046 H.T. Coil Set	S1055 H.T., L.T. Coils and Core Unit	
	S0055 Grease Pad Set		
	S1054 L.T. Lead Set		
		S0716 H.T. Lead Wire Group (21")	
			00440 Sleeve
			2179 Grommet

BRITISH BUILT BY THE WIPAC GROUP

IceniCAM On-Line Library

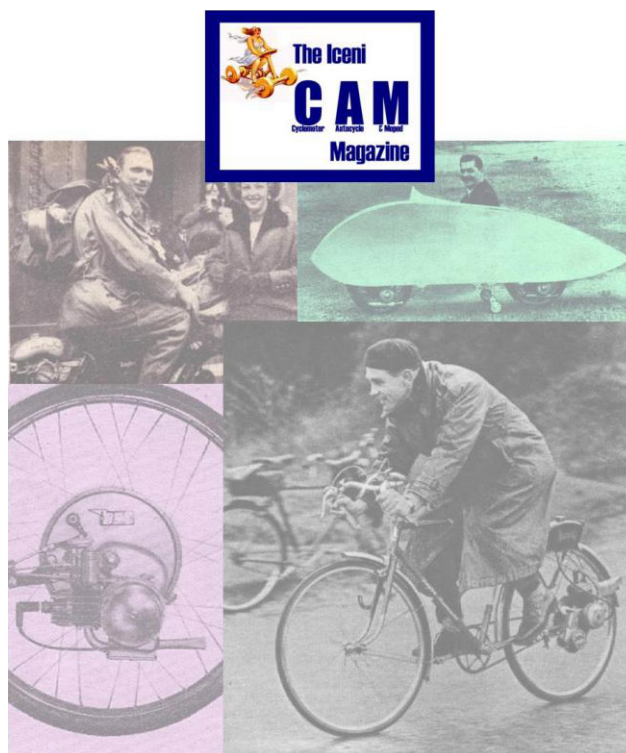

www.icenicam.org.uk